

88 5002 42

 
Night Stand

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home
Styles

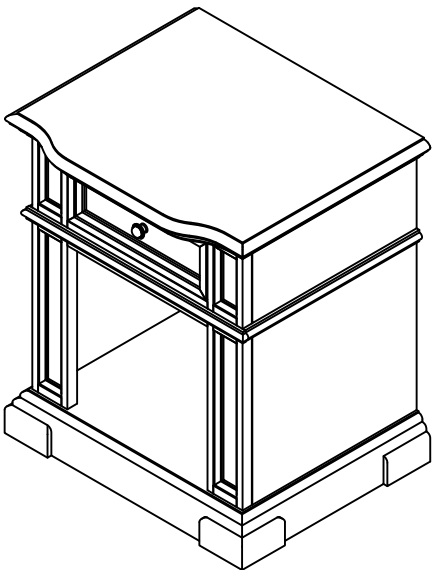

Part List

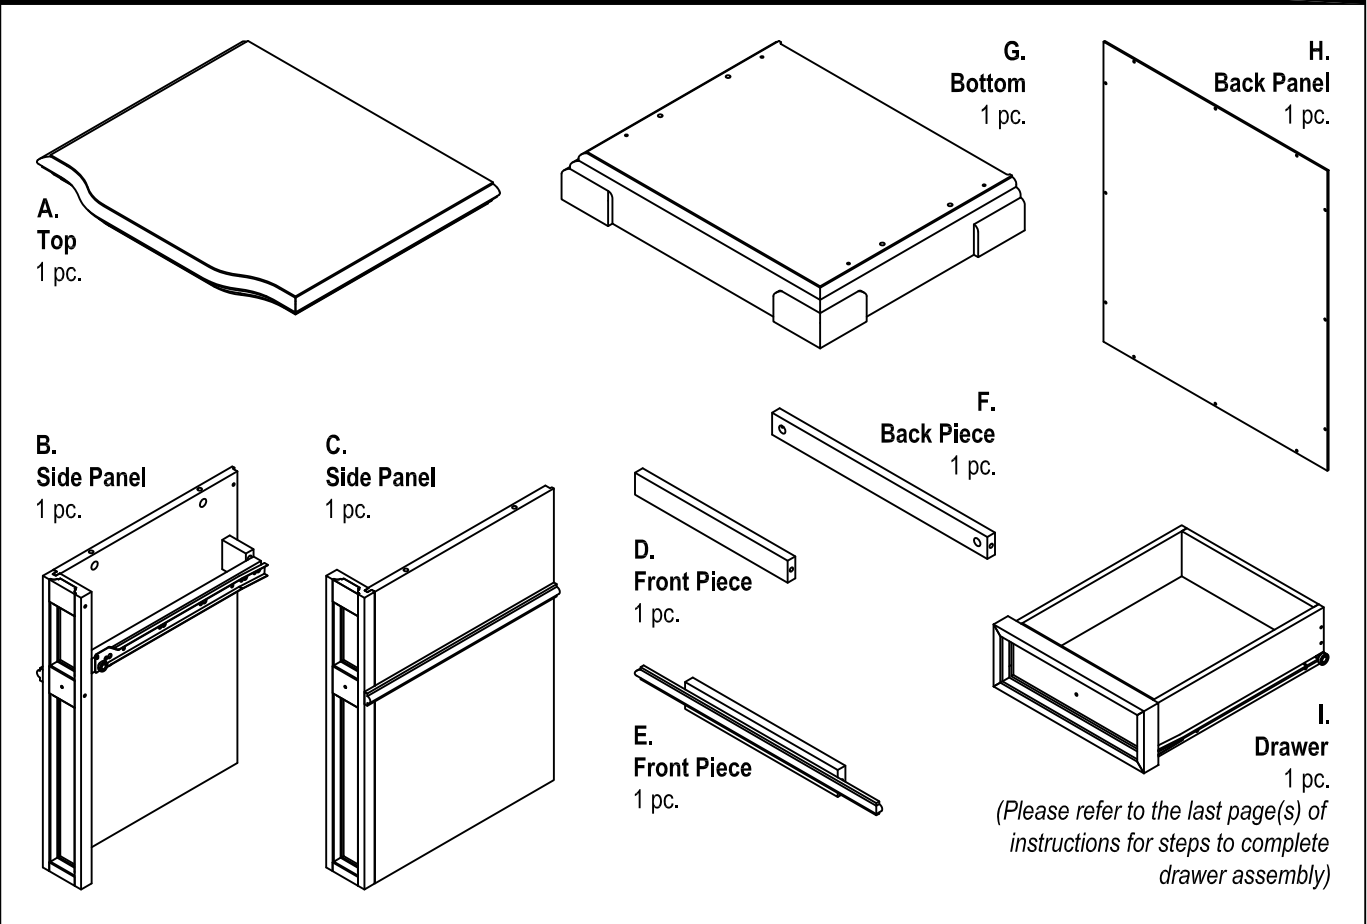 

Hardware List

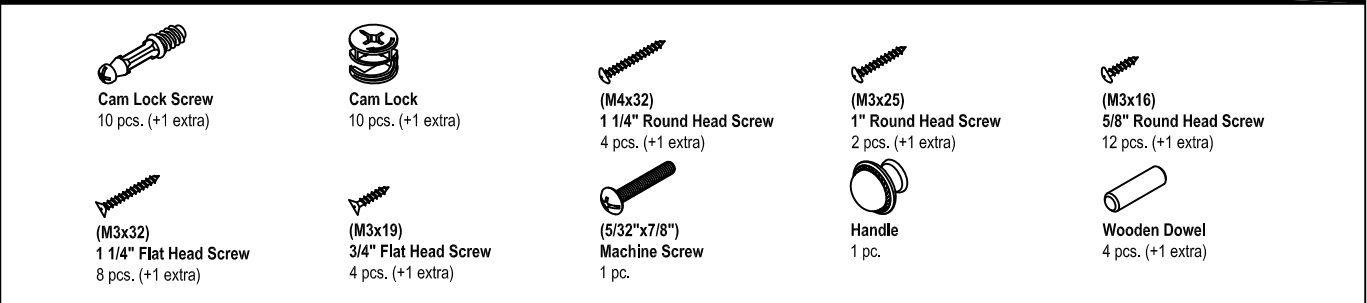 

Tools Required For Assembly : Phillips screwdriver

Tools Recommended For Assembly : Level

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

 
Assembly Instructions 2/6

IMPORTANT

- * Do not tighten up all the screws and bolts until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly. Use the included adjustable levellers to level.

STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Top (A) and Side Panels (B) and (C).

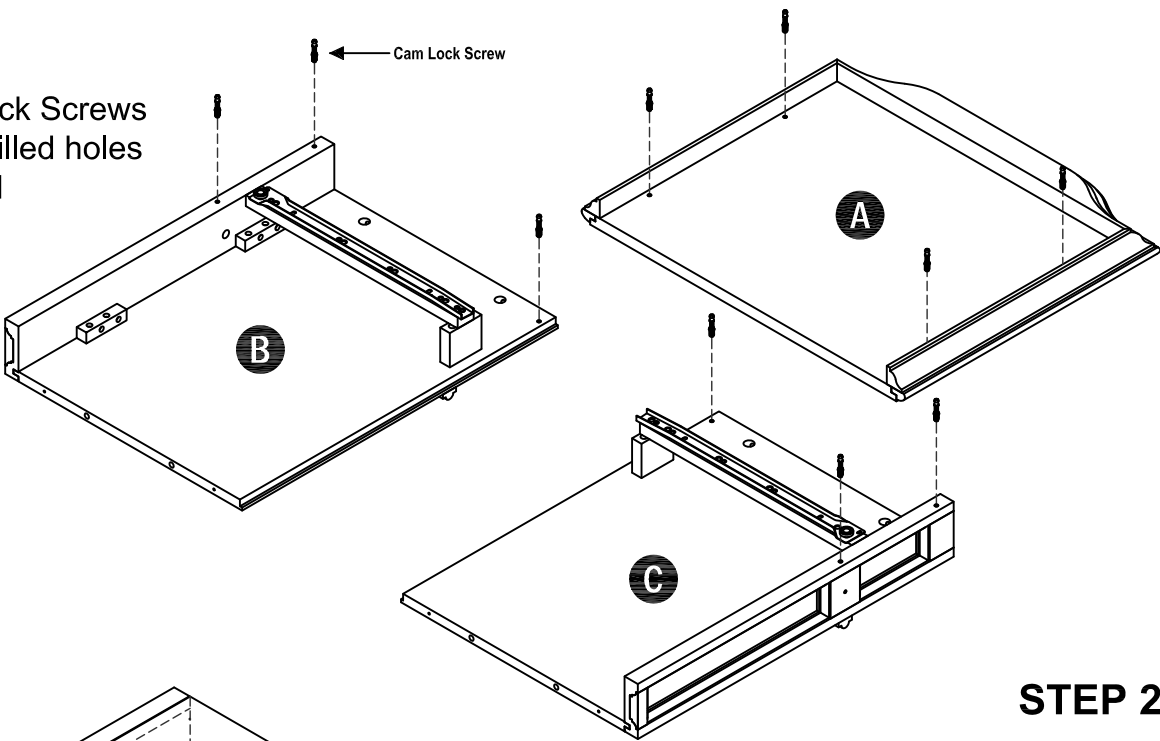

STEP 2

Attach Front Pieces (D) and (E) and Back Piece (F) to Side Panels (B) and (C) with Cam Locks and 1" Round Head Screws. (See Figure 1)


 
 
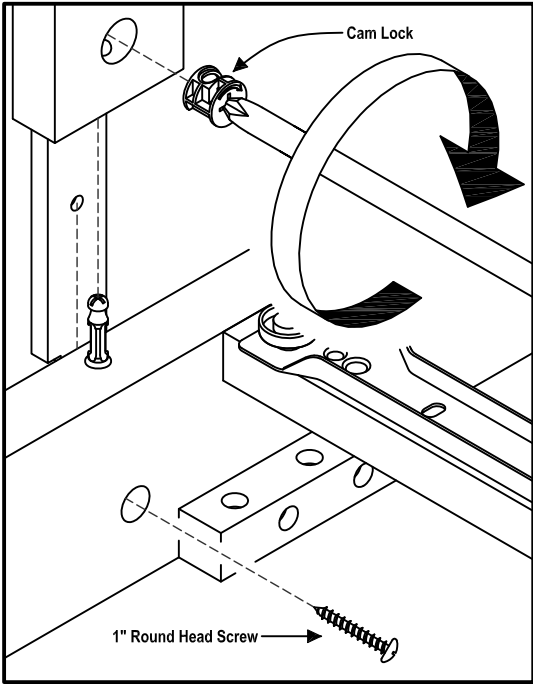 


Figure 1

STEP 3

 Attach Bottom (G) to unit with Wooden Dowels and 1 1/4" Round Head Screws.

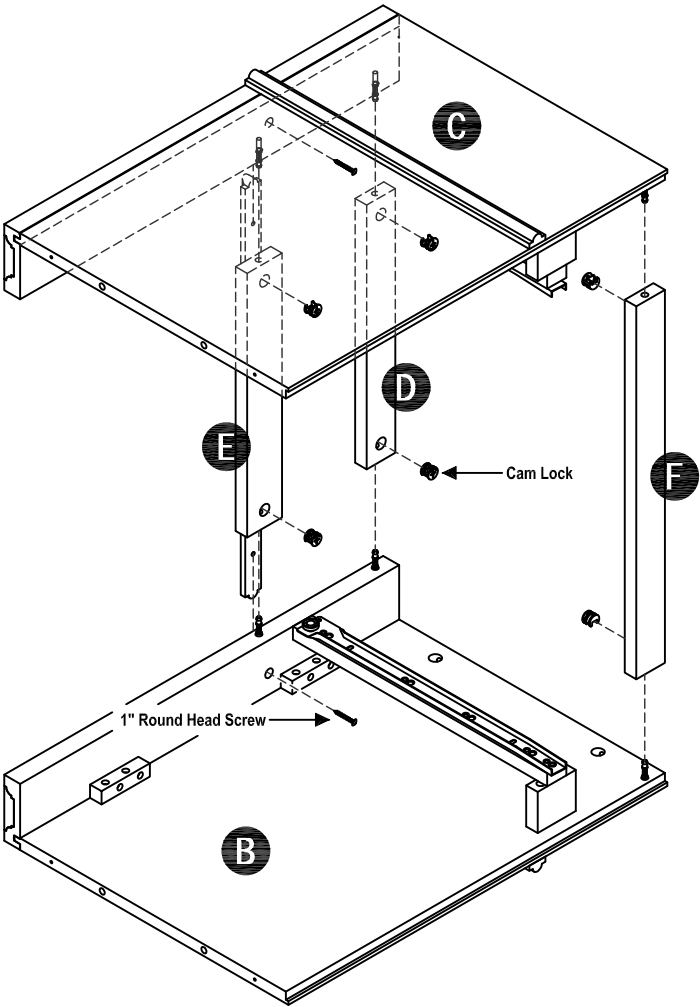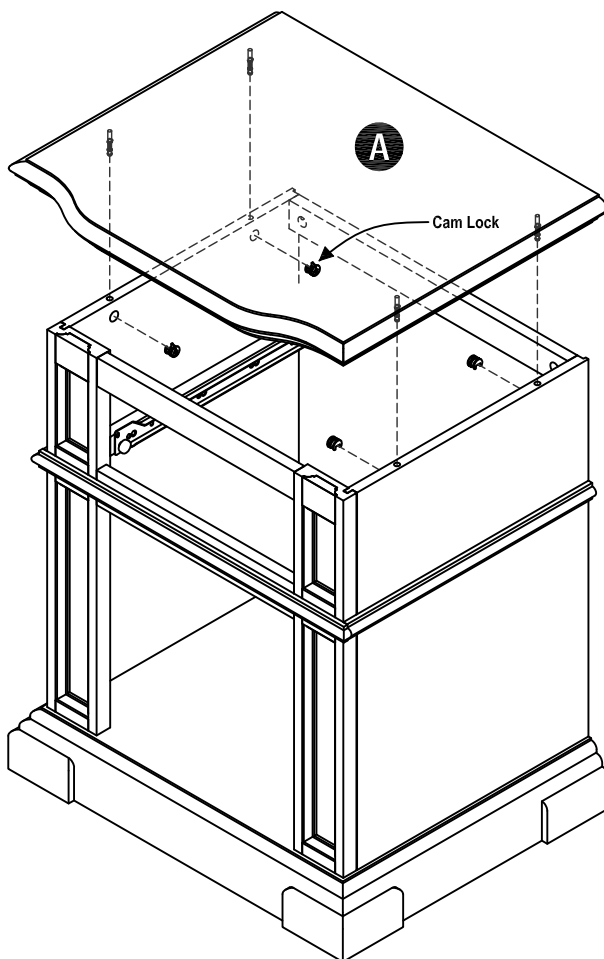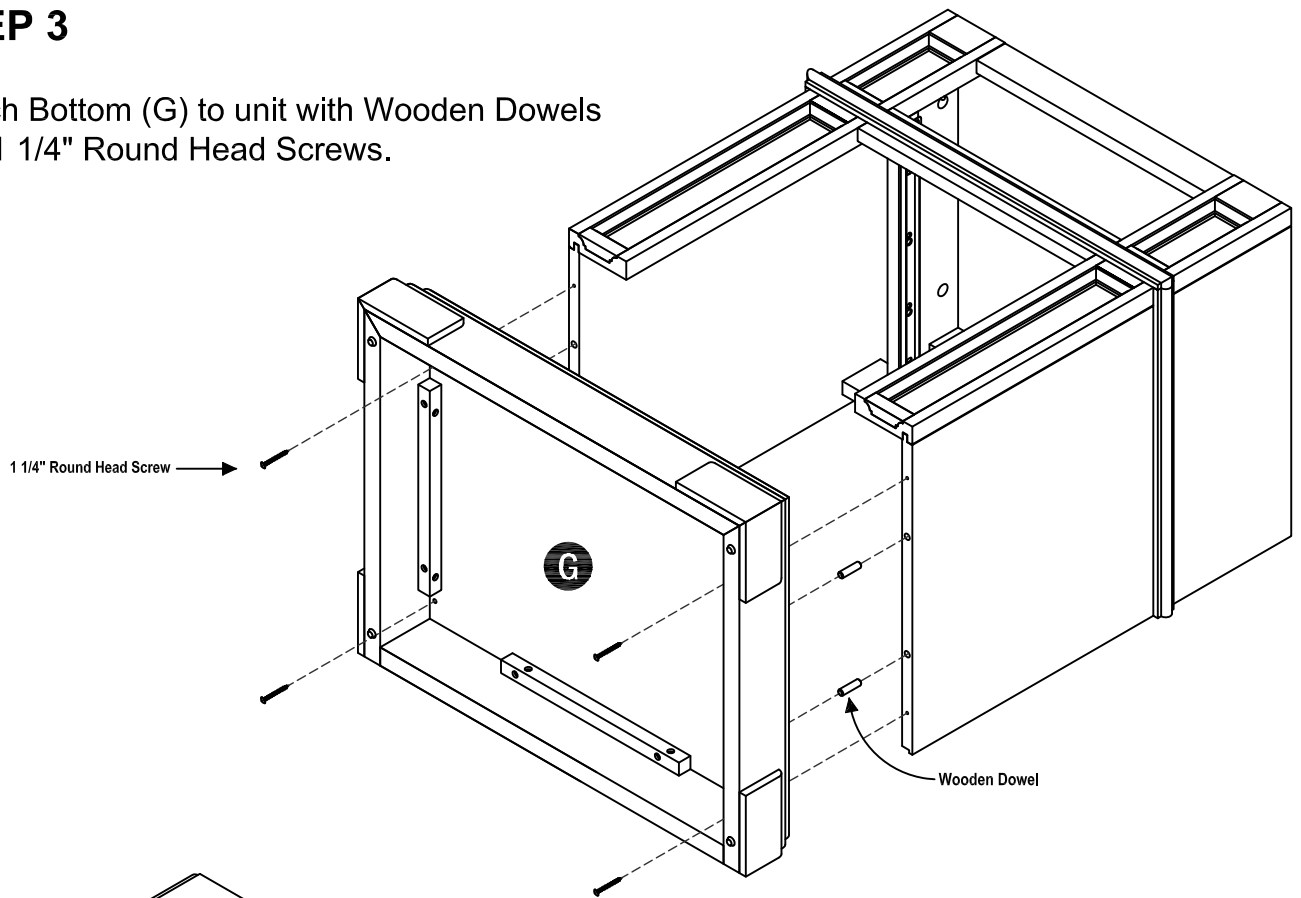

STEP 4

Attach Top (A) to unit with Cam Locks.

STEP 5

To level the unit, adjust the adjustable levelers on the bottom of the legs. (See Figure 2)

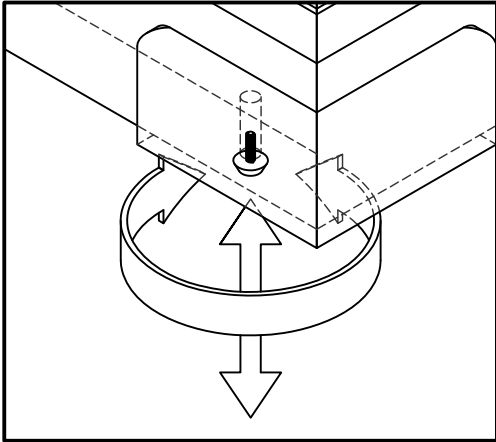 



Figure 2

5/8" Round Head Screw

STEP 6

Attach Back Panel (H) to unit with 5/8" Round Head Screws.

 Note: Please make sure unit is level before tightening these screws.

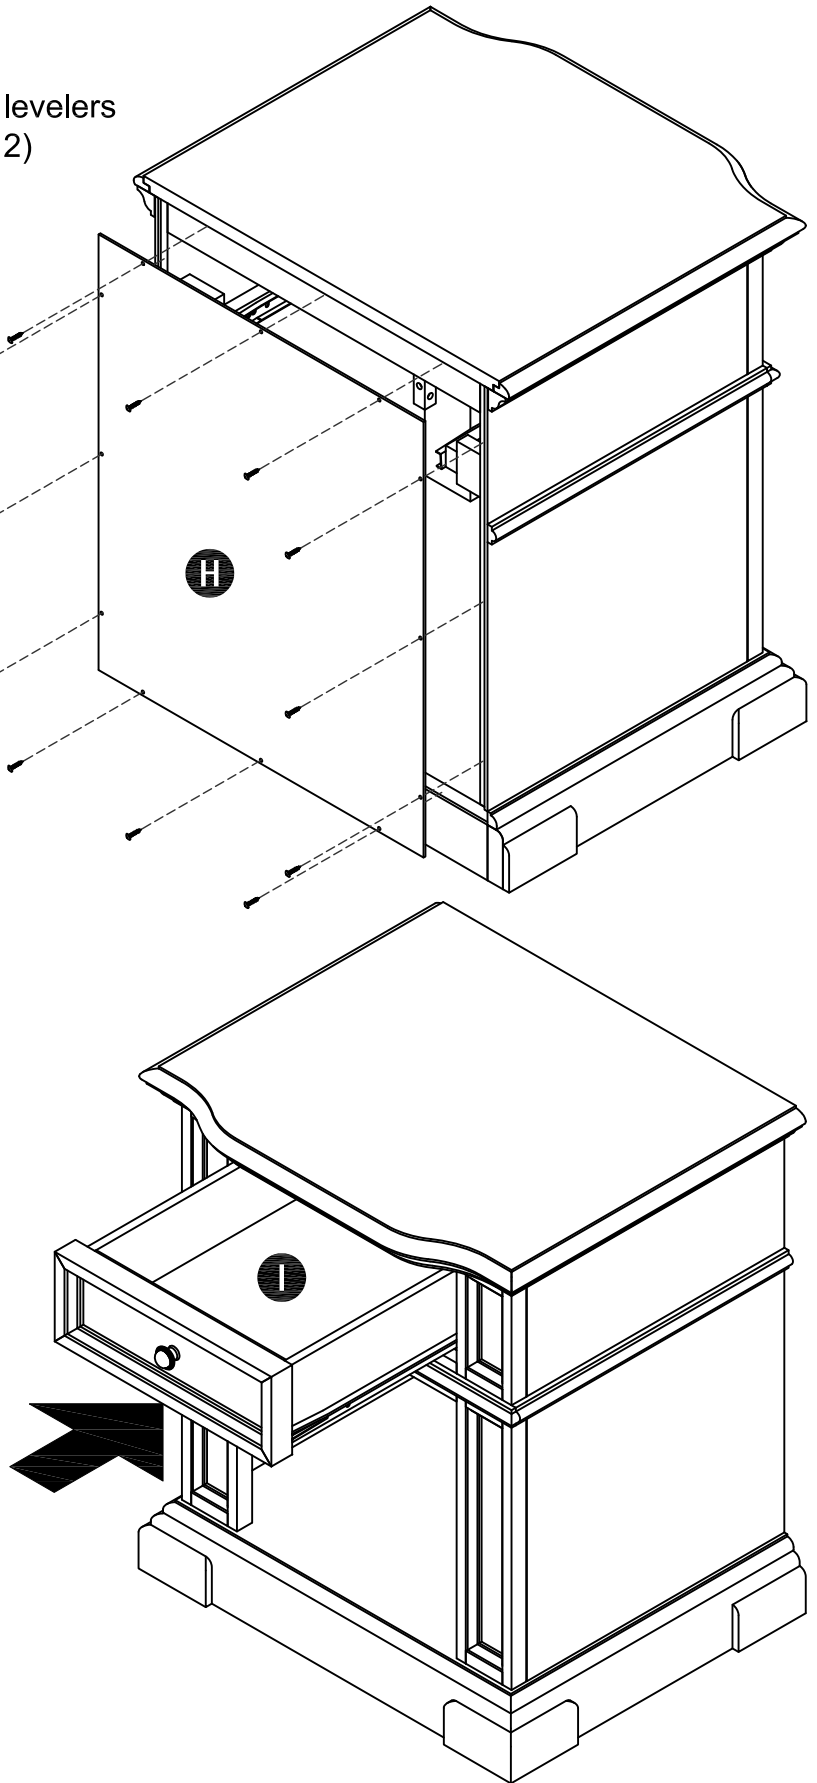



STEP 7

Slide Drawer (I) into place.

Note: Follow the steps on the next page to use 3/4" Flat Head Screws to complete drawer assembly.

STEP 8

  Loosen slightly the two screws pre-installed on the back of the drawer front.

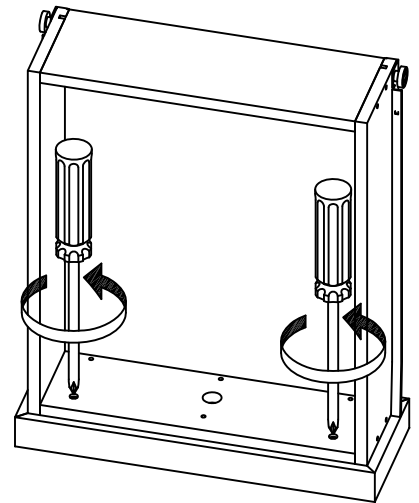
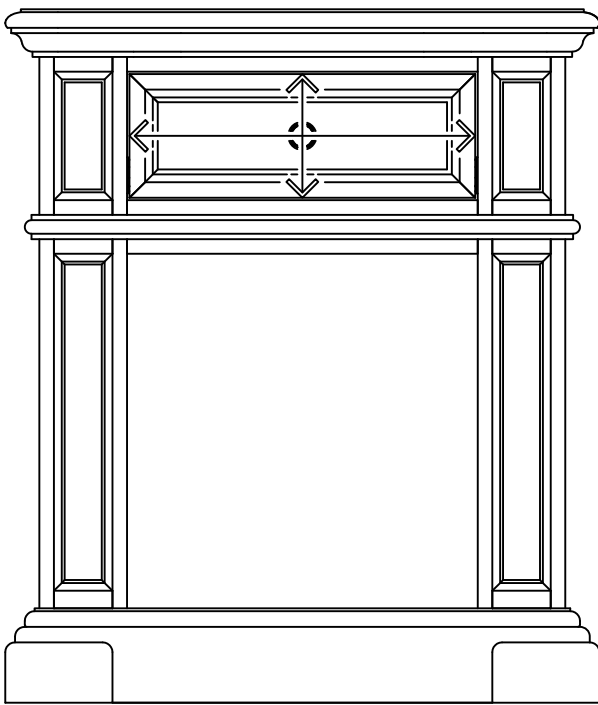


STEP 9

Insert the drawer into the main body, then adjust the drawer front panel left or right and up or down until the drawer gaps look proportional.


STEP 10

  Pull the drawer open slowly and re-tighten the screws from Step 8. Make sure the front panel do not move and lock the drawer front panel into position with 3/4" Flat Head Screws.

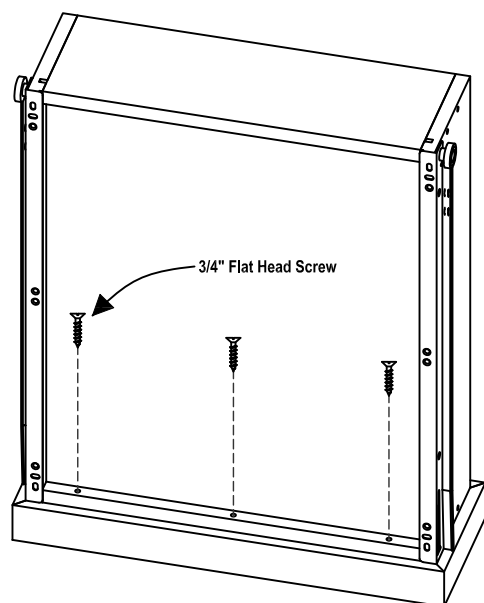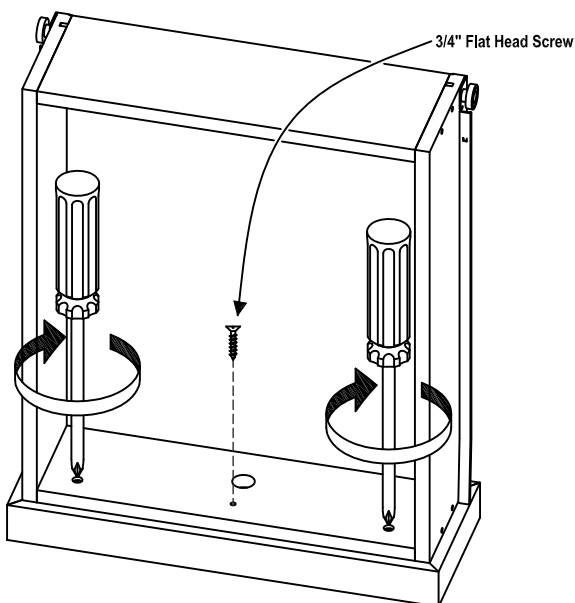


Note: These 3/4" Flat Head Screws on this page must be installed to complete the drawer assembly.

 Drawer (I)

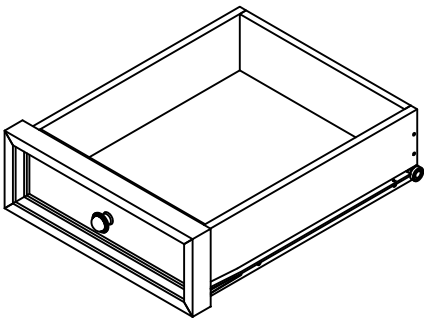

STEP 1


 
Attach Side Parts (I3) and (I4) to Back Part (I2) with 1 1/4" Flat Head Screws.

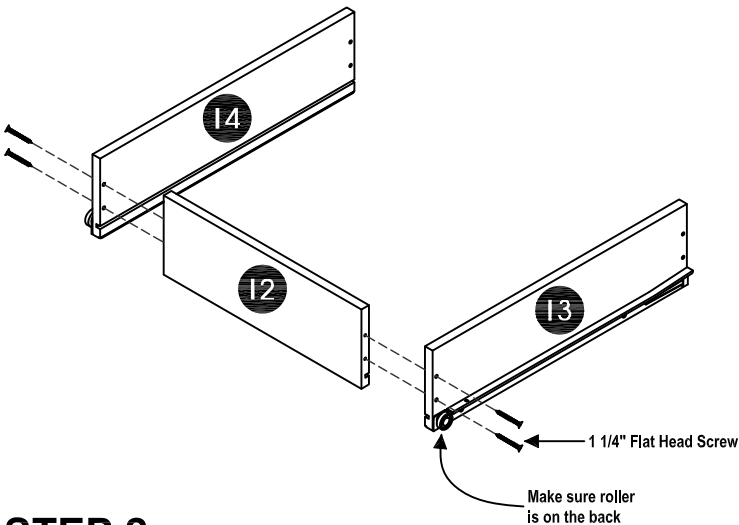

STEP 2

Insert Base Part (I5) into the groove.

  
Attach Front Part (I1) to unit with 1 1/4" Flat Head Screws.

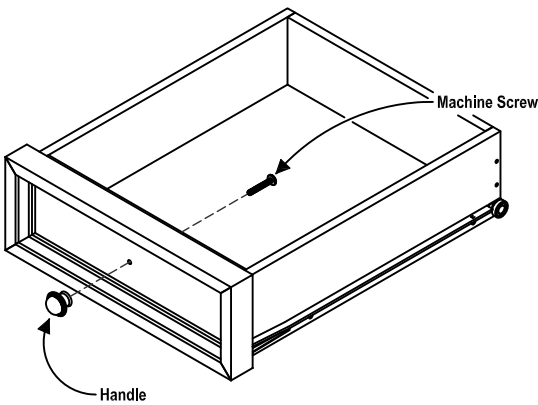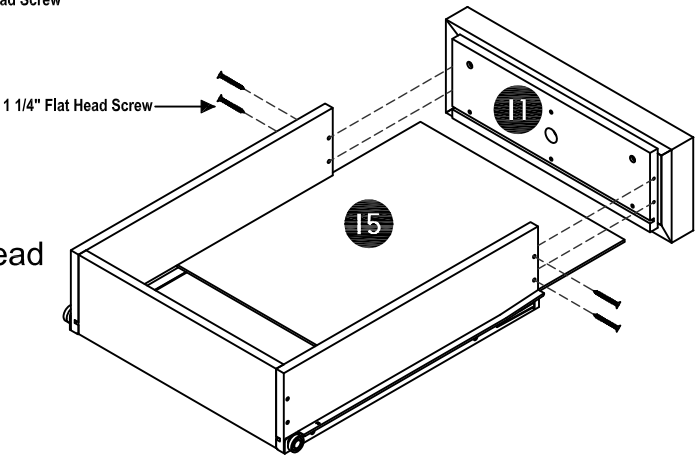


STEP 3

Attach Handle with Machine Screw.

 
Part List

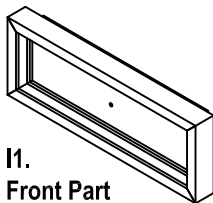


I1.
Front Part
1 pc.

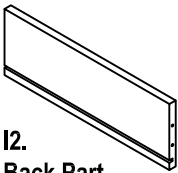 


I2.
Back Part
1 pc.

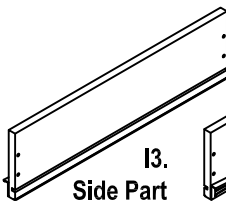 

I3.
Side Part
1 pc.

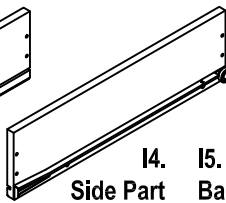 

I4.
Side Part
1 pc.

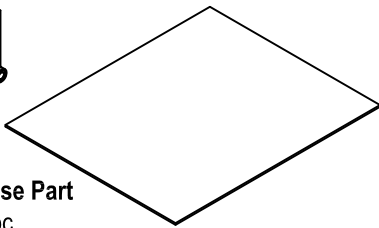 

I5.
Base Part
1 pc.

VERY IMPORTANT !!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES PART TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT WRITE DIRECTLY ON SURFACE.



PREVENT MARKING

DO NOT PLACE IN DIRECT SUNLIGHT.



PREVENT FADING

DO NOT USE COMMERCIAL WAXES AND POLISHES.



PREVENT YELLOWING

DO NOT PLACE HOT OBJECTS ON SURFACE.



PREVENT FINISH DAMAGE

DO NOT USE RUBBER BASED PLACE MATS.



PREVENT DISCOLORING

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer_service

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319