

 
# 88 5004 26

## Upholstered Bench


### IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occuring to the parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

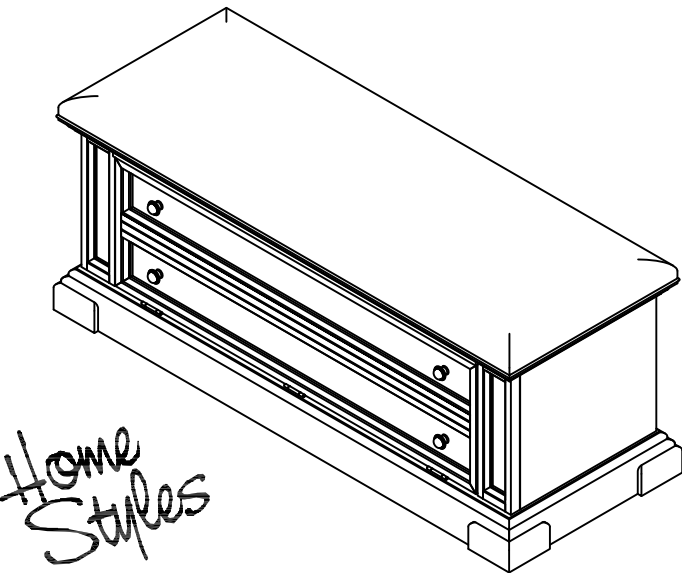

### Part List

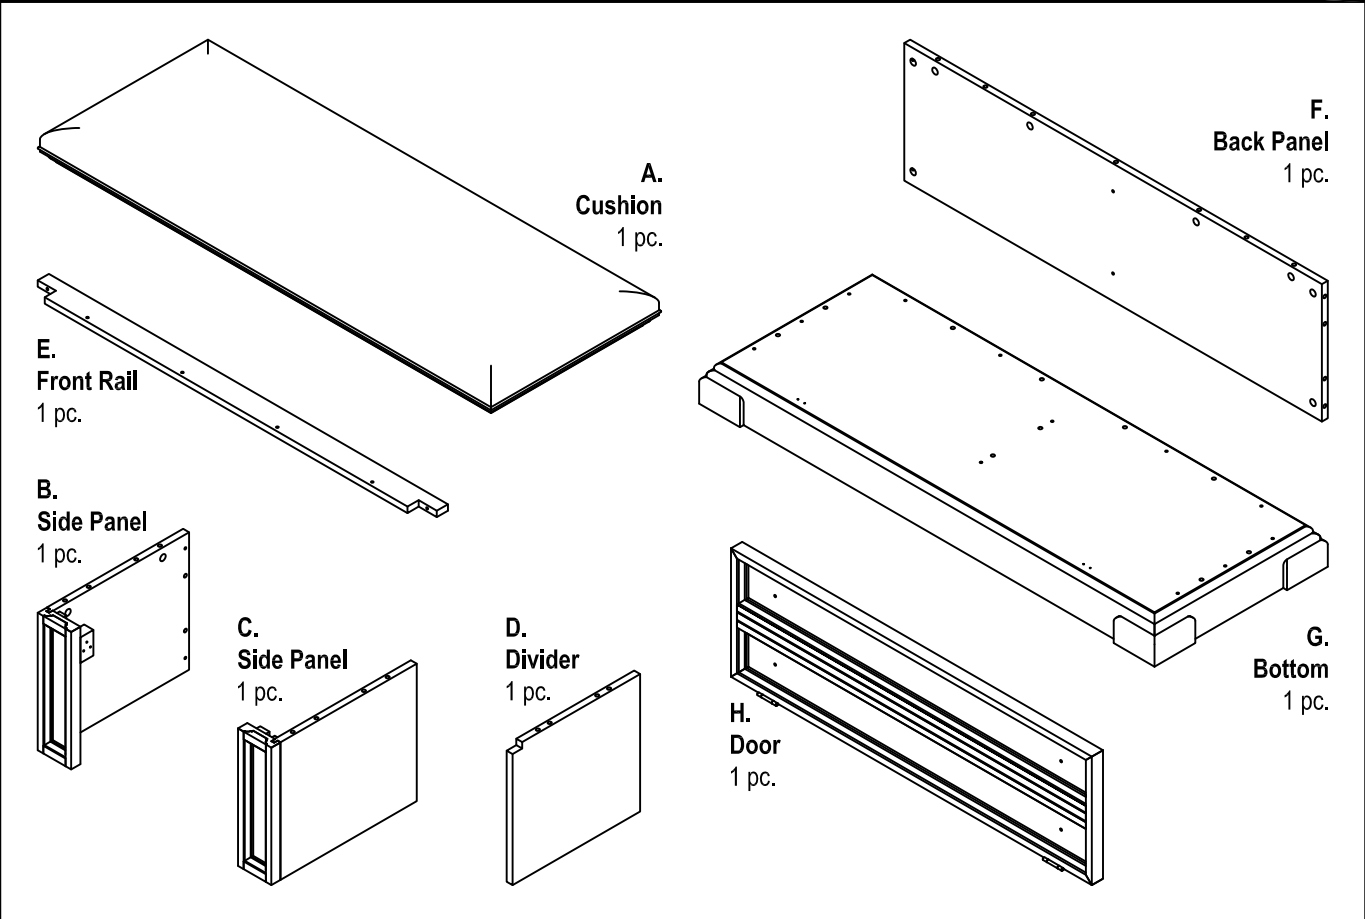 

### Hardware List

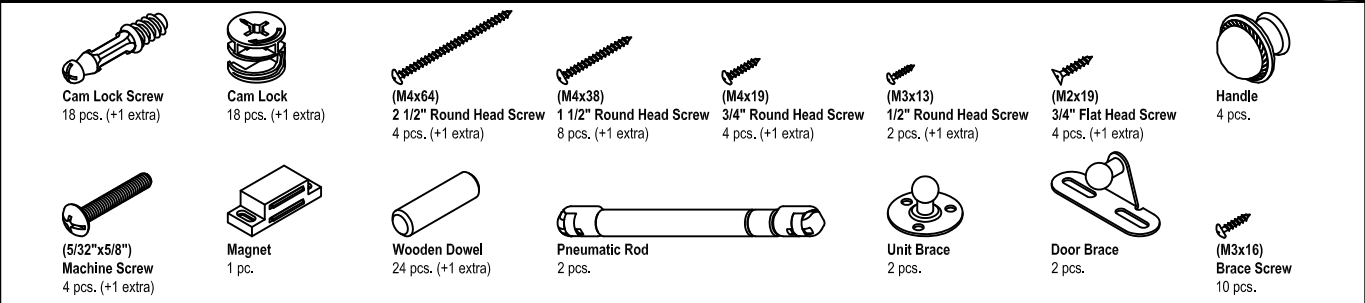 

Tools Required For Assembly : Phillips screwdriver

Tools Recommended For Assembly : Level


**Home Styles Consumer Assistance:** [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319

### IMPORTANT

 - \* Do not tighten up all the screws until each part is properly assembled.
- \* Use a soft cloth between these parts and the floor.
- \* After assembly, item must be level to work properly. Use the included adjustable levellers to level.

## STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Cushion (A), Side Panels (B) and (C), Back Panel (F) and Bottom (G).

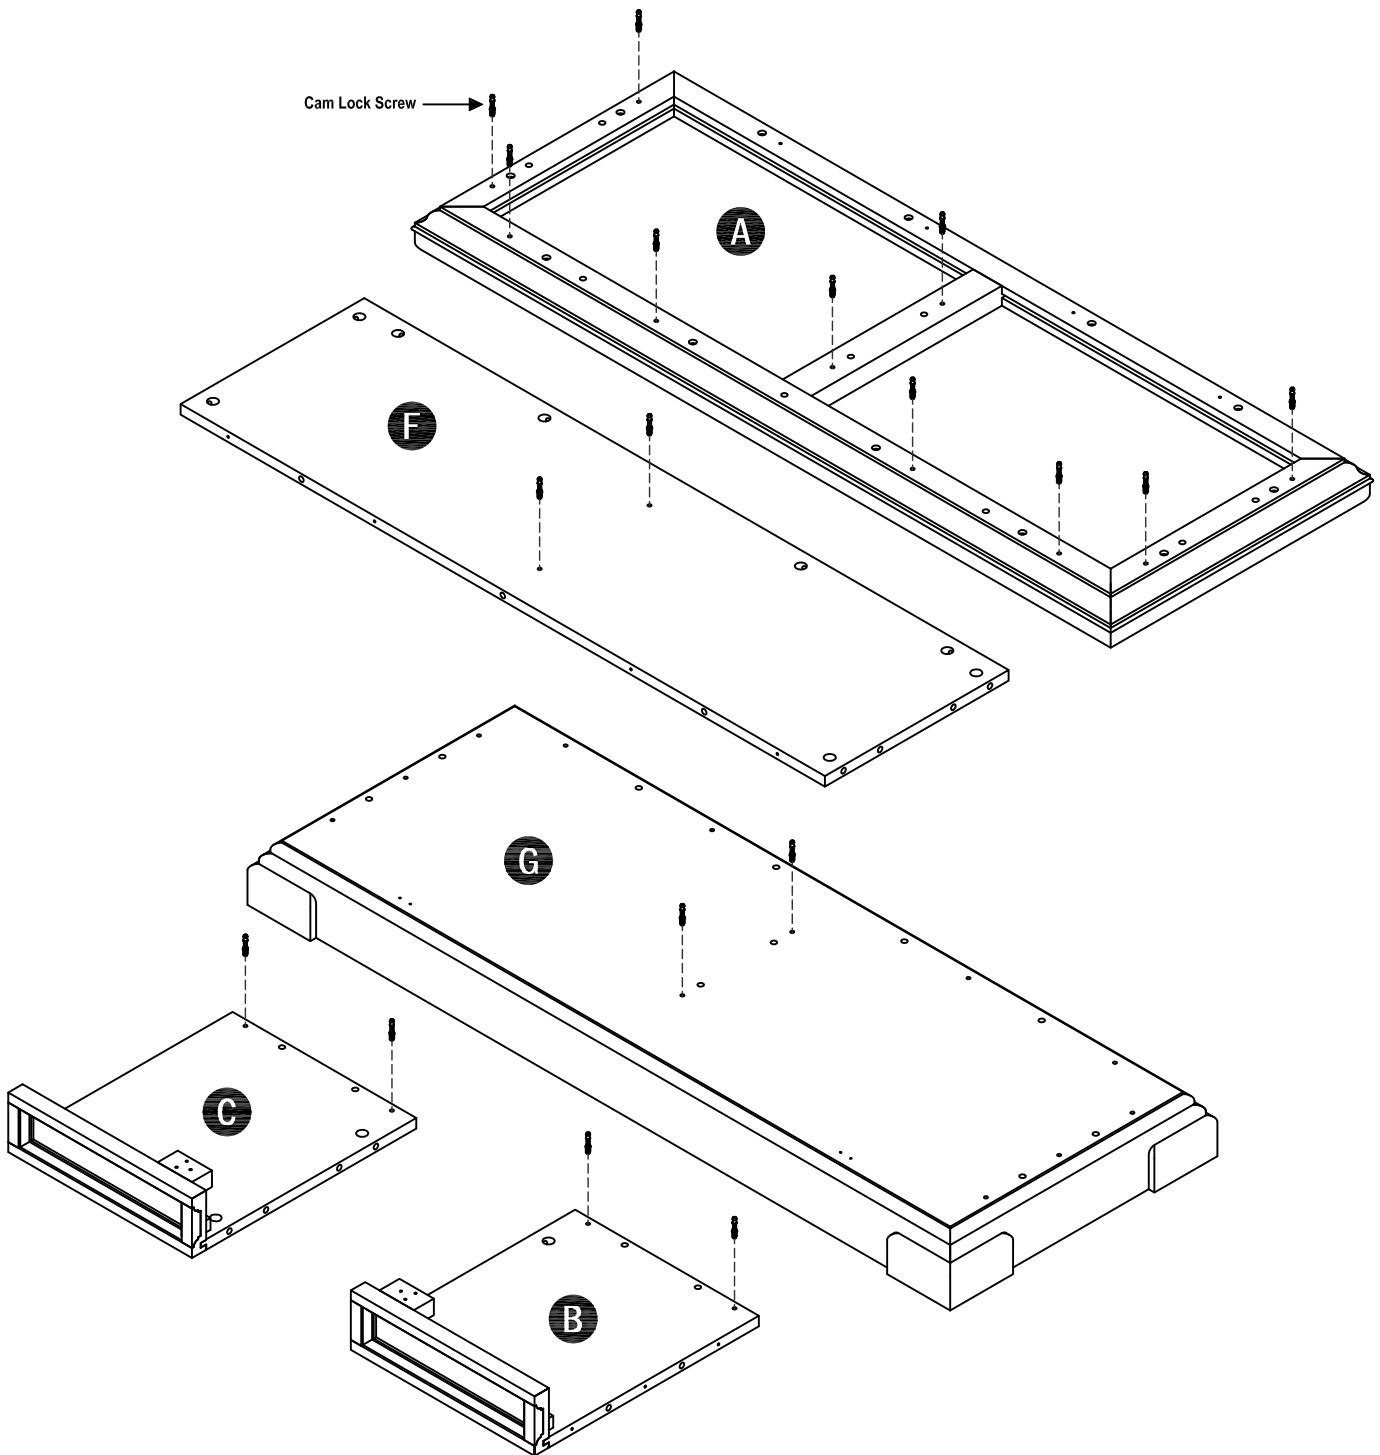

STEP 2

Attach Magnet to Front Rail (E) with 1/2" Round Head Screws. (See Figure 1)

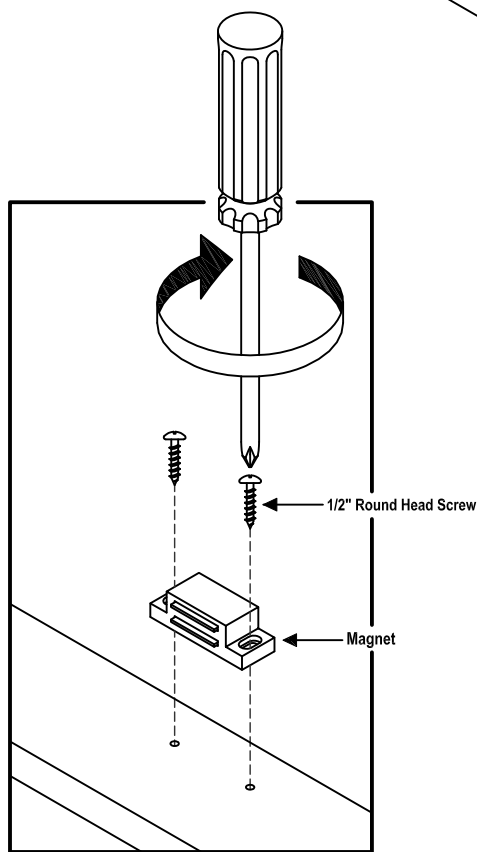 
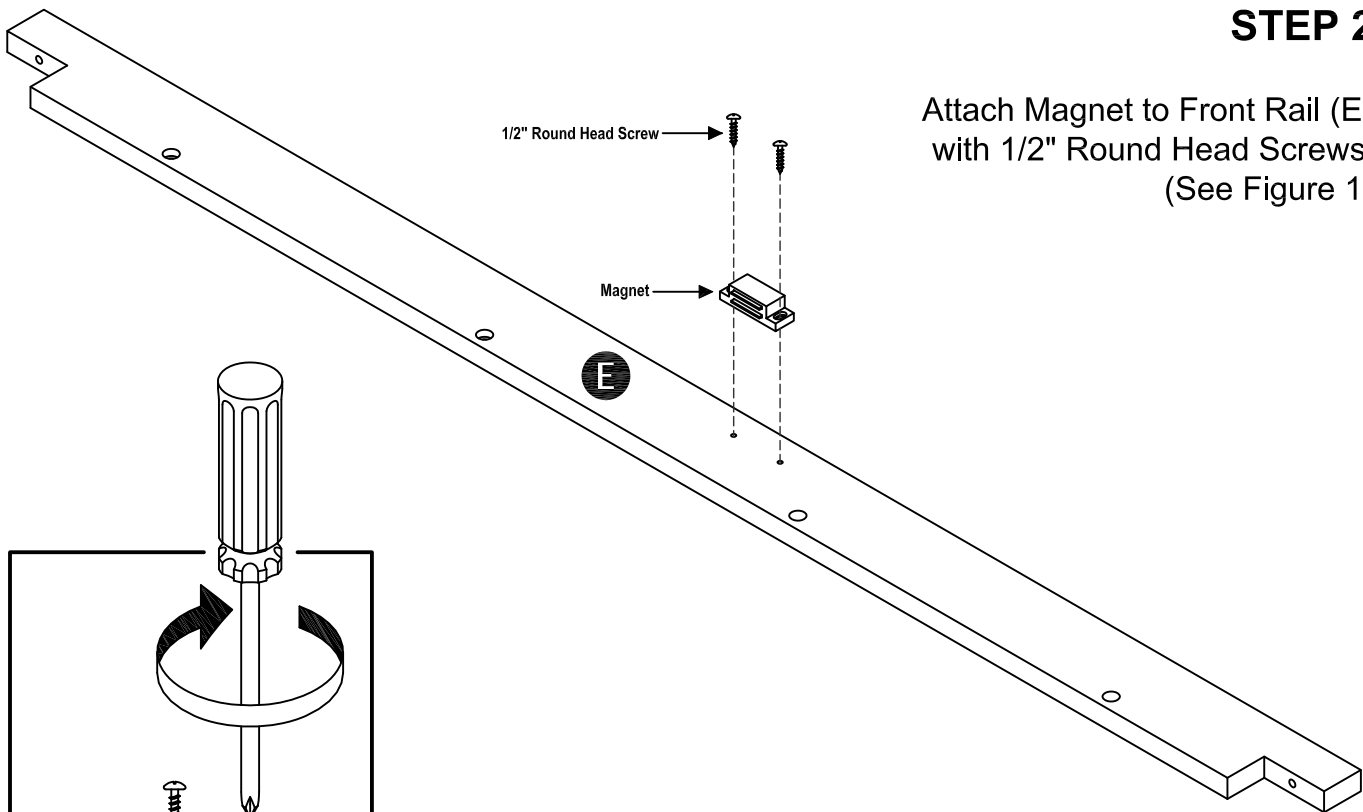 


Figure 1

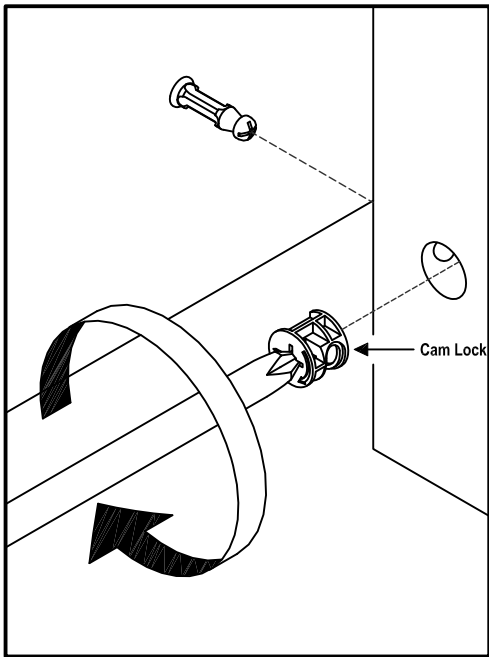 
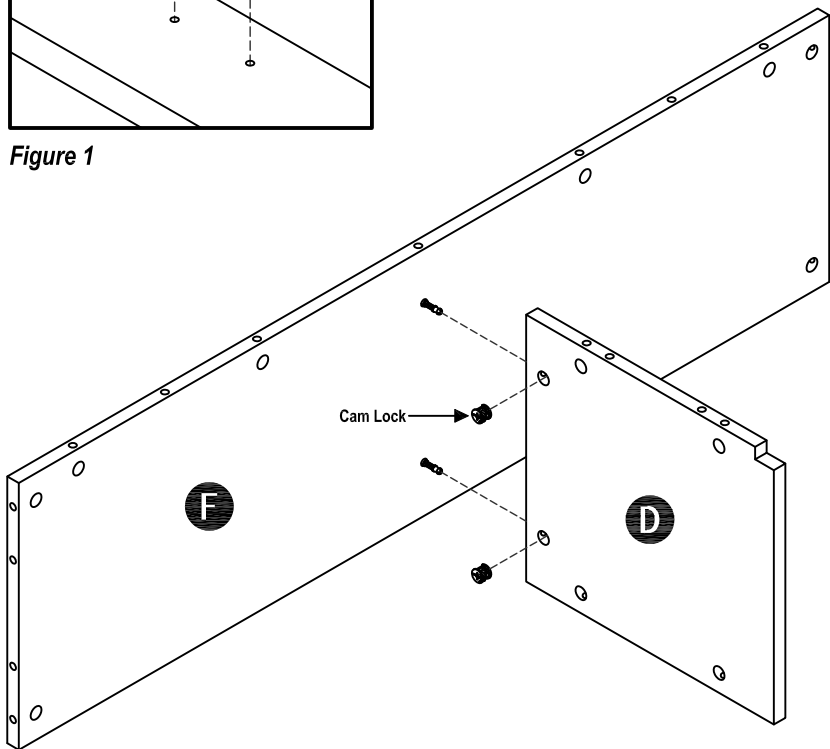 


Figure 2


STEP 3

Attach Divider (D) to Back Panel (F) with Cam Locks. (See Figure 2)

## STEP 4

 Attach Side Panels (B) and (C) to unit with Wooden Dowels and Cam Locks.

Attach Front Panel (E) to Side Panels (B) and (C) with 1 1/2" Round Head Screws.

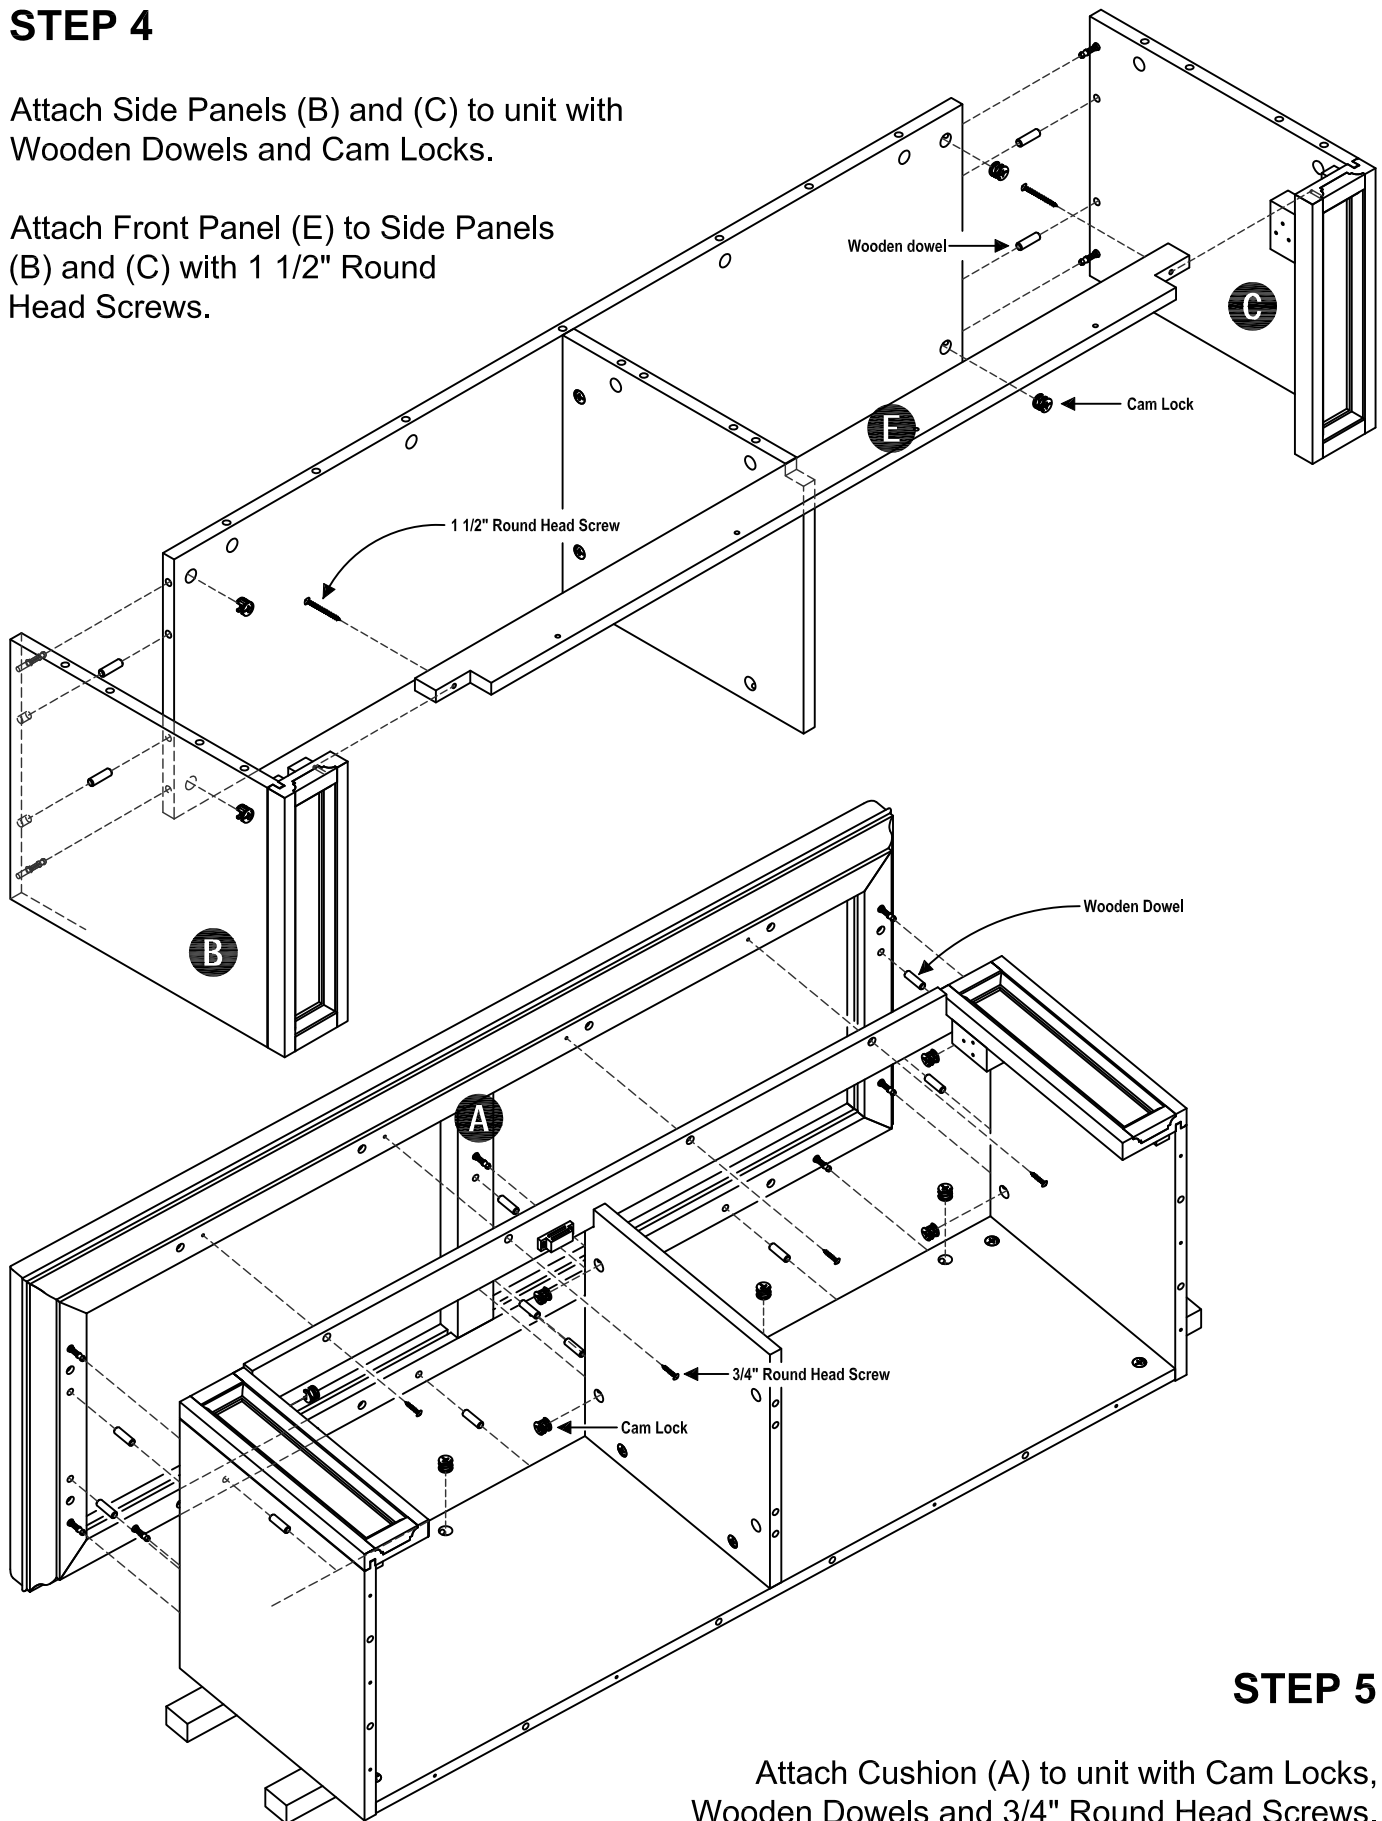


## STEP 5

Attach Cushion (A) to unit with Cam Locks, Wooden Dowels and 3/4" Round Head Screws.


STEP 6

 Attach Bottom (G) to unit with Cam Locks, Wooden Dowels, 2 1/2" and 1 1/2" Round Head Screws.

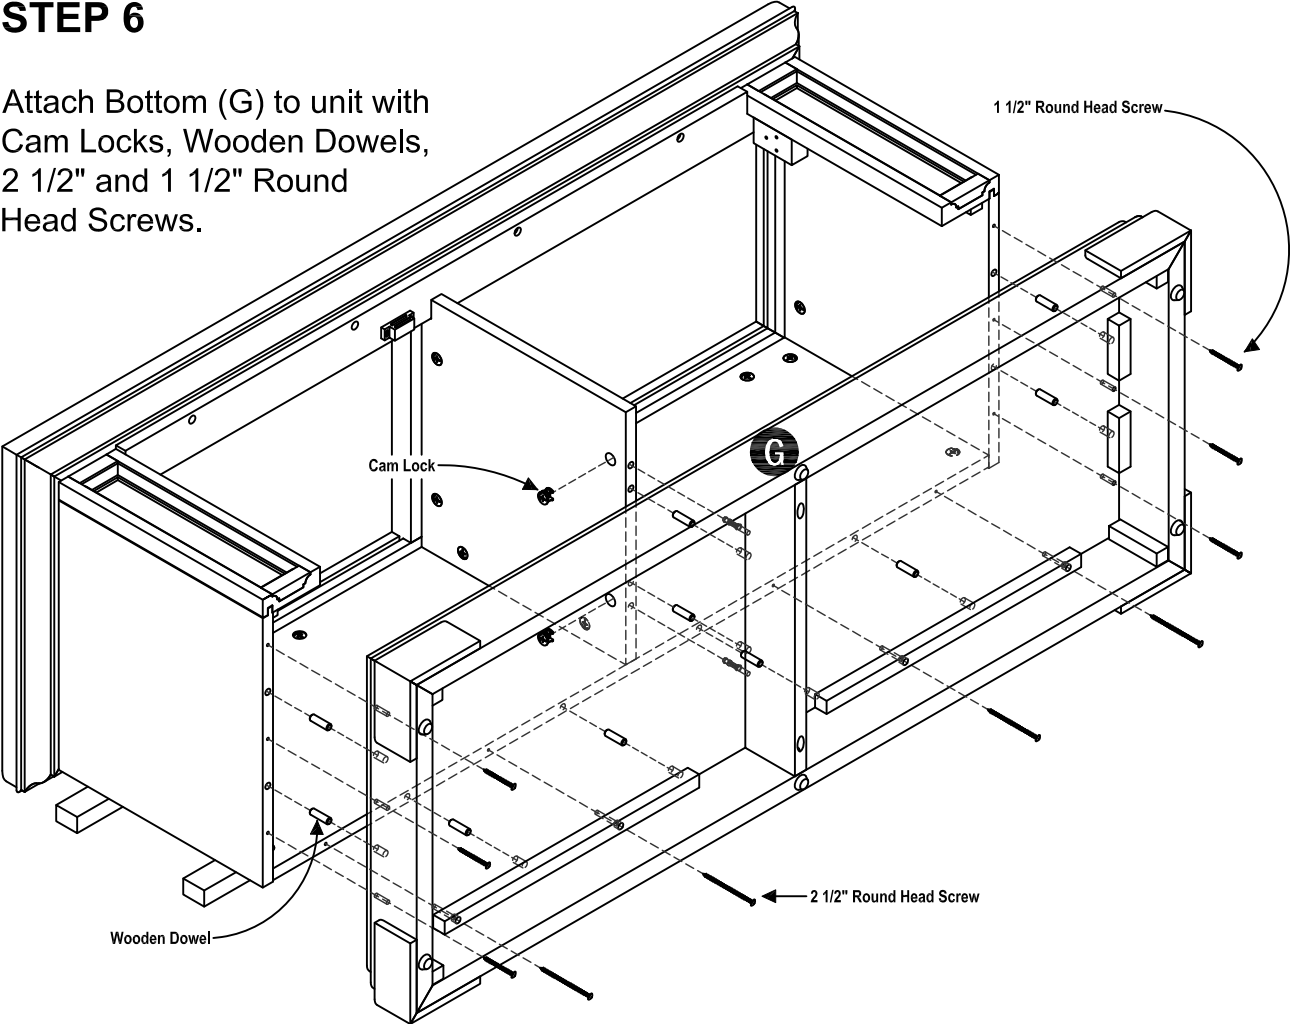


STEP 7

 Attach Handles to Door (H) with Machine Screws.

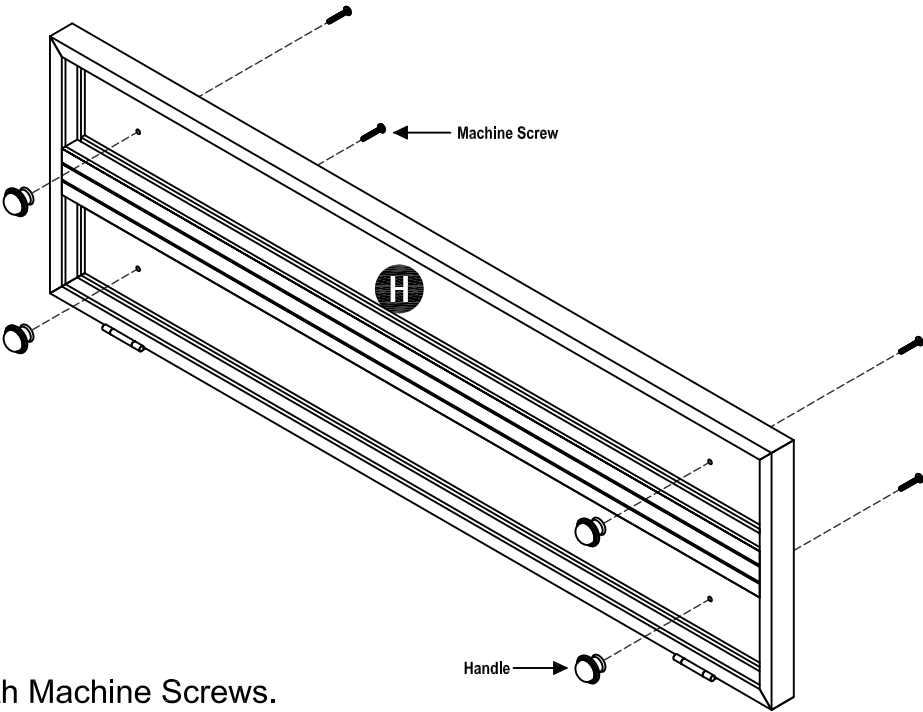

 STEP 8

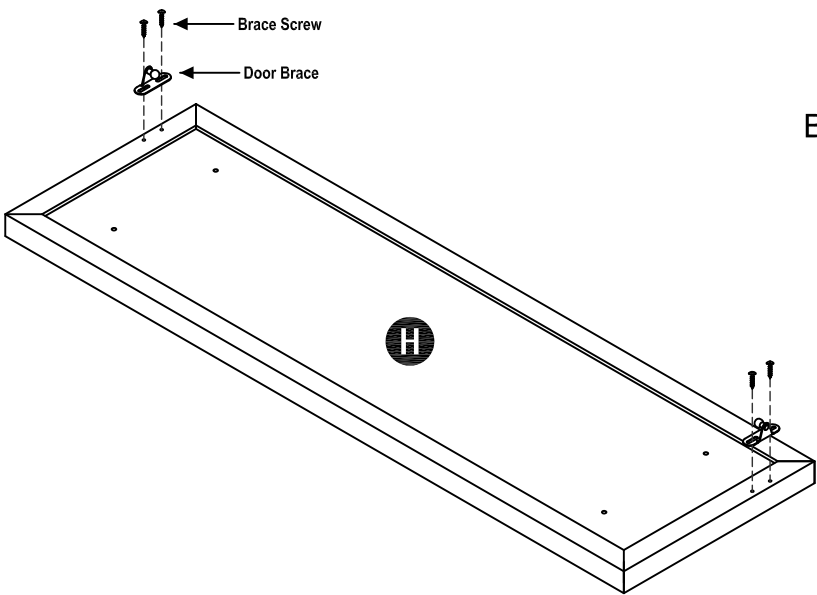

Attach Door Braces to Door (H) with Brace Screws into the pre-drilled holes.  
(See Figure 3)

**Note: Do not tighten these Brace Screws at this time.**


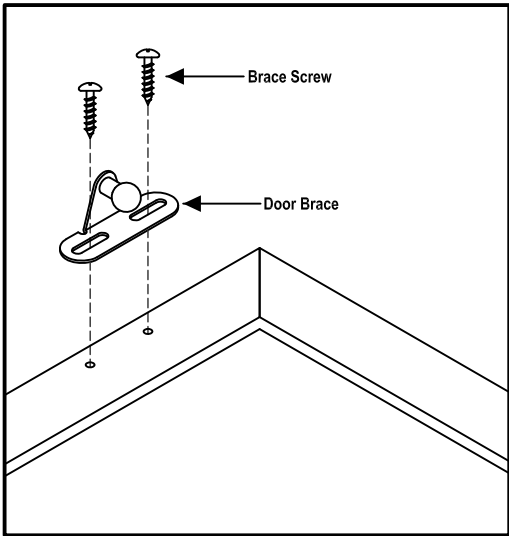 


Figure 3

 STEP 9

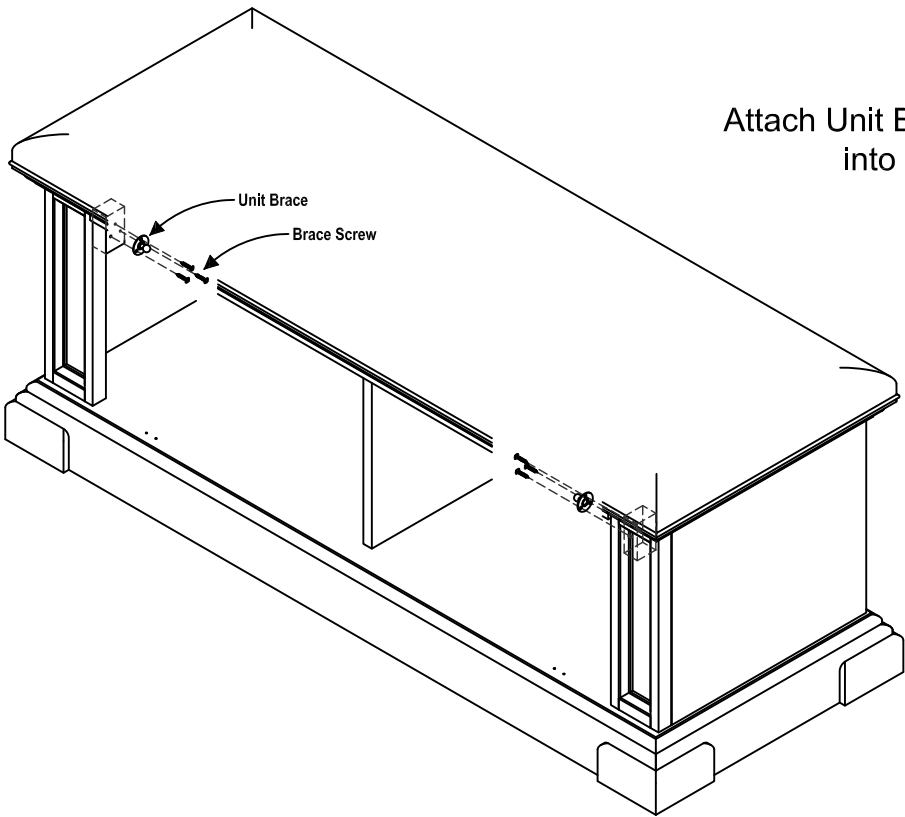

Attach Unit Braces to unit with Brace Screws into the pre-drilled holes and tighten.  
(See Figure 4)

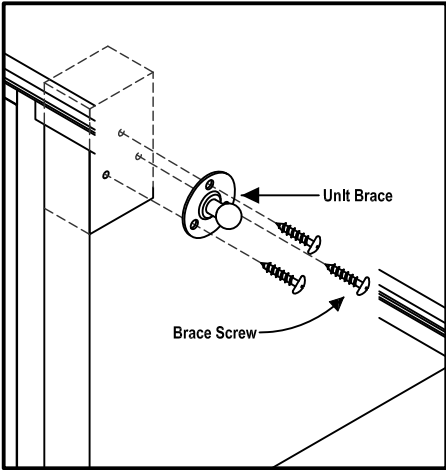 


Figure 4

## STEP 10

Attach Door (H) to unit with 3/4" Flat Head Screws.  
(See Figure 5)


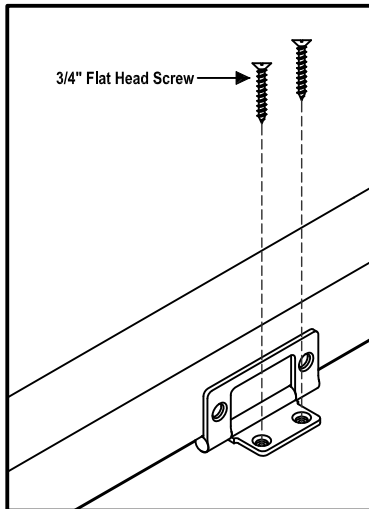 


Figure 5

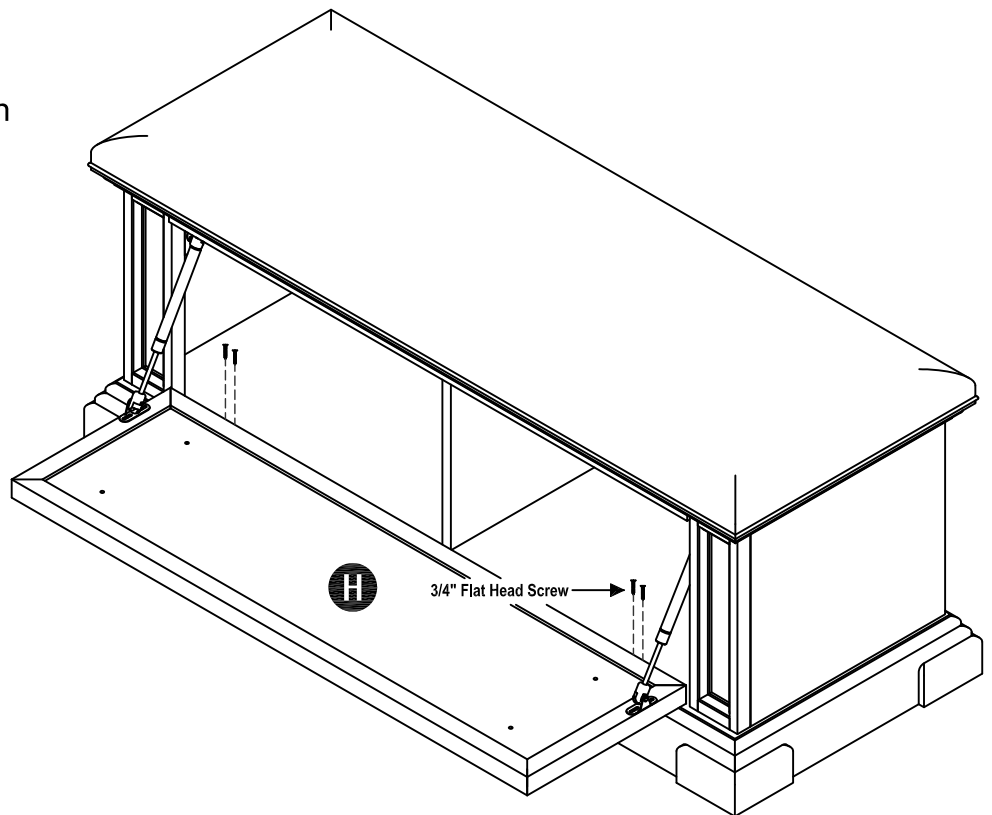 

## STEP 11

Attach Pneumatic Rods to unit by pressing them into the Unit Braces and Door Braces.  
(See Figure 6)

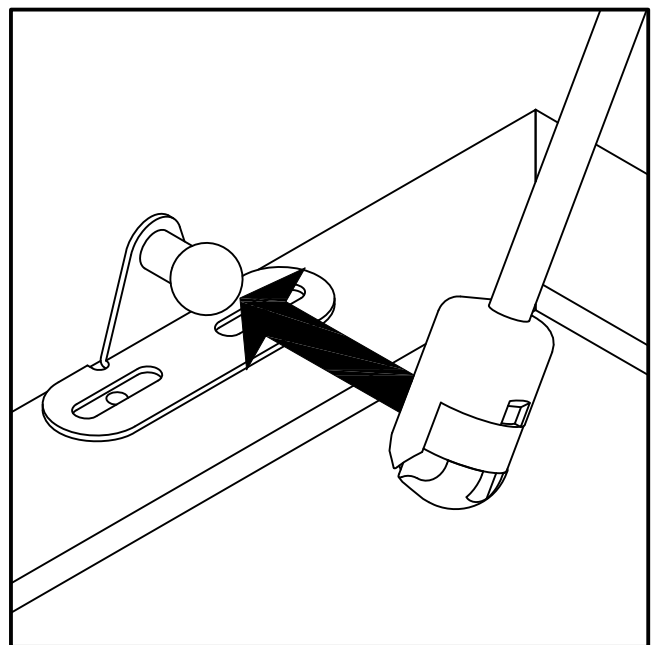 
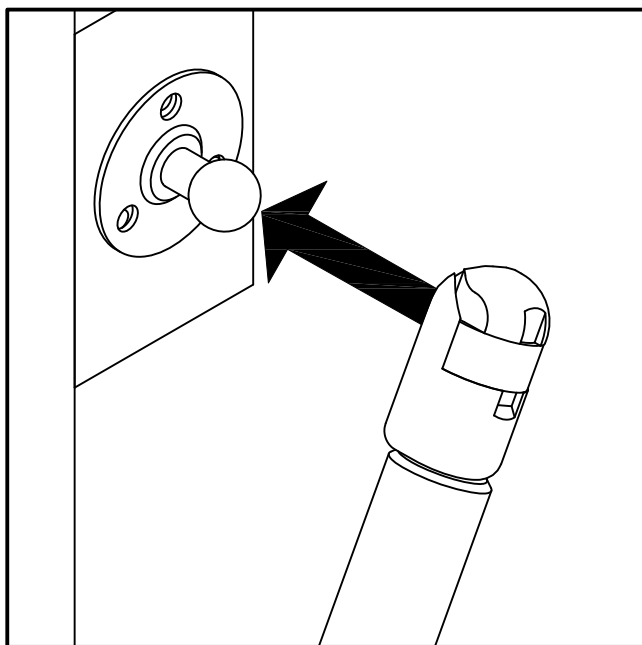 


Figure 6

### STEP 12

When the Door is down it should be oriented 90°.

If it is not 90° and adjustment is desired move the Door Braces and then tighten the Brace Screws on the Door.  
(See Figure 7)


 
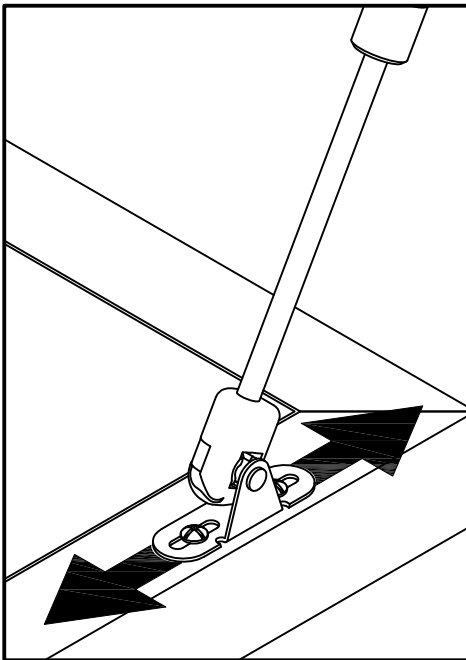 


Figure 7

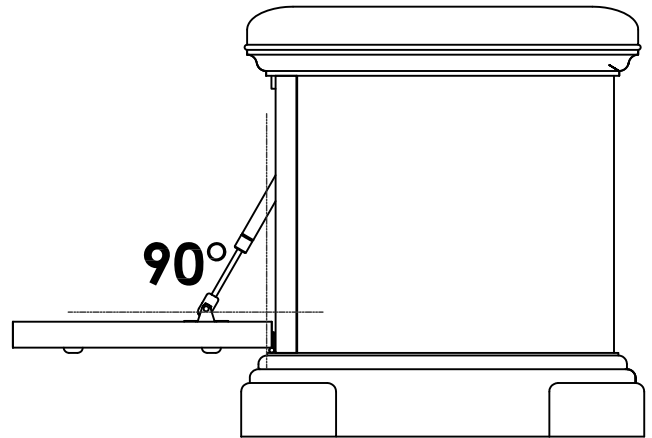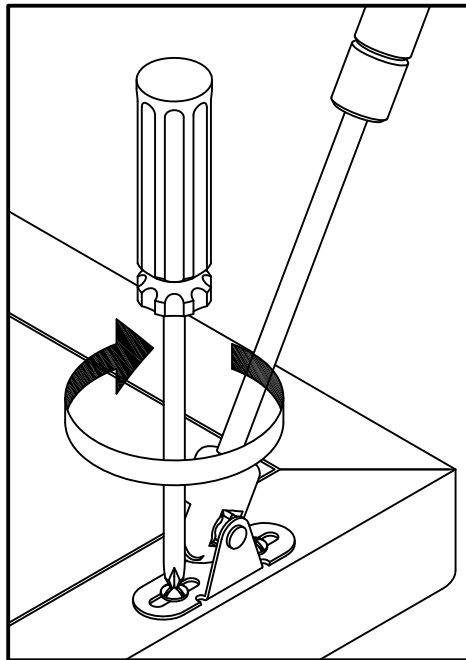 

### STEP 13

To level the unit, adjust the adjustable levelers on the bottom of the legs.

**Note: Unit must be level to work properly.**  
(See Figure 8)

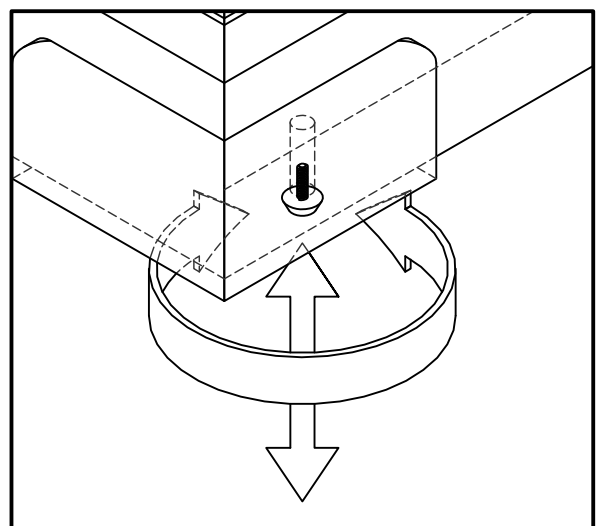 


Figure 8



# VERY IMPORTANT !!

## CARE INSTRUCTIONS

### NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.

### NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES PART TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT  
WRITE  
DIRECTLY  
ON  
SURFACE.



**PREVENT  
MARKING**

DO NOT  
PLACE IN  
DIRECT  
SUNLIGHT.



**PREVENT  
FADING**

DO NOT USE  
COMMERCIAL  
WAXES AND  
POLISHES.



**PREVENT  
YELLOWING**

DO NOT  
PLACE HOT  
OBJECTS  
ON SURFACE.



**PREVENT  
FINISH DAMAGE**

DO NOT  
USE  
RUBBER  
BASED  
PLACE MATS.



**PREVENT  
DISCOLORING**

## TO CLEAN

USE A SOFT CLOTH MOISTENED IN LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

[www.homestyles-furniture.com/customer\\_service](http://www.homestyles-furniture.com/customer_service)

**Home Styles Consumer Assistance:** [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319