

 
88 5004 34

Dining Table


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

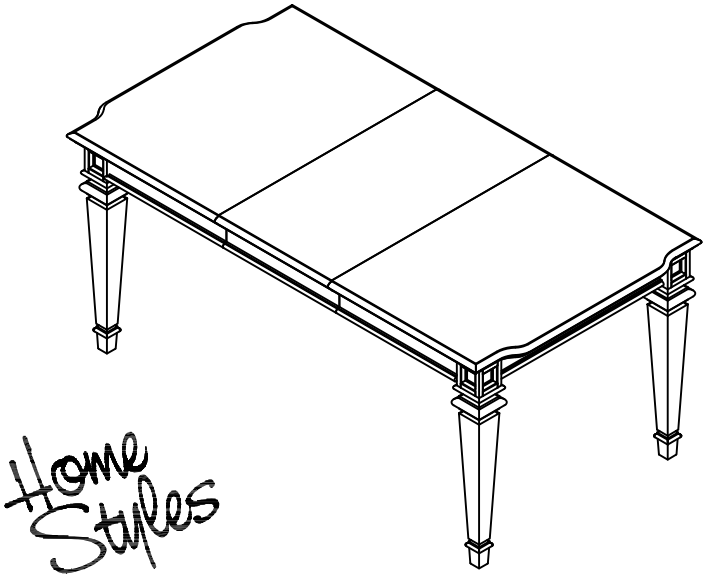

Part List

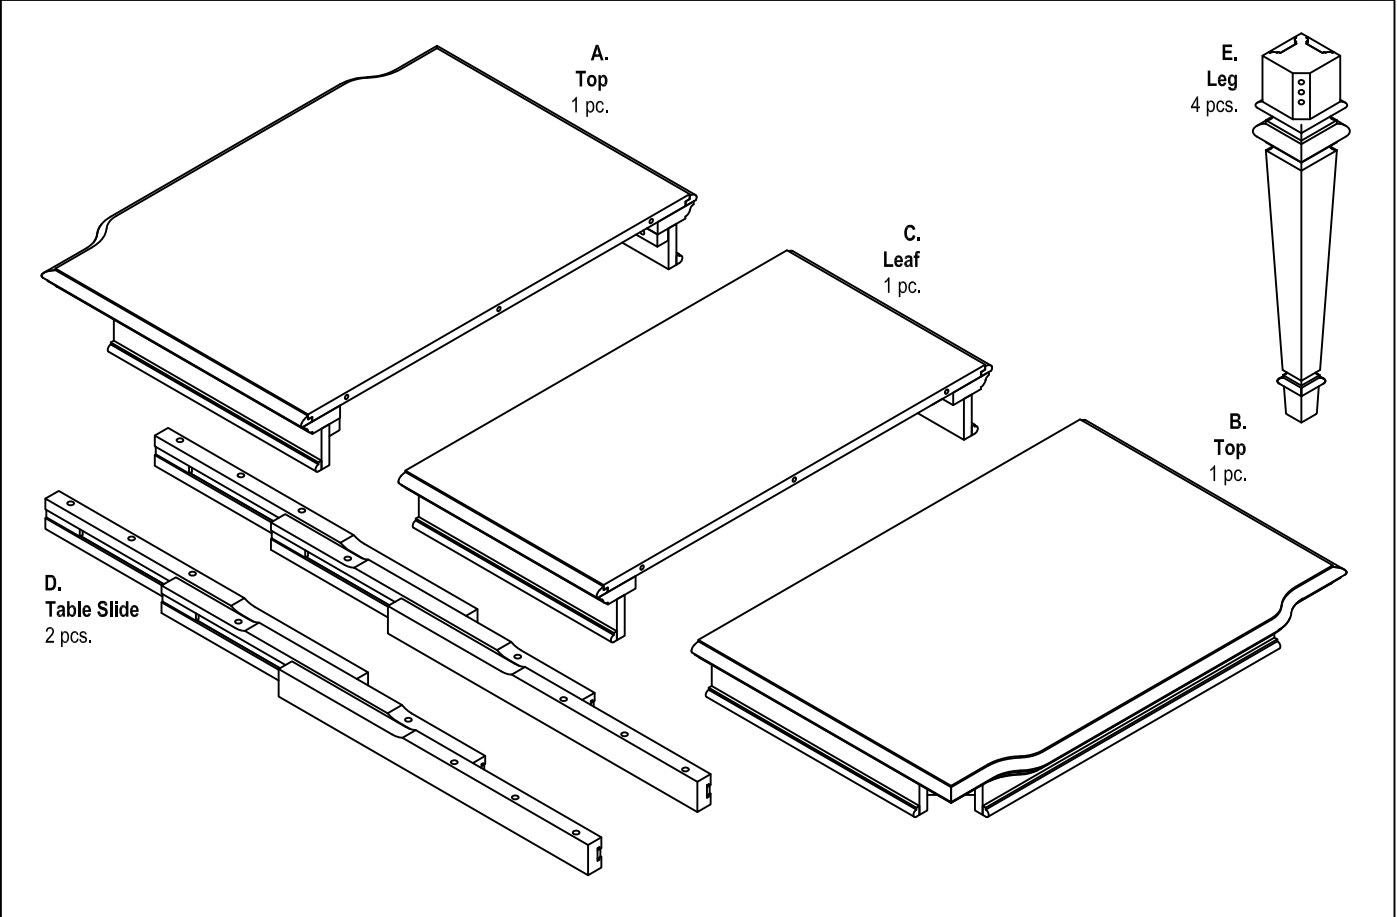 

Hardware List

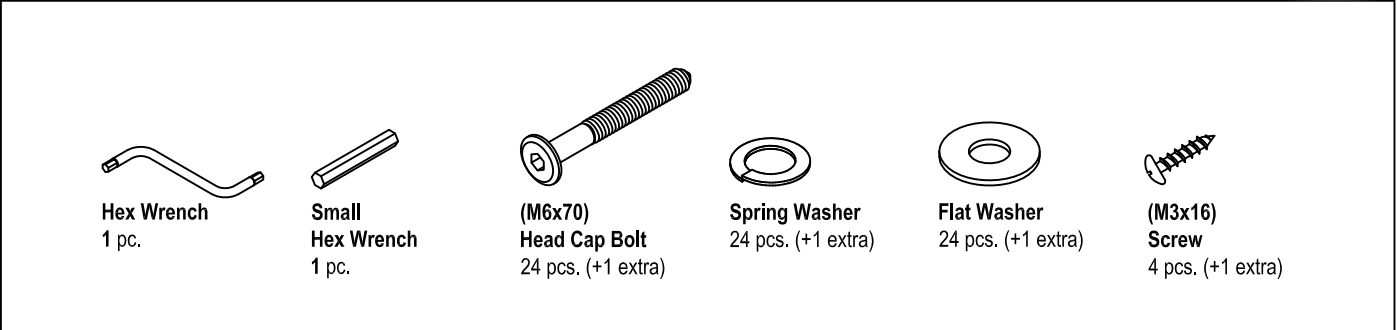 

Tools Required For Assembly : Phillips screwdriver

Tools Recommended For Assembly : Level

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

IMPORTANT

- * Please keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Do not tighten up all the screws until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly.
Use the included adjustable levellers to level.

STEP 1

Place Top (B) and Leaf (C) upside down on a soft cloth.

Rotate the Metal Tabs out 90° on Top (B) and Leaf (C) and lock into position using Screws.
(See Figure 1)

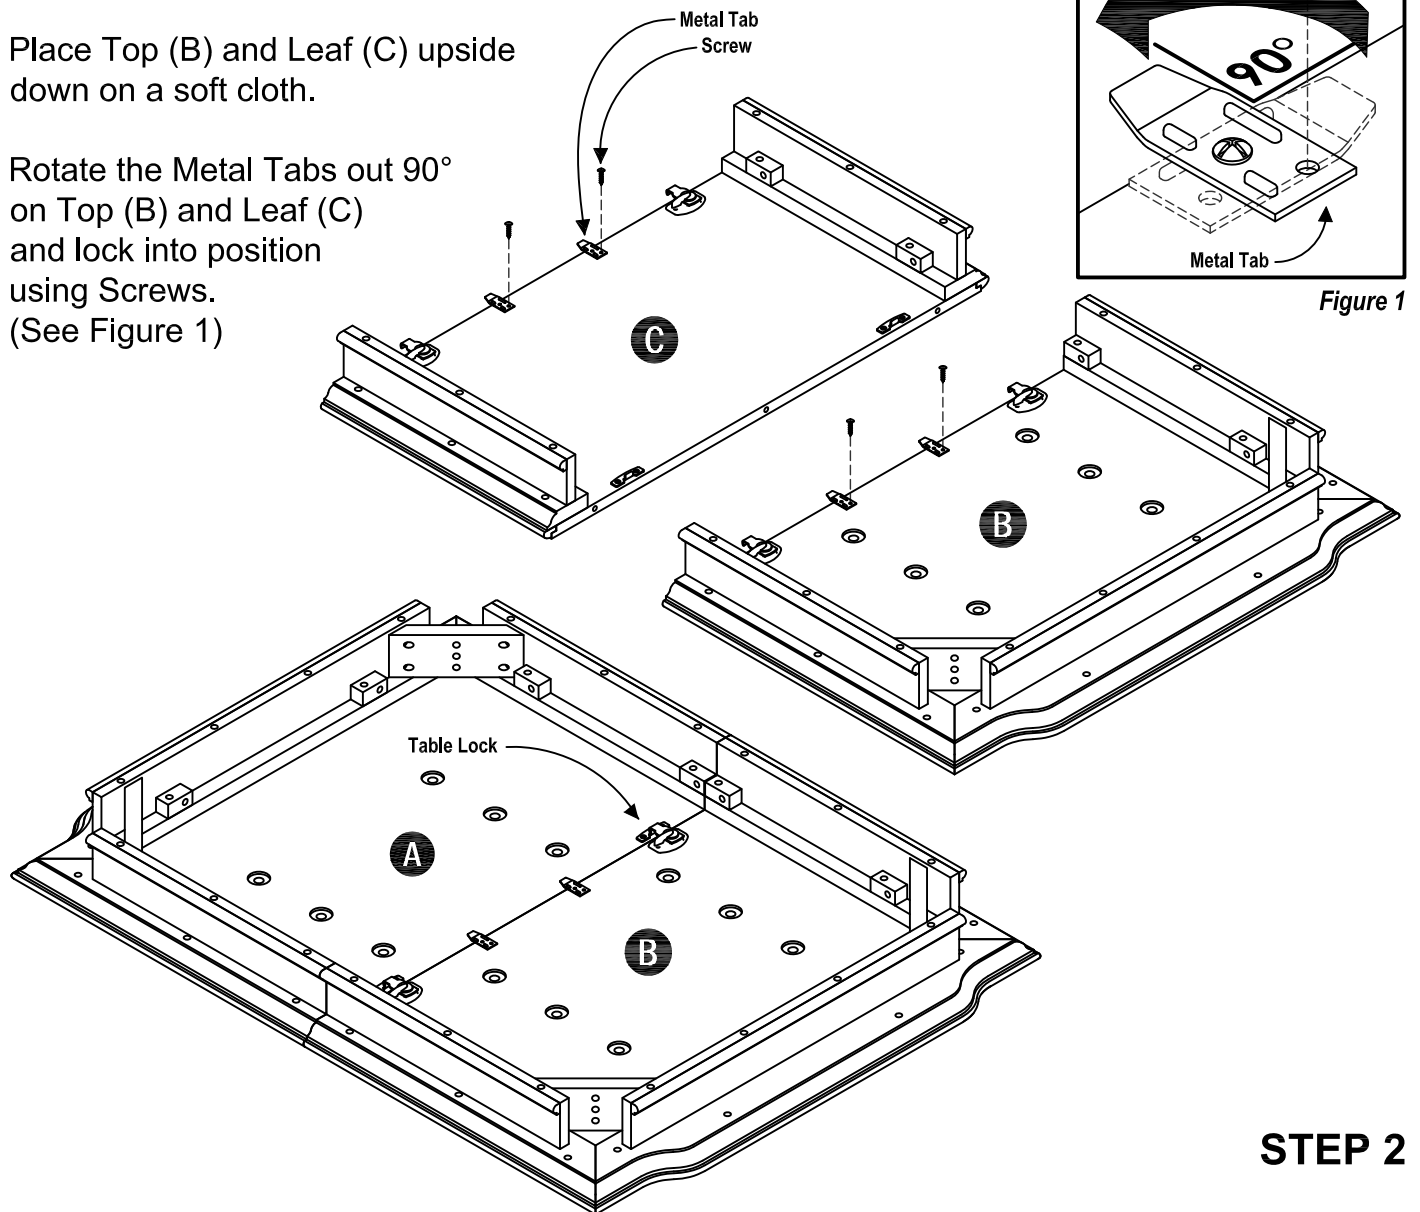 


Figure 1

STEP 2

Attach Tops (A) and (B) by aligning dowels with the holes and firmly pushing together.

Engage the Table Locks by turning their handles clockwise 1/2 turn.
(See Figure 2)


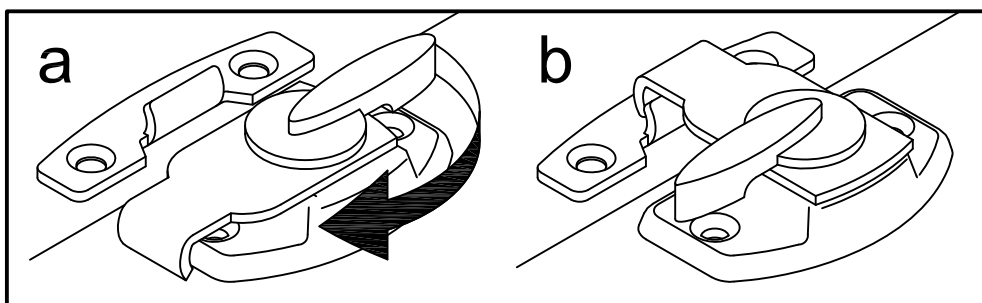 



Figure 2

 STEP 3

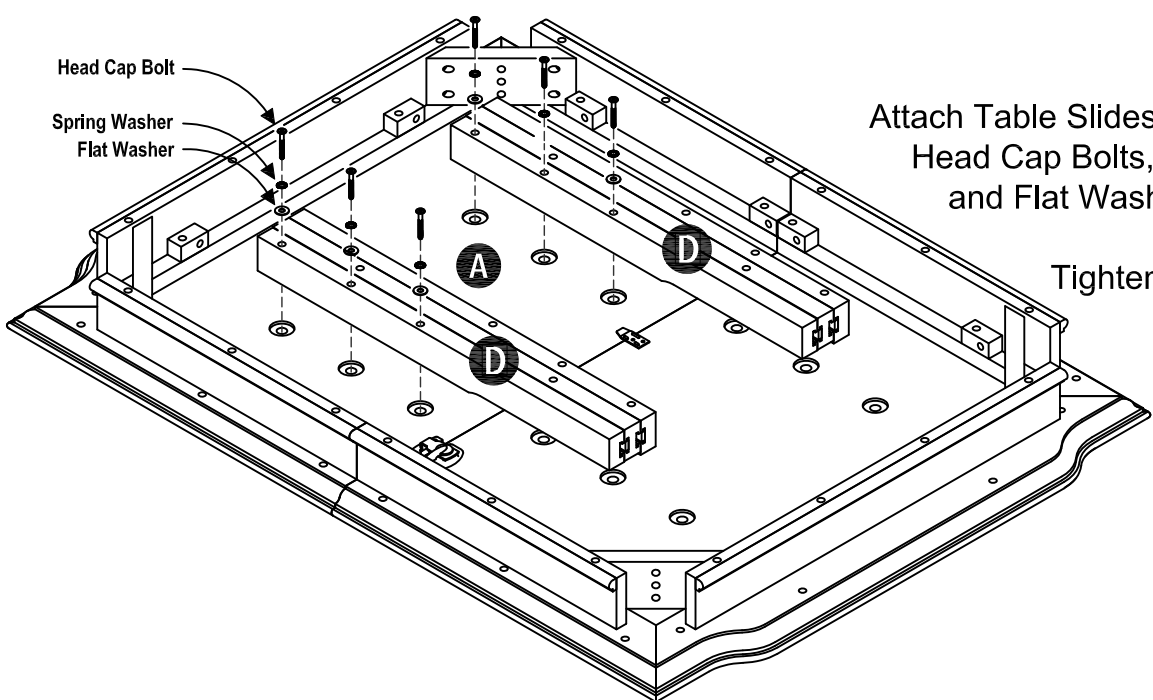

Attach Table Slides (D) to unit using Head Cap Bolts, Spring Washers and Flat Washers into Top (A).

 Tighten Head Cap bolts only halfway.

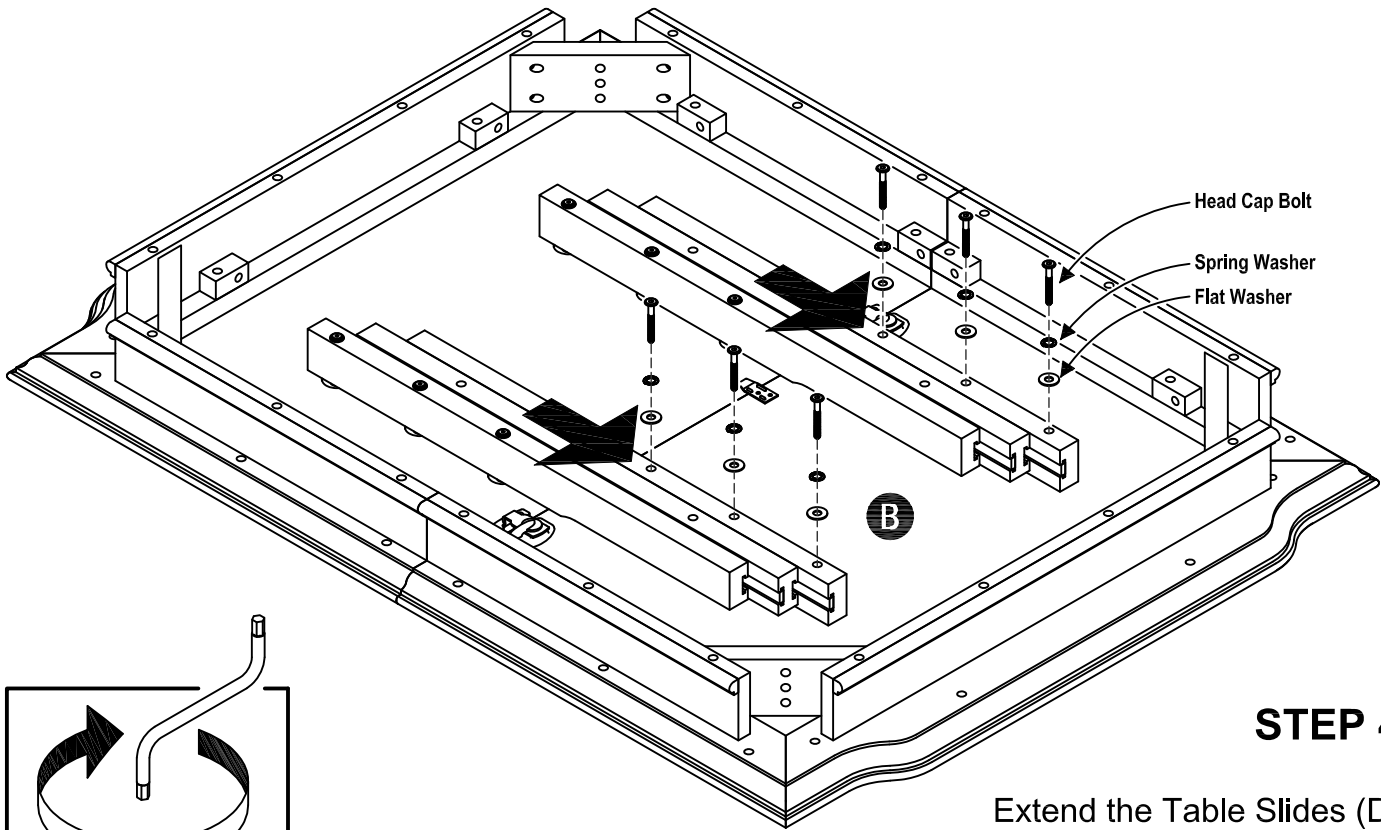

STEP 4

Extend the Table Slides (D) and attach Head Cap Bolts, Spring Washers and Flat Washers into Top (B).

Tighten Head Cap Bolts only halfway.

After Table Slides (D) are attached properly, tighten all bolts completely using Hex Wrench. (See Figure 3)

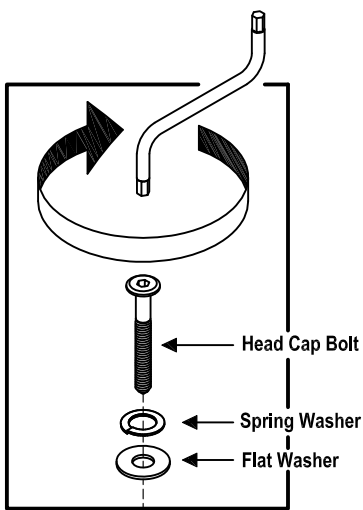 


Figure 3

STEP 5

Attach Legs (E) to unit using Head Cap Bolts, Spring Washers and Flat Washers.

Tighten Head Cap bolts using Hex Wrench. (See Figure 4)



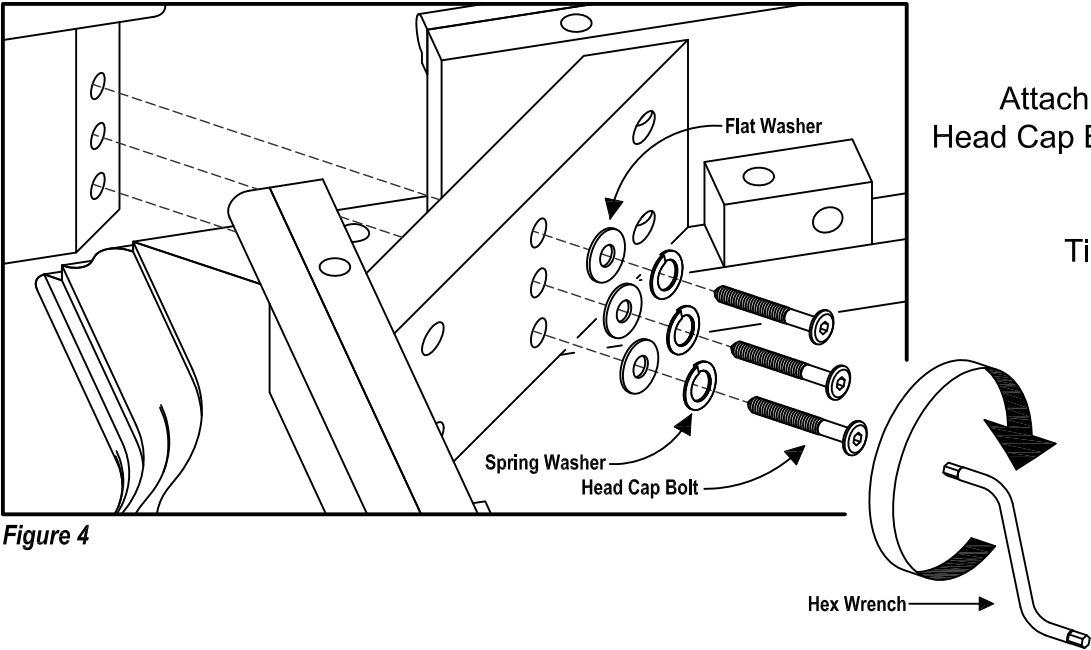 


Figure 4

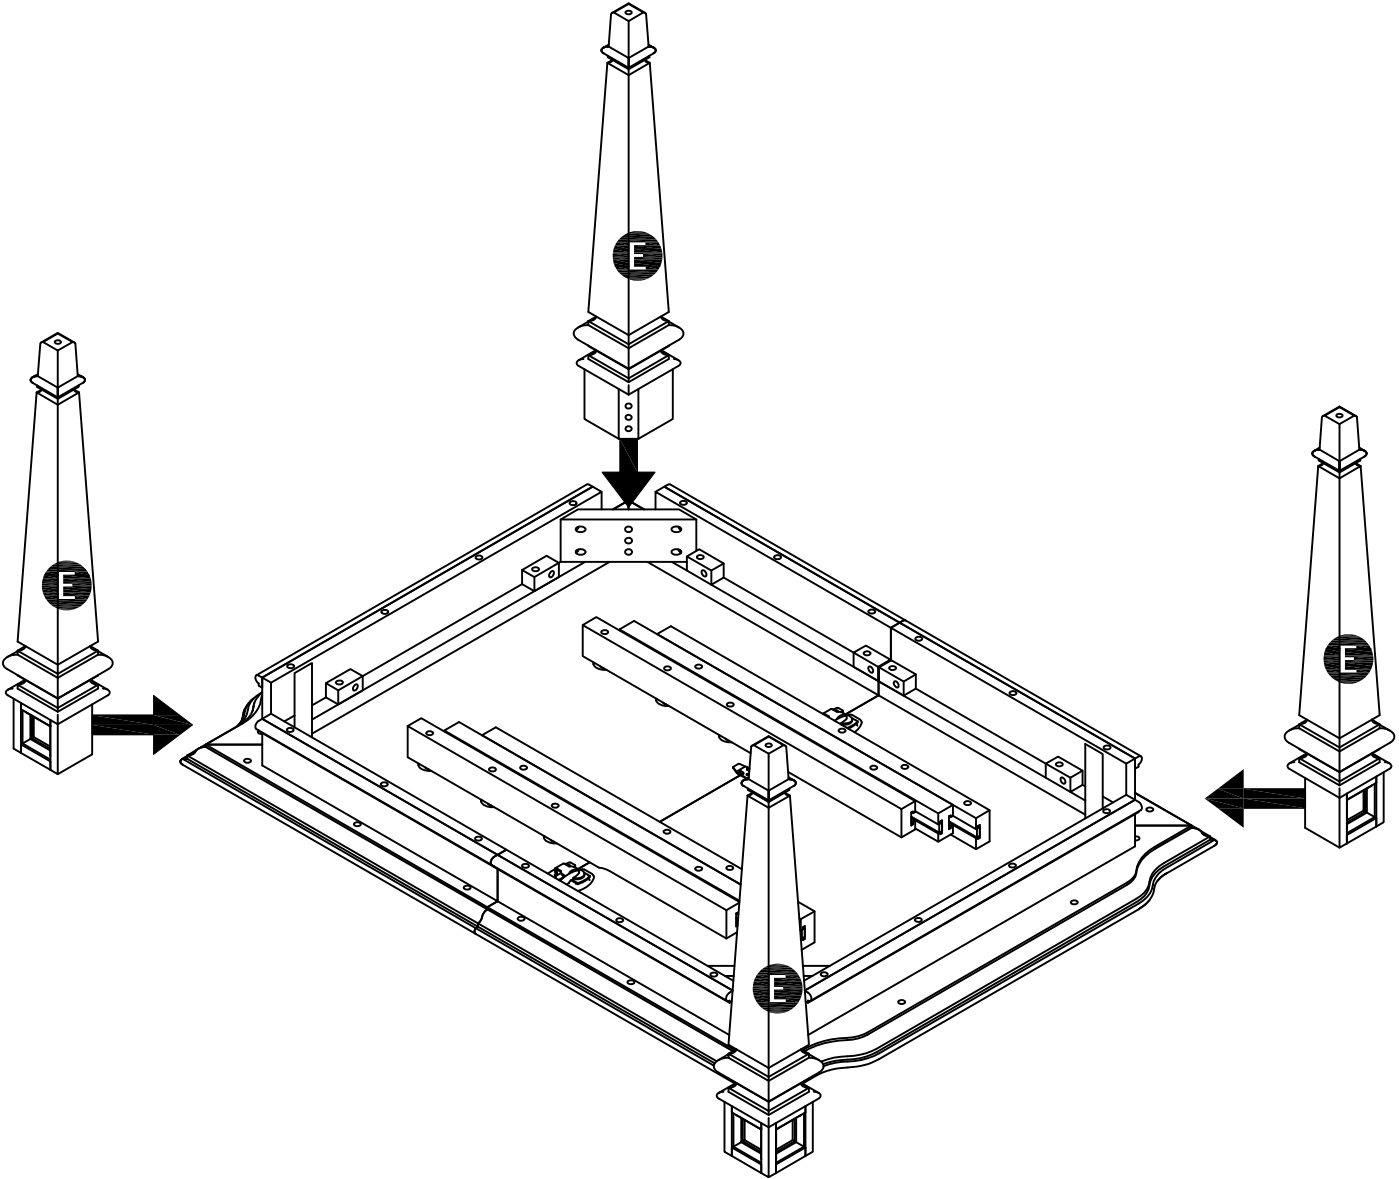 

 STEP 6

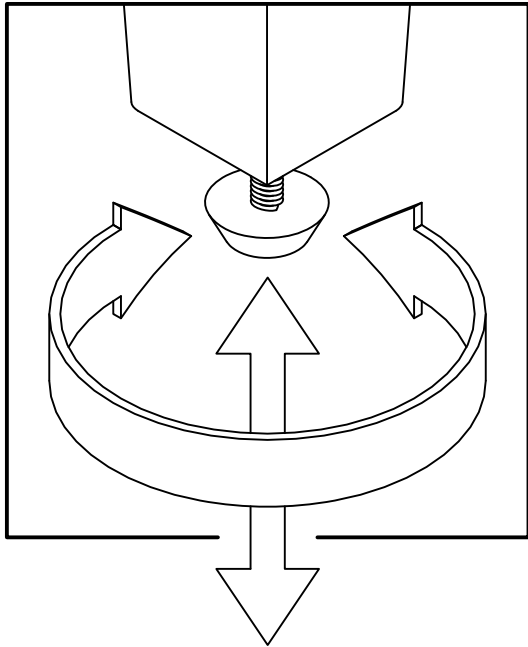

Turn the table over to its' upright position.

To level the unit, adjust the adjustable levelers on the bottom of the legs.

Note: Unit must be level to work properly.

ADDING THE LEAF

STEP 7

Disengage the Table Locks by turning their handles counter-clockwise 1/2 turn.
(See Figure 5)


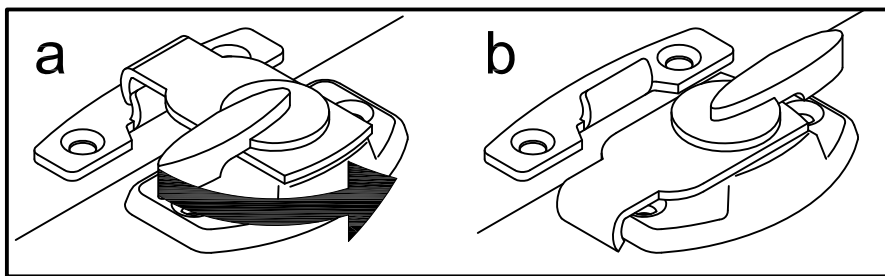 


Figure 5

 Pull out both sides of the table, then place Leaf (C) in unit as shown, aligning the dowels with the holes.

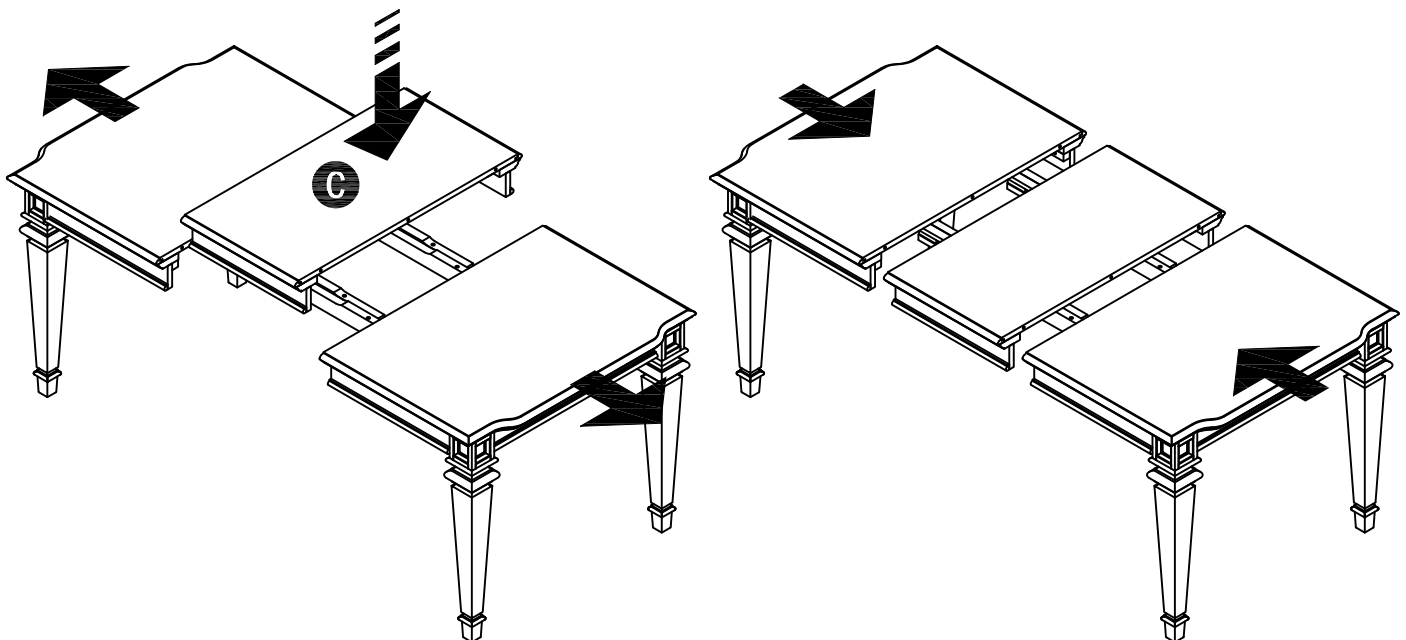

Push the table together firmly, then engage the Table Locks by turning their handles clockwise 1/2 turn.
(See Figure 2)

VERY IMPORTANT !!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES PART TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT
WRITE
DIRECTLY
ON
SURFACE.



**PREVENT
MARKING**

DO NOT
PLACE IN
DIRECT
SUNLIGHT.



**PREVENT
FADING**

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES.



**PREVENT
YELLOWING**

DO NOT
PLACE HOT
OBJECTS
ON SURFACE.



**PREVENT
FINISH DAMAGE**

DO NOT
USE
RUBBER
BASED
PLACE MATS.



**PREVENT
DISCOLORING**

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer_service

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319