

88 5010 941

Woodridge Kitchen Island

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home Styles



Part List

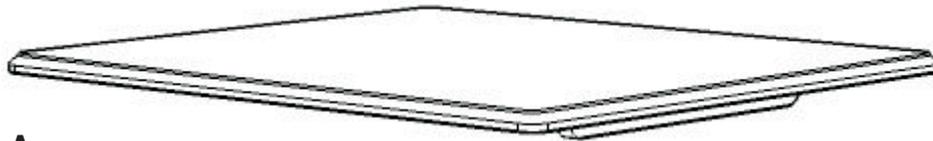

A.
Top
1 pc.



B.
Top
1 pc.

Hardware List



Small Hex Wrench
1 pc.




Hex Wrench
1 pc.



Cam Lock
36 pcs. (+1 extra)



Cam Lock Screw
36 pcs. (+1 extra)

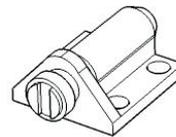

Magnet
2 pcs.



Wood Screw for Magnet
8 pcs. (+1 extra)



Machine Screw
8 pcs.



Adjustable Pin
20 pcs. (+1 extra)



Head Cap Bolt
10 pcs. (+1 extra)



Head Cap Bolt (short)
4 pcs. (+1 extra)



Wood Screw (long)
16 pcs. (+1 extra)



Wood Screw (short)
8 pcs. (+1 extra)



Wood Screw for Plinth
2 pcs. (+1 extra)



Pull Handle
4 pcs.

For assembly see instructions in carton 88 5010 942

Tools required for assembly : **Phillips** screwdriver

Tools recommended for assembly : Level

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319
servicedesk@homestyles-furniture.com

88 5010 942

Woodridge Kitchen Island

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home Styles



Part List (in this carton)

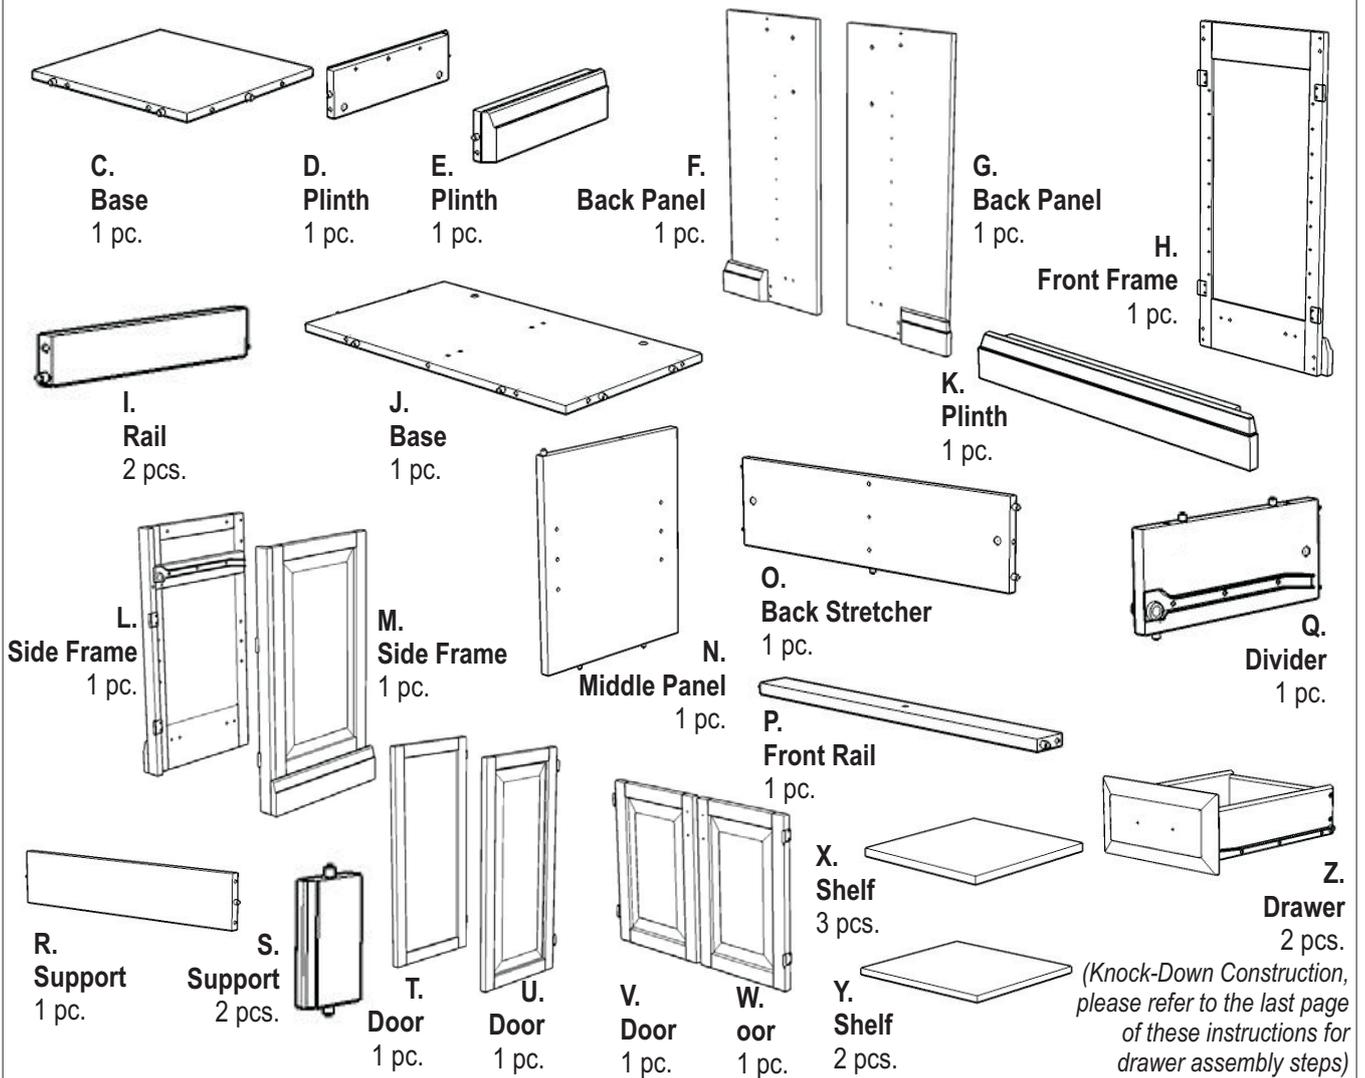

Also need the following from carton 88 5010 941

Part List in carton 88 5010 941

Top (A)	1 pc.
Top (B)	1 pc.

Hardware List in carton 88 5010 941

Hex Wrench	1 pc.
Small Hex Wrench	1 pc.
Magnet	2 pcs.
Cam Lock	37 pcs.
Cam Lock Screw	37 pcs.
Head Cap Bolt	11 pcs.
Head Cap Bolt (short)	5 pcs.

Adjustable Pin	21 pcs.
Wood Screw for Magnet	9 pcs.
Wood Screw (long)	17 pcs.
Wood Screw (short)	9 pcs.
Wood Screw for Plinth	3 pcs.
Machine Screw	8 pcs.
Pull Handle	4 pcs.

Tools required for assembly : **Phillips** screwdriver

Tools recommended for assembly : Level

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319
 servicedesk@homestyles-furniture.com

IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * After assembly, item must be level to work properly. Use the included adjustable levelers to level.

STEP 1

Attach Back Panel (F) to Back Panel (G) as shown.

Attach 2X Magnets to Back Panel (F) and (G) by using Wood Screws in the pre-drilled holes (See figure 1).

Insert Cam Lock Screws into the pre-drilled holes of Back Panel (F) and (G).


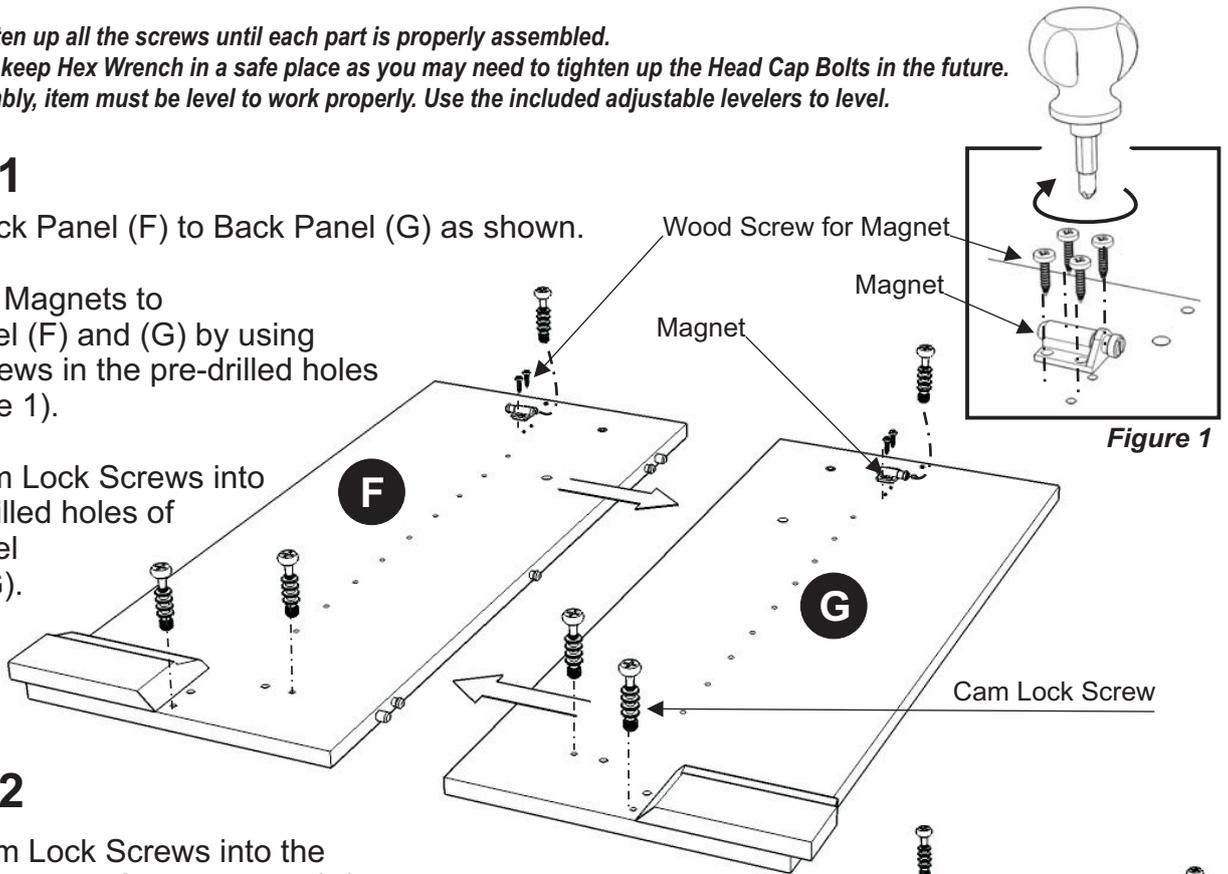


Figure 1

STEP 2

Insert Cam Lock Screws into the pre-drilled holes of Front Frame(H), Plinth (D) and (E).

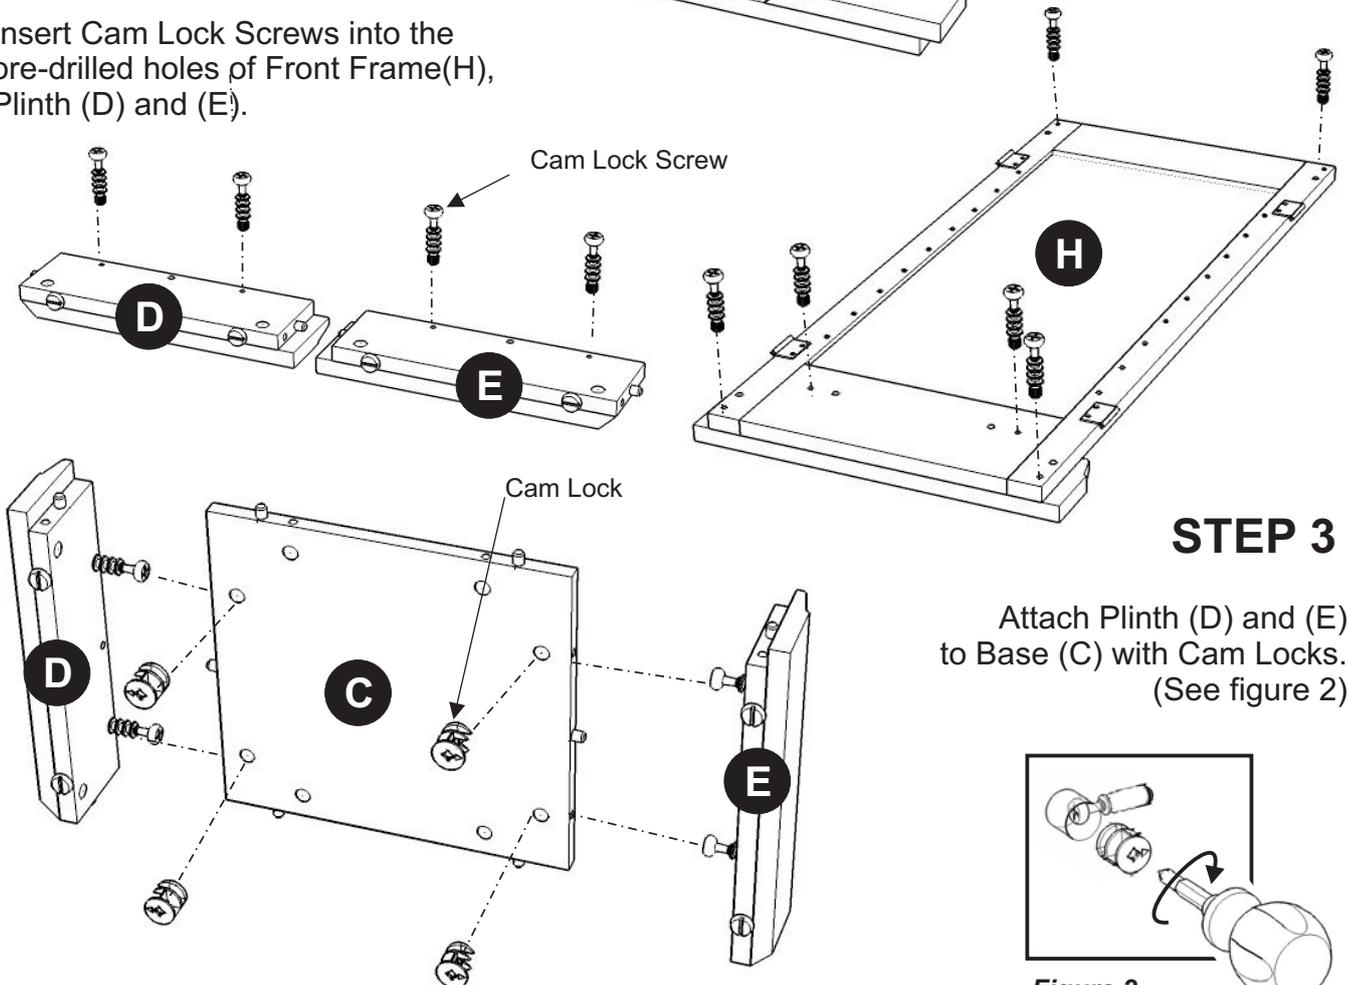

STEP 3

Attach Plinth (D) and (E) to Base (C) with Cam Locks. (See figure 2)



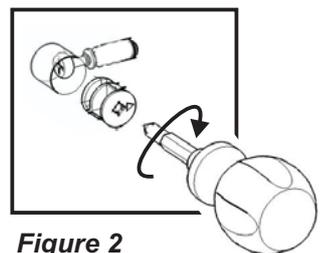


Figure 2

STEP 4

Attach Rails (I) and base unit in Step 3 to back panel unit in Step 2 with Cam Locks.

Place Front Frame (H) onto unit with Cam Locks.

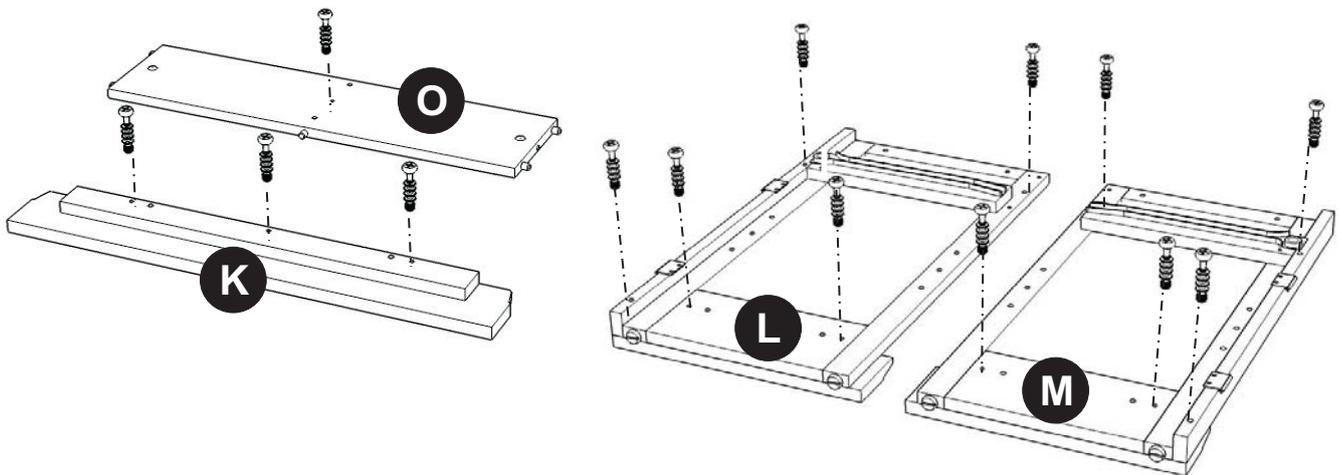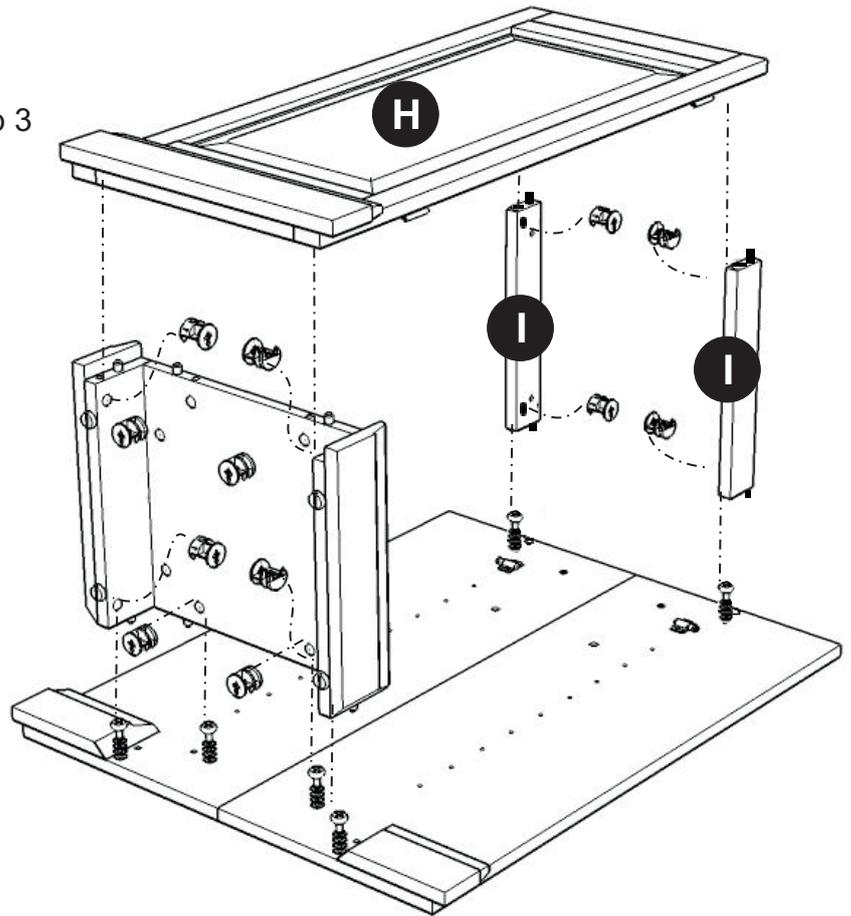

STEP 5


Insert Cam Lock Screws into the pre-drilled holes of Plinth (K), Side Frame (L) and (M), Back Stretcher (O).

STEP 5

Attach Middle Panel (N) to Base (J) with Head Cap Bolts.

Attach Plinth (K) and Side Panel (L) to Base (J) with Cam Locks and Wood Screw.


Attach Front Rail (P) to unit with Cam Lock.

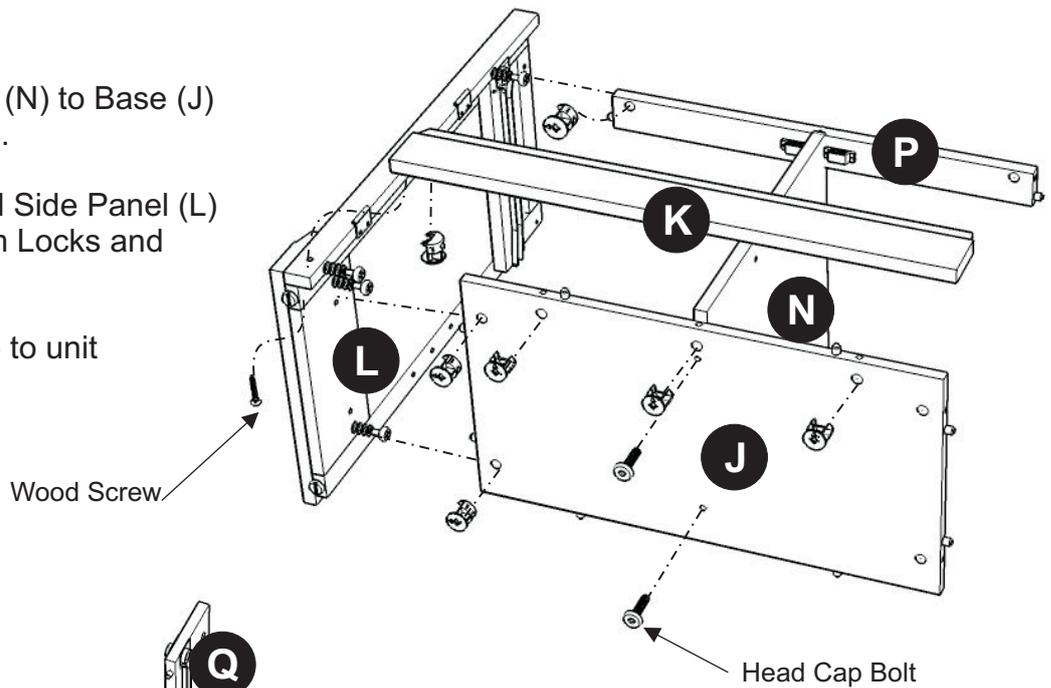

STEP 6


Attach Back Stretcher (O) and Divider (Q) to unit with Cam Locks.

Attach Side Panel (M) to unit with Cam Lock and Wood Screw.

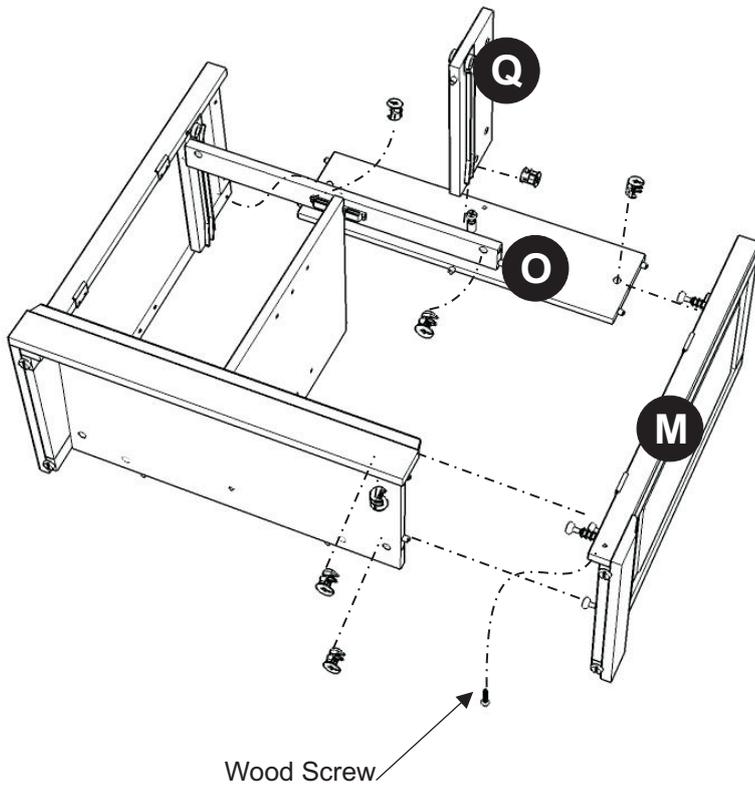

STEP 7

Place Top (B) onto unit with Head Cap Bolts.

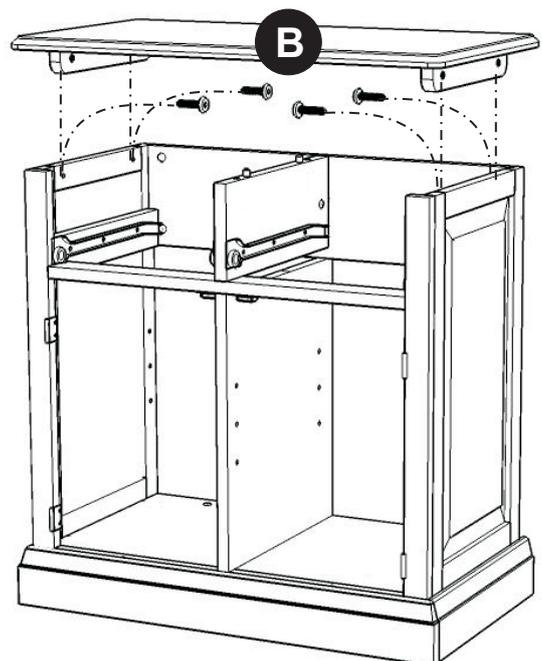

STEP 8

Assemble Supports (R) and (S) with Cam Lock Screws and Cam Locks.

Attach unit in Step 4, Step 7 and support unit with Cam Lock and Head Cap Bolts (short).

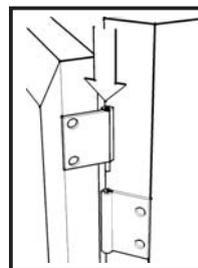
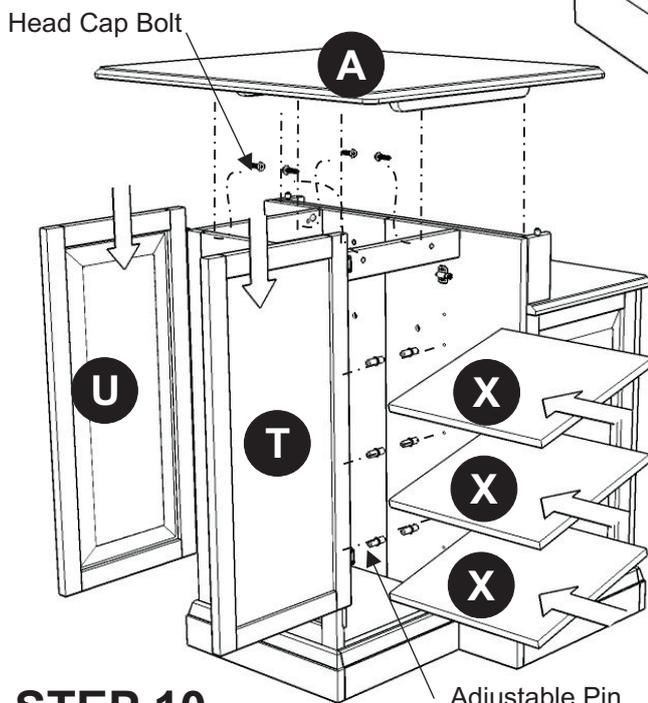
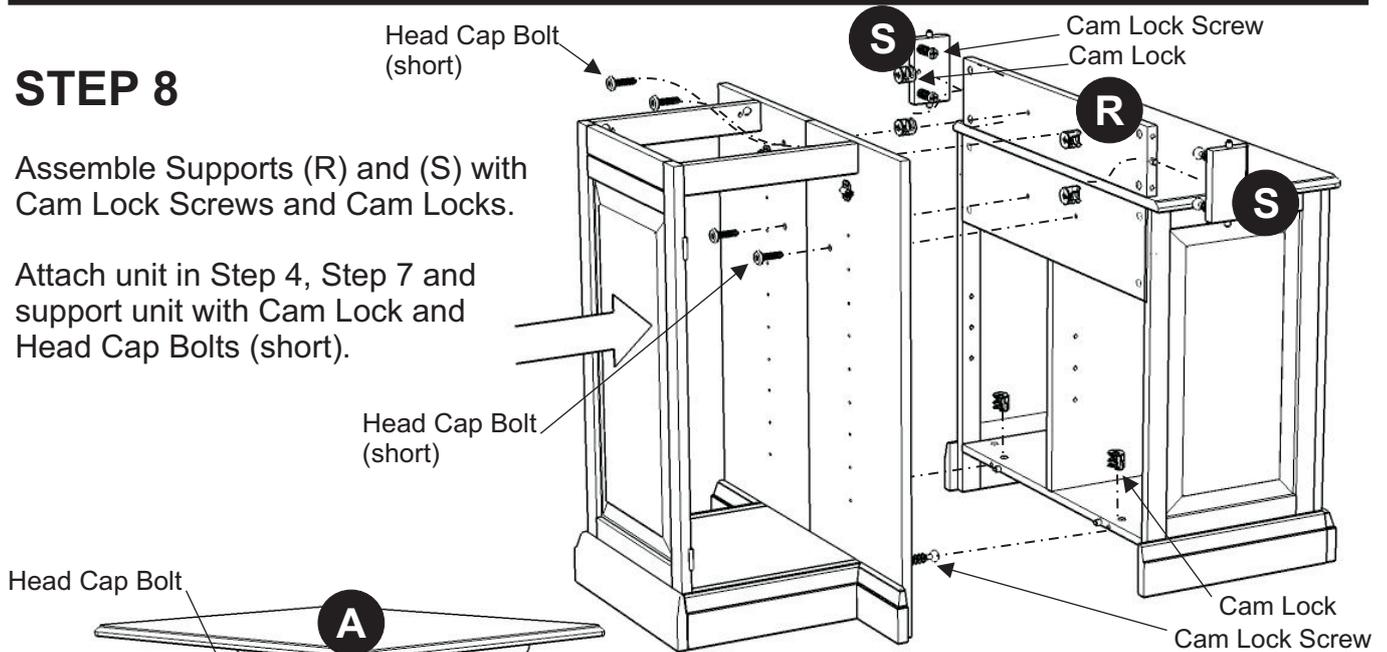


Figure 3

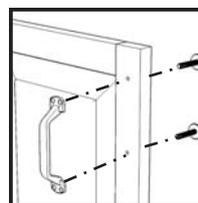


Figure 4

STEP 9

Attach Doors (U) and (T) by sliding the door lift hinges into the side panels lift hinges. (See figure 3)

Place Top (A) onto unit with Head Cap Bolts.

Insert Adjustable Pins into side panels at the desired level.

Place Shelves (X) into position.

STEP 10

Attach Doors (V) and (W) by sliding the door lift hinges into the side panels lift hinges.

Assemble Pull Handles to Doors with Machine Screws. (See figure 4)

Insert Adjustable Pins into side panels at the desired level.

Place Shelves (Y) and Drawers (Z) into position.

To level the unit, adjust the adjustable levelers on the bottom of unit. (See figure 5)

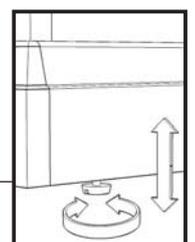
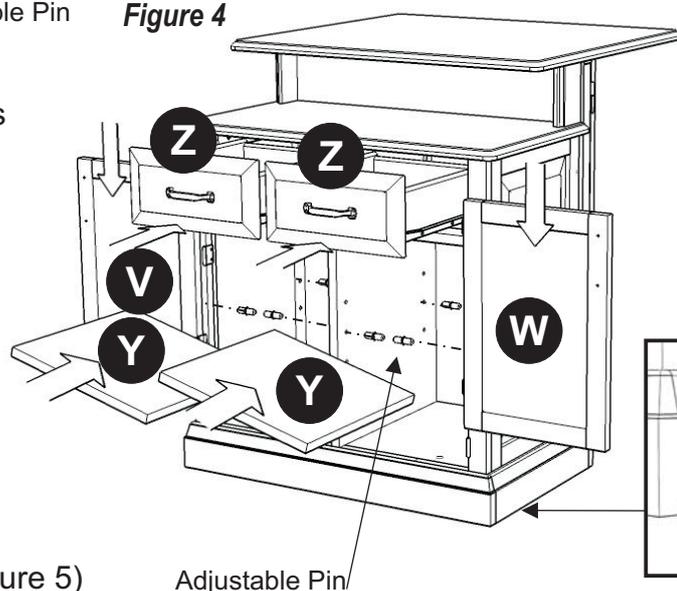


Figure 5

Drawer (Z)


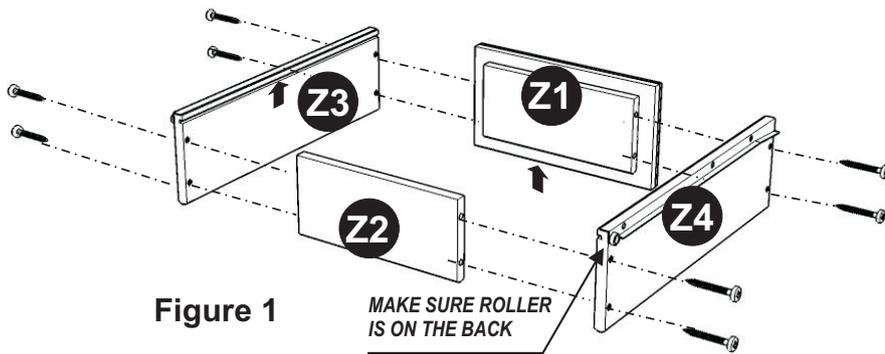


Figure 1

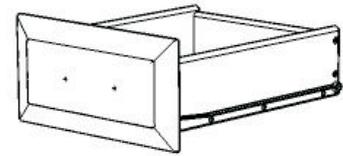

STEP 1

Attach Z1 to Z3 and Z4, using a Phillips screwdriver and long wood screws (4X), tighten halfway.

Attach Z2 to Z3 and Z4 using long wood screws (4X), tighten halfway. (see Figure 1)

STEP 2

Slide Z5 into the grooves in Z3 and Z4. Be sure to push T5 all the way forward so it meets Z1. (see Figure 2)

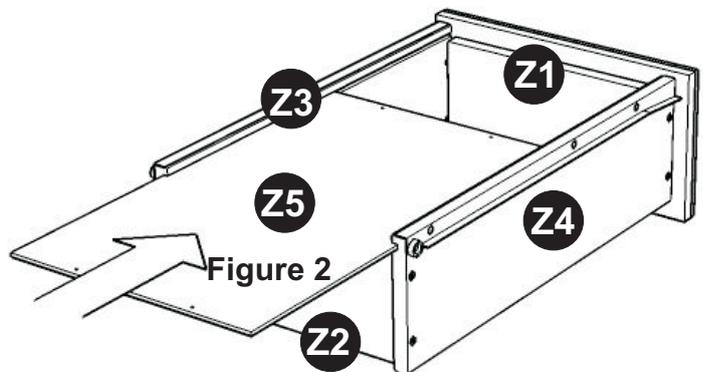


Figure 2

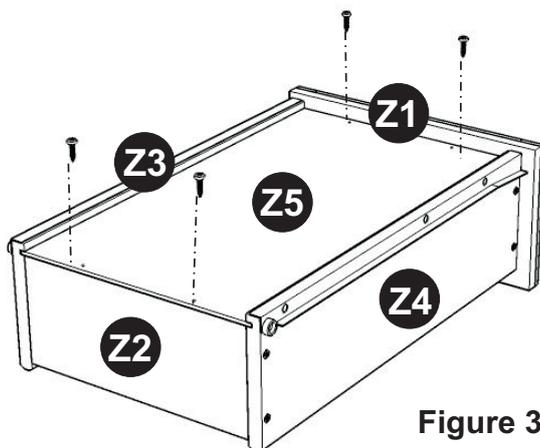


Figure 3

STEP 3

Insert short wood screws (4X) into the pre-drilled holes in Z5, tighten screws. (see Figure 3)

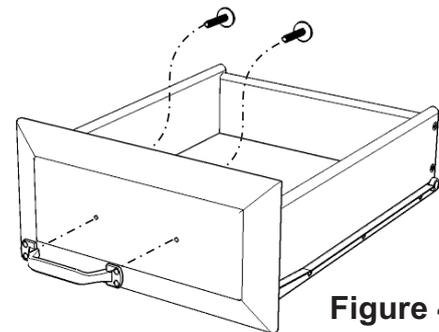



Figure 4

STEP 4

Assemble Pull Handle with machine screws. (see Figure 4)

Tighten all screws used in drawer assembly.


Part List

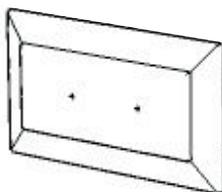

Z1.
Front Part
2 pcs.



Z2.
Back Part
2 pcs.

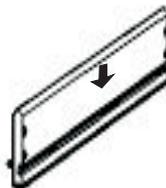

Z3.
Side Part
2 pcs.



Z4.
Side Part
2 pcs.



Z5.
Base Part
2 pcs.