
88 5029 70


Vanity with Mirror


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

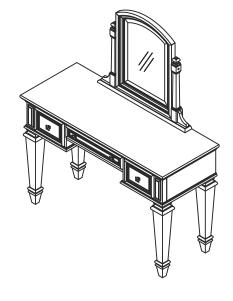

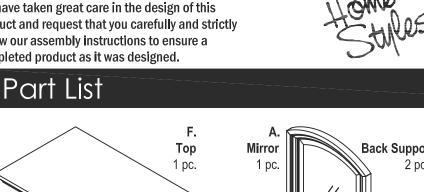

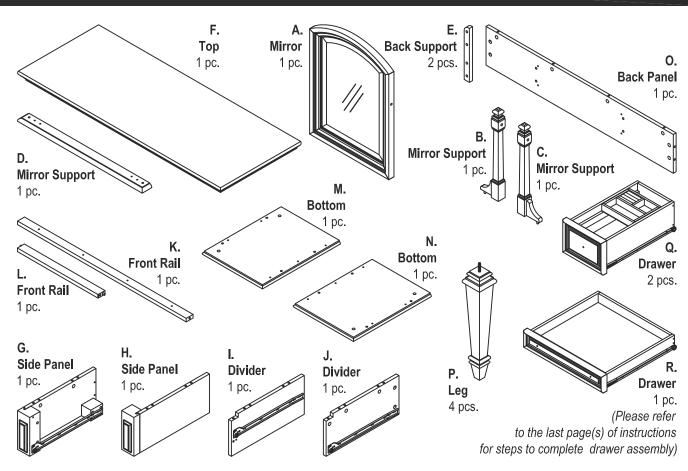

Hardware List







































Tools required for assembly: Phillips screwdriver

Tools recommended for assembly: Level


Home Styles Consumer Assistance: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/10


IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * You should keep Allen Key in a safe place as you may need to tighten up the Bolts in the future.
- * After assembly, item must be level to work properly. use the included adjustable levelers to level
- * Use a soft cloth between these parts and the floor.


STEP 1

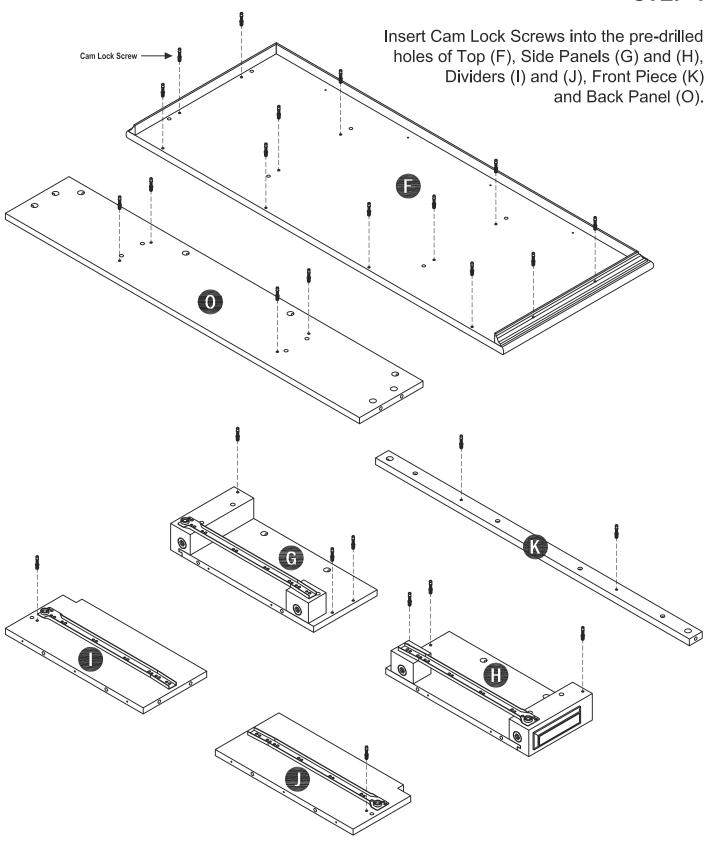

Assembly Instructions 3/10

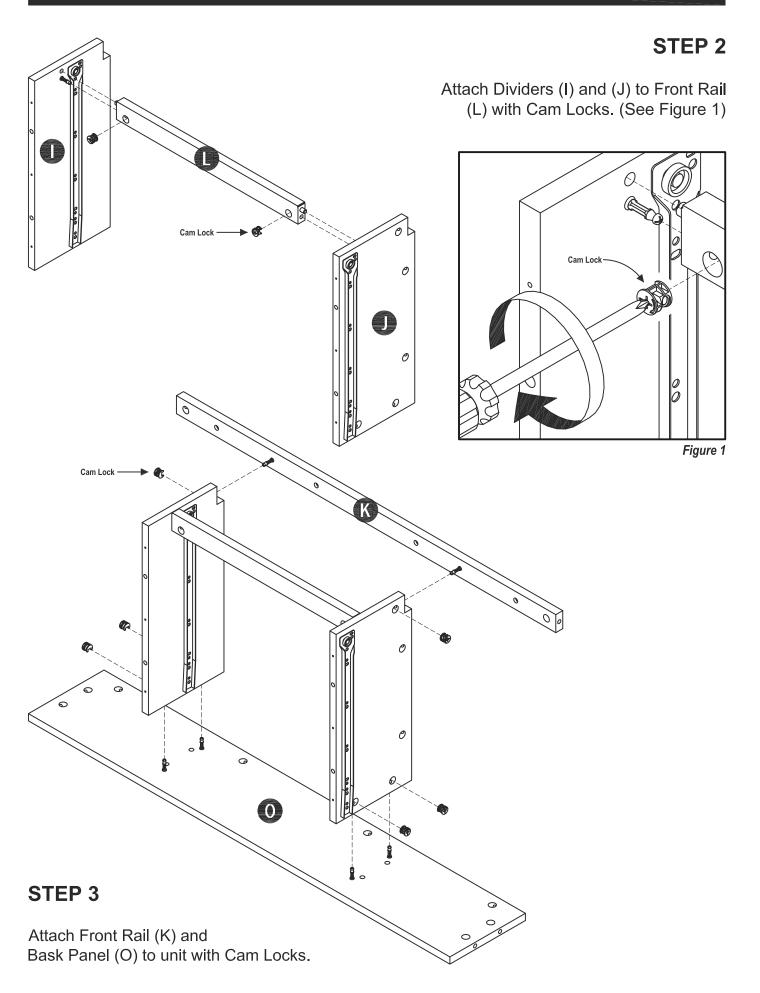


Assembly Instructions 4/10

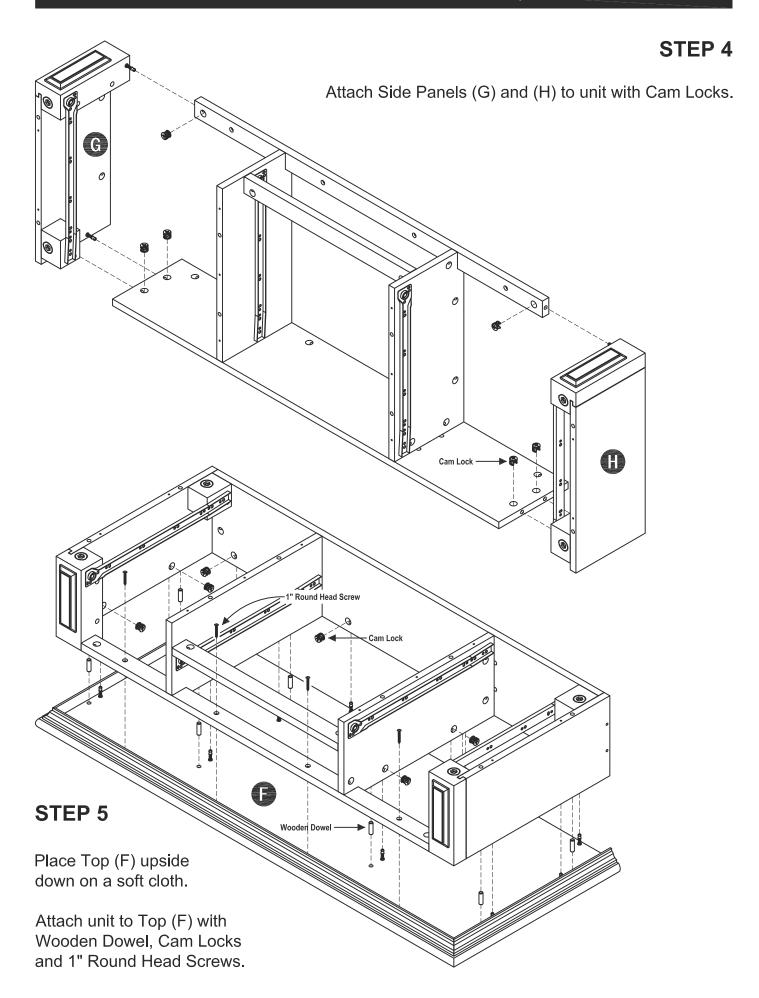

Assembly Instructions 5/10


STEP 6

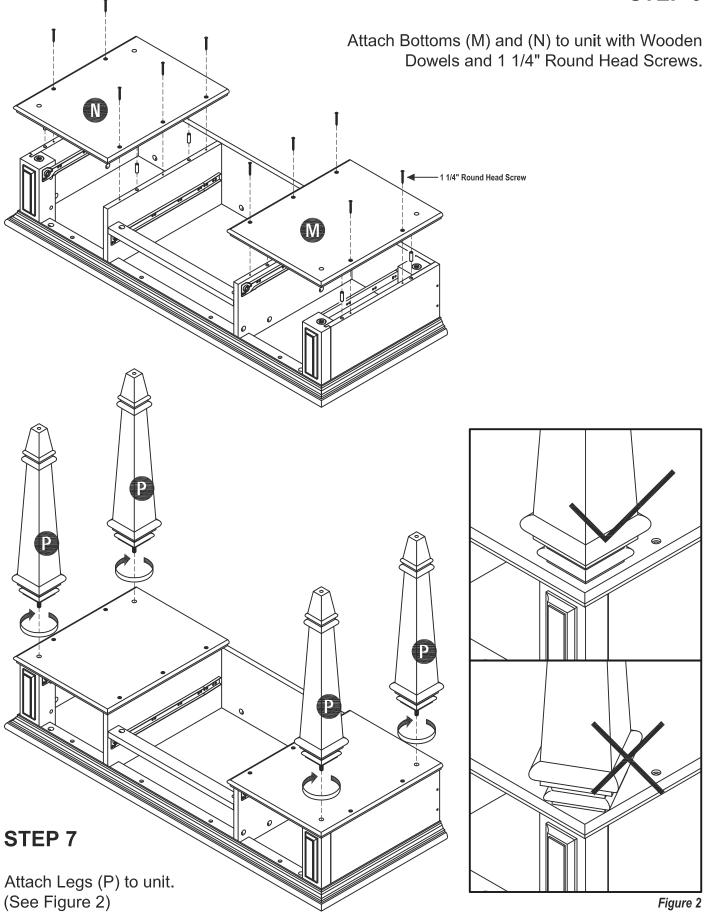

Assembly Instructions 6/10


STEP 8

Attach Mirror Supports (B) and (C) to Mirror Support (D) with 1" Round Head Screws.

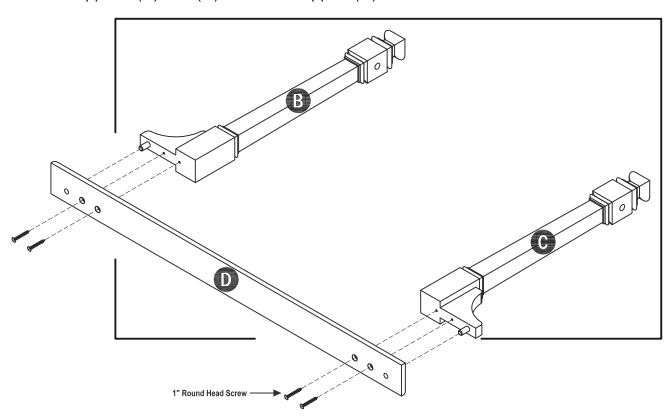

STEP 9

Attach Mirror (A) to unit with Axis Bolts, Mirror Axis and Plastic Washers. (See Figure 3)

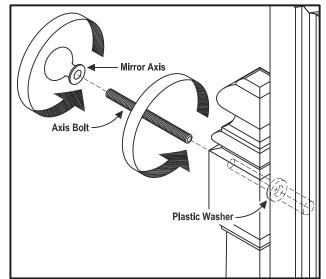


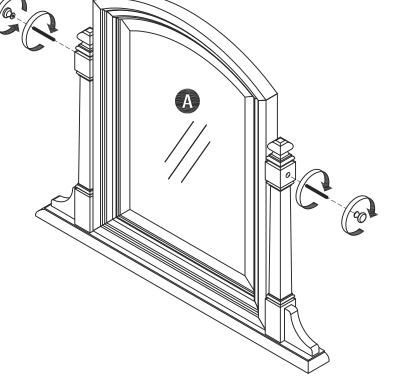


Figure 3

Assembly Instructions 7/10

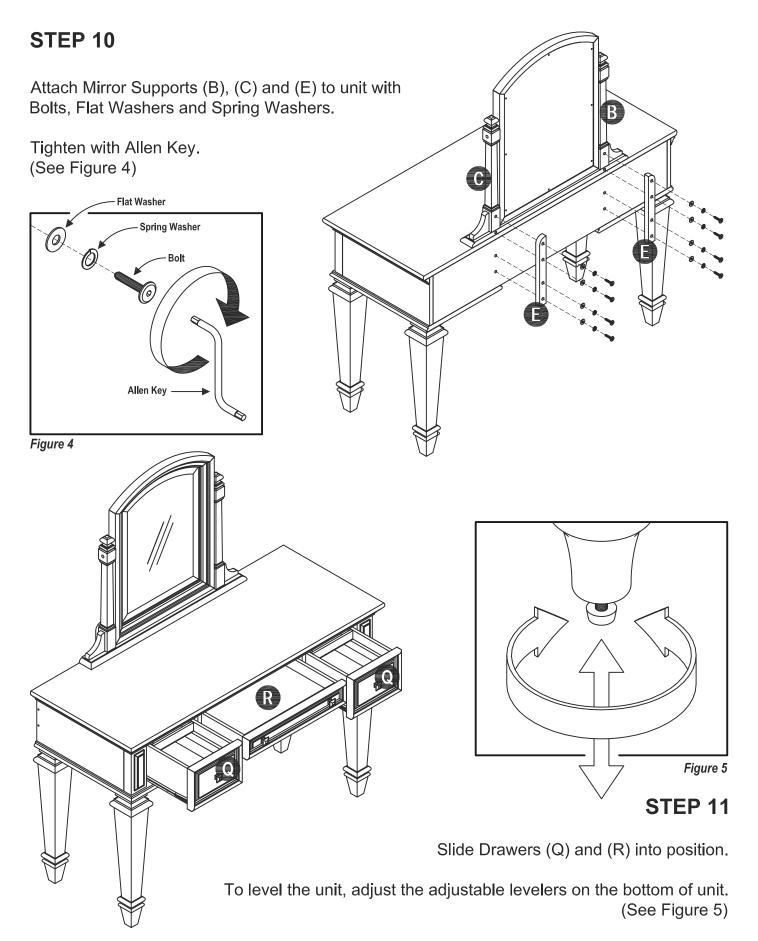


Note: Follow the steps on the next page to use 3/4" Flat Head Screws to complete drawer assembly.


Assembly Instructions 8/10

STEP 12

For Drawer (Q) loosen slightly the upper center screw and uninstall the lower center screw.

For Drawer (R) loosen slightly the two screws pre-installed on the back of the drawer fronts.

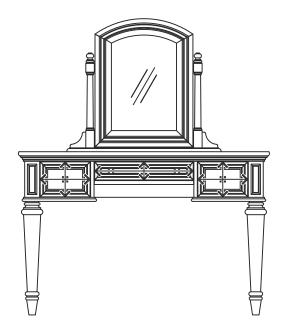

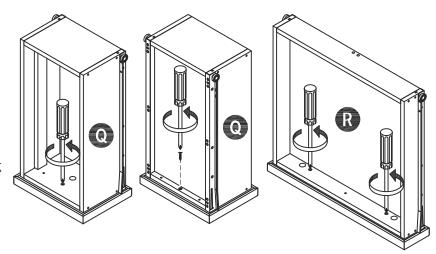


STEP 13

Insert the drawer into the main body, then adjust the drawer front panel left or right and up or down until the drawer gaps look proportional.

STEP 14


Pull the drawer open slowly and re-tighten the screws from Step 12. Make sure the front panel does not move and lock the drawer front panel into position with 3/4" Flat Head Screws.

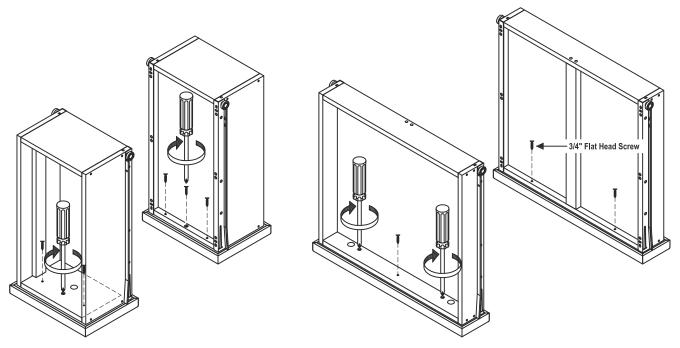


Note: These 3/4" Flat Head Screws on this page <u>must</u> be installed to complete the drawer assembly.

Assembly Instructions 9/10

Drawer (Q)

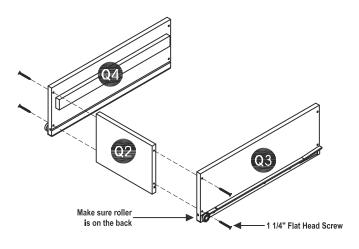

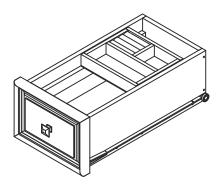

STEP 1


Attach Side Parts (Q3) and (Q4) to Back Part (Q2) with 1 1/4" Flat Head Screws.

1 1/4" Flat Head Screw

STEP 2

Insert Base Part (Q5) into the groove.

Attach Front Part (Q1) to unit with 1 1/4" Flat Head Screws.

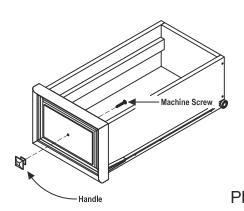


STEP 3

Attach Handle with Machine Screws.


STEP 4 Place Jewelry Box (Q6) into position.


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

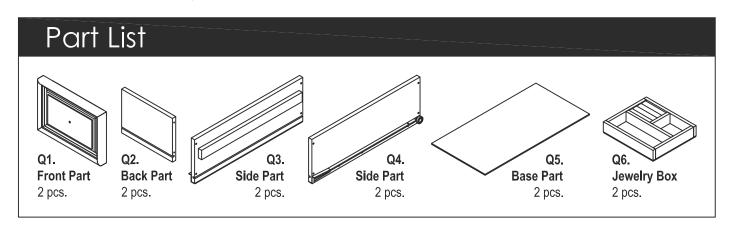

Assembly Instructions 10/10

Drawer (R)

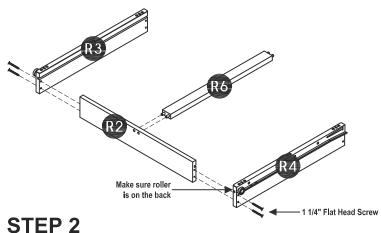

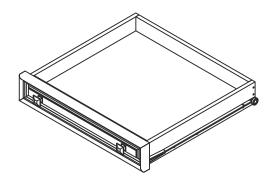

STEP 1


Attach Side Parts (R3) and (R4) to Back Part (R2) with 1 1/4" Flat Head Screws.


Attach Base Part (R6) to Back Part (R2).

SILI Z

Insert Base Part (R5) into the groove.

Attach Front Part (R1) to unit with 1 1/4" Flat Head Screws.

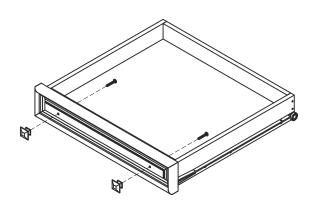


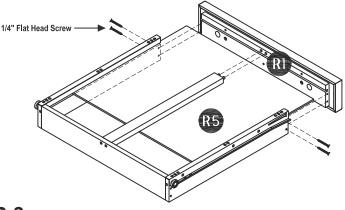

STEP 3

Attach Handles with Machine Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

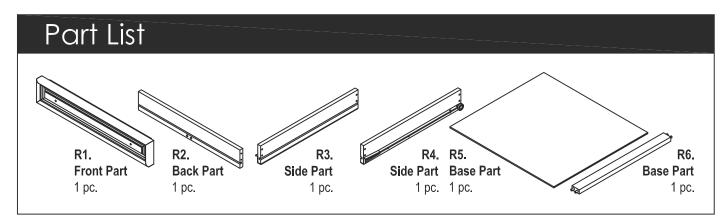

VERY IMPORTANT!!

CARE INSTRUCTIONS

NEVER-

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.

NEVER-

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES PART TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT WRITE DIRECTLY ON SURFACE.



PREVENT MARKING

DO NOT PLACE IN DIRECT SUNLIGHT.



PREVENT FADING

DO NOT USE COMMERCIAL WAXES AND POLISHES.



PREVENT YELLOWING

DO NOT PLACE HOT OBJECTS ON SURFACE.




PREVENT FINISH DAMAGE

DO NOT
USE
RUBBER
BASED
PLACE MATS.

PREVENT DISCOLORING

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.

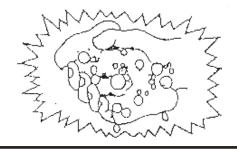

Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer_service

Home Styles Consumer Assistance: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319