88 5522 41 Chest


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.





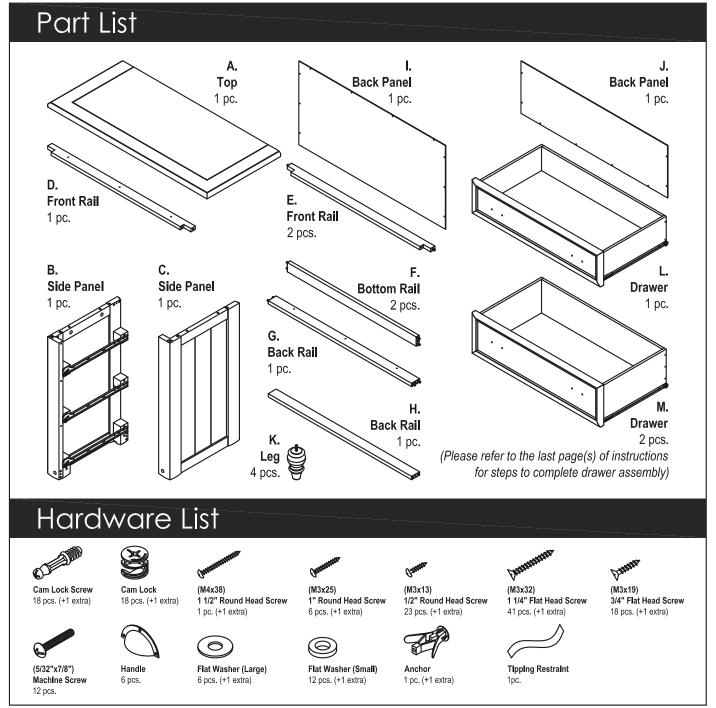

Tools Required For Assembly: Phillips screwdriver


Tools Recommended For Assembly : Level

Home Styles Consumer Assistance: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/8

IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly. Use the included adjustable levelers to level.

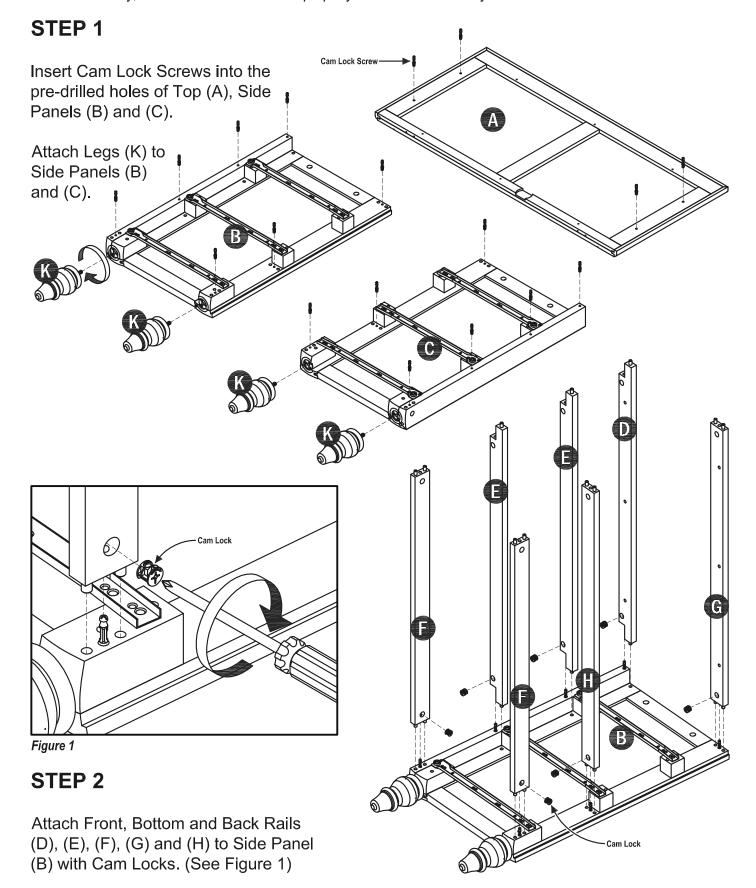

Assembly Instructions 3/8


STEP 3


Attach Side Panel (C) to unit with Cam Locks.

STEP 4

Attach Top (A) to unit with Cam Locks and 1" Round Head Screws.

Note: A Philips screwdriver 5" or less in length is recommended.

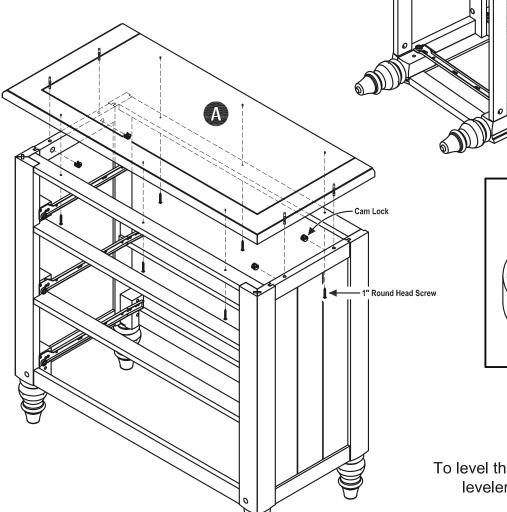

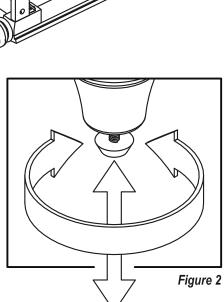


STEP 5

To level the unit, adjust the adjustable levelers on the bottom of the legs. (See Figure 2)

Note: Unit must be level to work properly.

Assembly Instructions 4/8

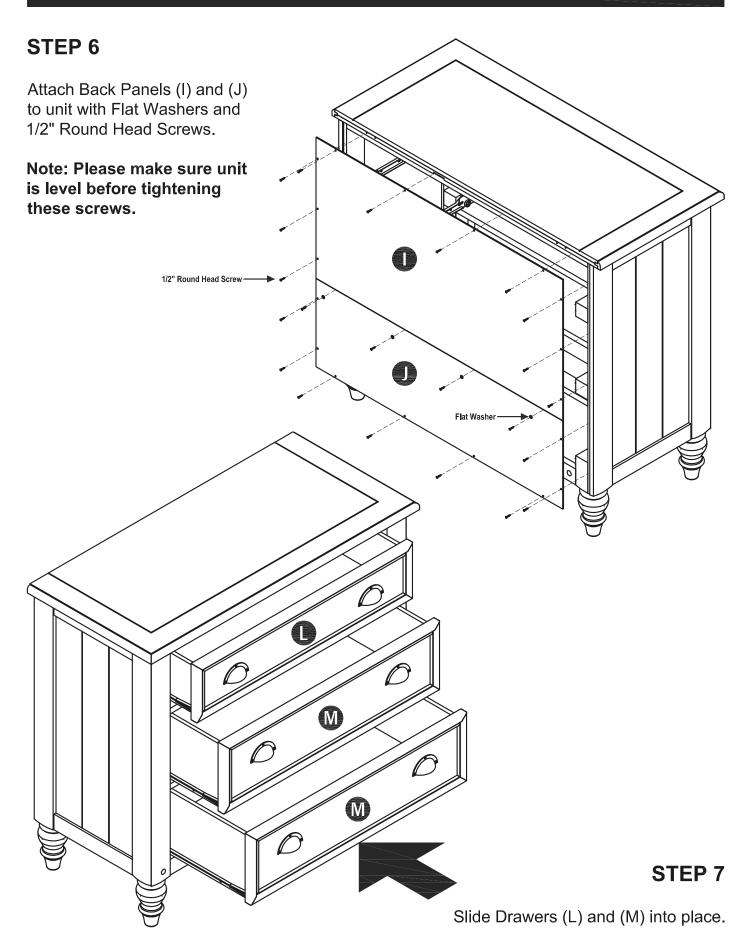


Note: Follow the steps on the next page to use 3/4" Flat Head Screws to complete drawer assembly.

Assembly Instructions 5/8

STEP 8


Loosen slightly the two screws pre-installed on the back of the drawer fronts.

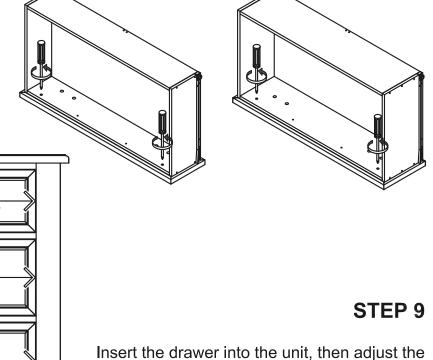

drawer front panel left or right and up or down until
the drawer gaps look proportional.

STEP 10

Pull the drawer open slowly and re-tighten the screws from Step 8. Make sure the front panel does not move and lock the drawer front panel into position with 3/4" Flat Head Screws.

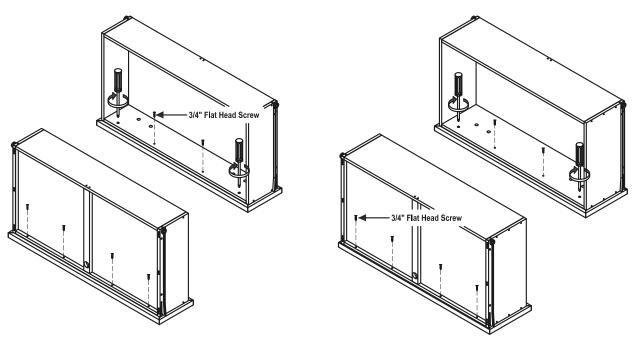


Note: These 3/4" Flat Head Screws on this page must be installed to complete the drawer assembly.


Assembly Instructions 6/8

ATTENTION!


For safety reasons, please follow these instruction to prevent the unit from tipping over.

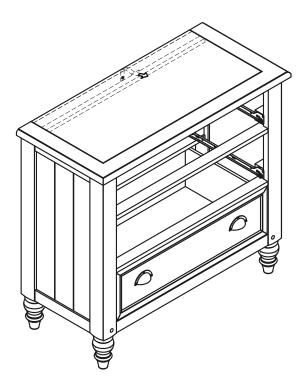


Remove Drawers (L) and (M) from unit.

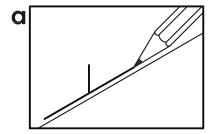


Place the unit on the wall at desired location. Mark with pencil to show the height and center of unit.

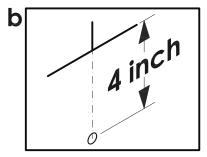


Move unit. Drill a 1/2" hole in the wall, 4 inches down and directly below the mark.

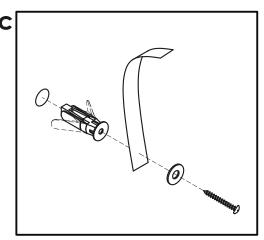


Attach Tipping Restraint to the wall using 1 1/2" Round Head Screw, Flat Washer (Large) and Anchor.

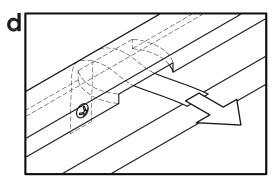

Insert Tipping Restraint to unit through the groove of Top (A).

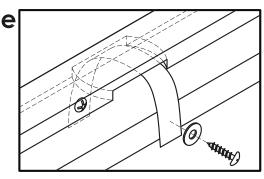


Screw Tipping Restraint to unit using 1/2" Round Head Screw and Flat Washer.

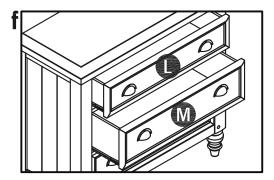


Insert Drawers (L) and (M) into unit.


Assembly Instructions 7/8

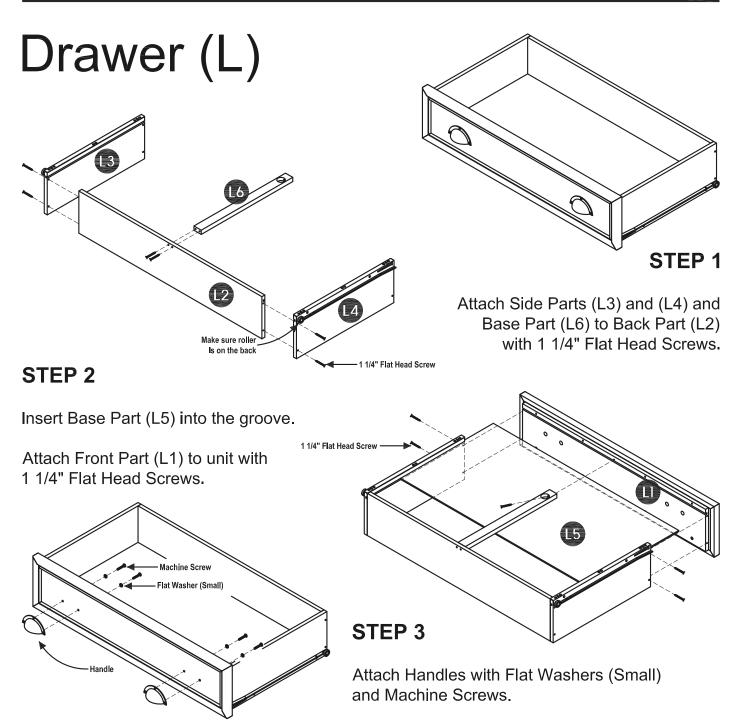


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

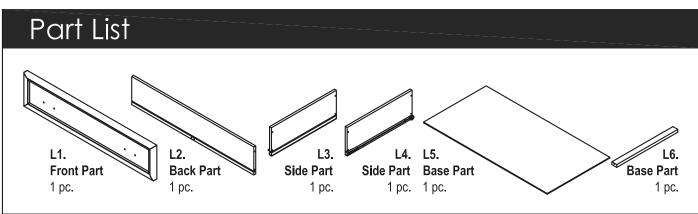

Assembly Instructions 8/8

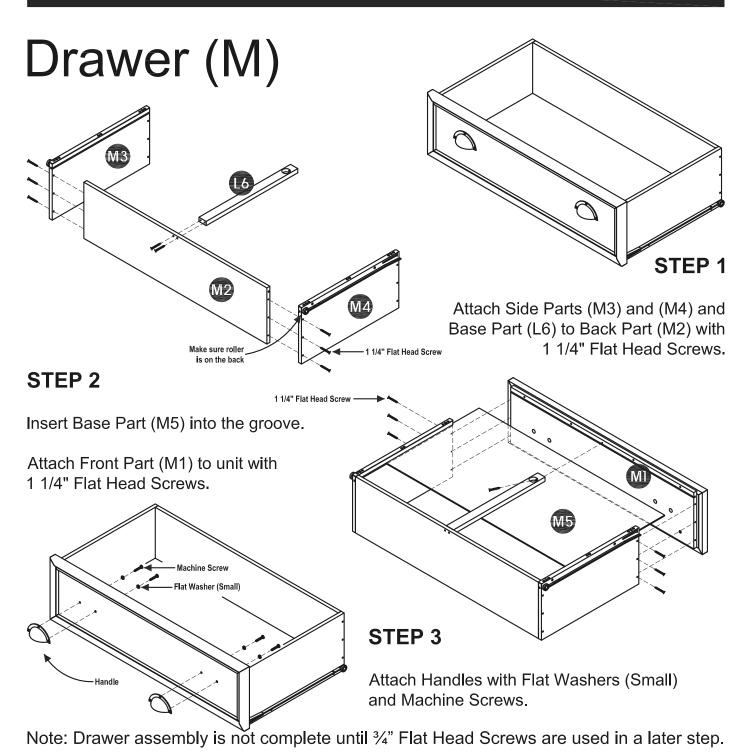

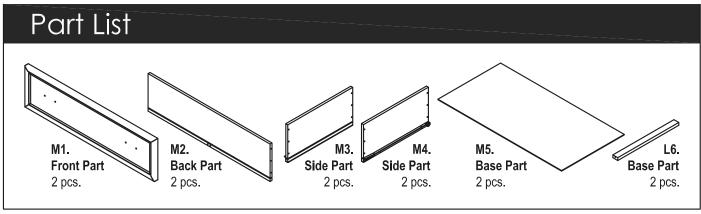

VERY IMPORTANT!!

CARE INSTRUCTIONS

NEVER-

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.

NEVER-

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES PART TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT WRITE DIRECTLY ON SURFACE.



PREVENT MARKING

DO NOT PLACE IN DIRECT SUNLIGHT.



PREVENT FADING

DO NOT USE COMMERCIAL WAXES AND POLISHES.



PREVENT YELLOWING DO NOT PLACE HOT OBJECTS ON SURFACE.




PREVENT FINISH DAMAGE

DO NOT
USE
RUBBER (
BASED
PLACE MATS

PREVENT DISCOLORING

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.

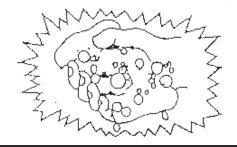

Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer_service

Home Styles Consumer Assistance: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319