
#### 88 5543 00


### Bermuda Media Hutch

#### **IMPORTANT NOTE**

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

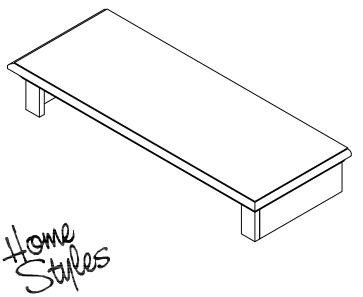

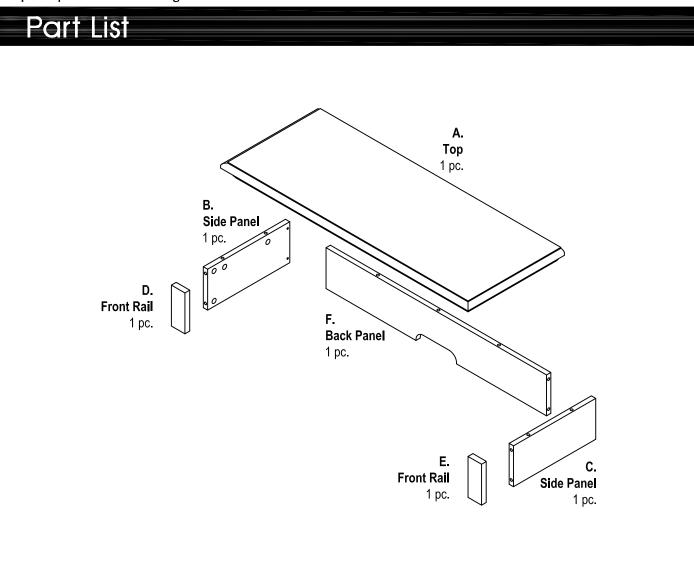

#### Hardware List





Tools Required For Assembly: Phillips screwdriver

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com


### Assembly Instructions 2/3


#### **IMPORTANT**

\* Use a soft cloth between these parts and the floor.

#### STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Top (A), Side Panels (B) and (C) and Front Rails (D) and (E).

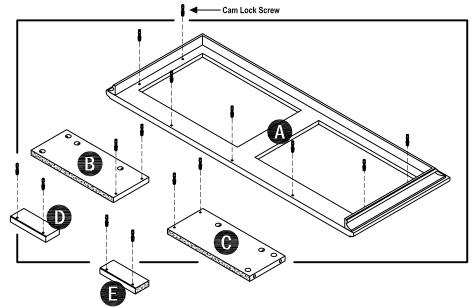


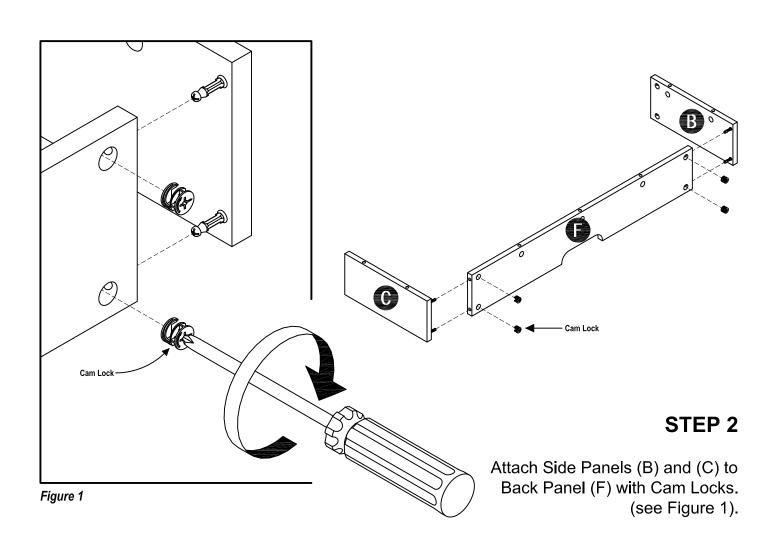

### Assembly Instructions 3/3


#### STEP 3

Attach Front Rails (D) and (E) to unit with Cam Locks.

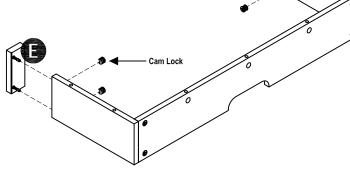

#### STEP 4

Attach Top (A) to unit with Cam Locks.

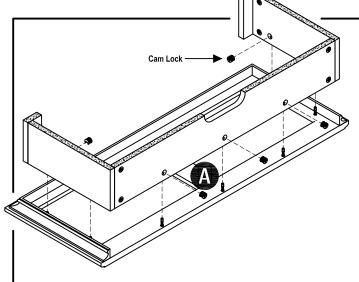



#### STEP 5

Place the unit on the top of Bermuda Chest (carton 88 5543 41)

# **VERY IMPORTANT!!**

**CARE INSTRUCTIONS** 

### **NEVER**

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

### **NEVER**

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES WOOD TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT WRITE DIRECTLY ON SURFACE.



PREVENT MARKING

DO NOT PLACE IN DIRECT SUNLIGHT.



PREVENT FADING

DO NOT USE COMMERCIAL WAXES AND POLISHES.



PREVENT YELLOWING

DO NOT PLACE HOT OBJECTS ON SURFACE.



PREVENT FINISH DAMAGE

DO NOT
USE
RUBBER (
BASED
PLACE MATS.



## **TO CLEAN**

USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.

