

88 5543 5011


Bermuda Queen Headboard

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home
Styles

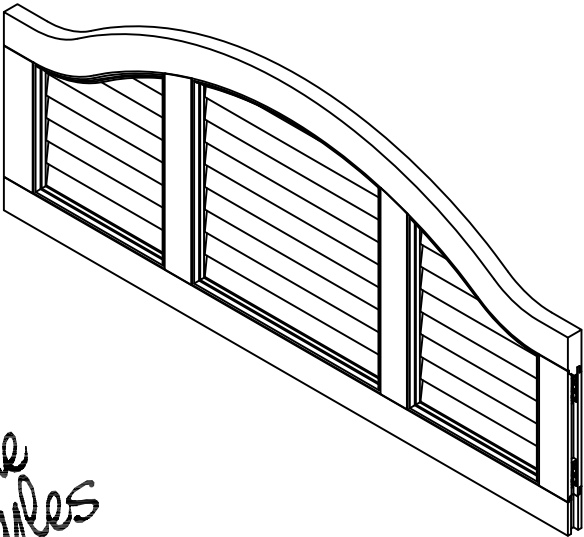

Part List

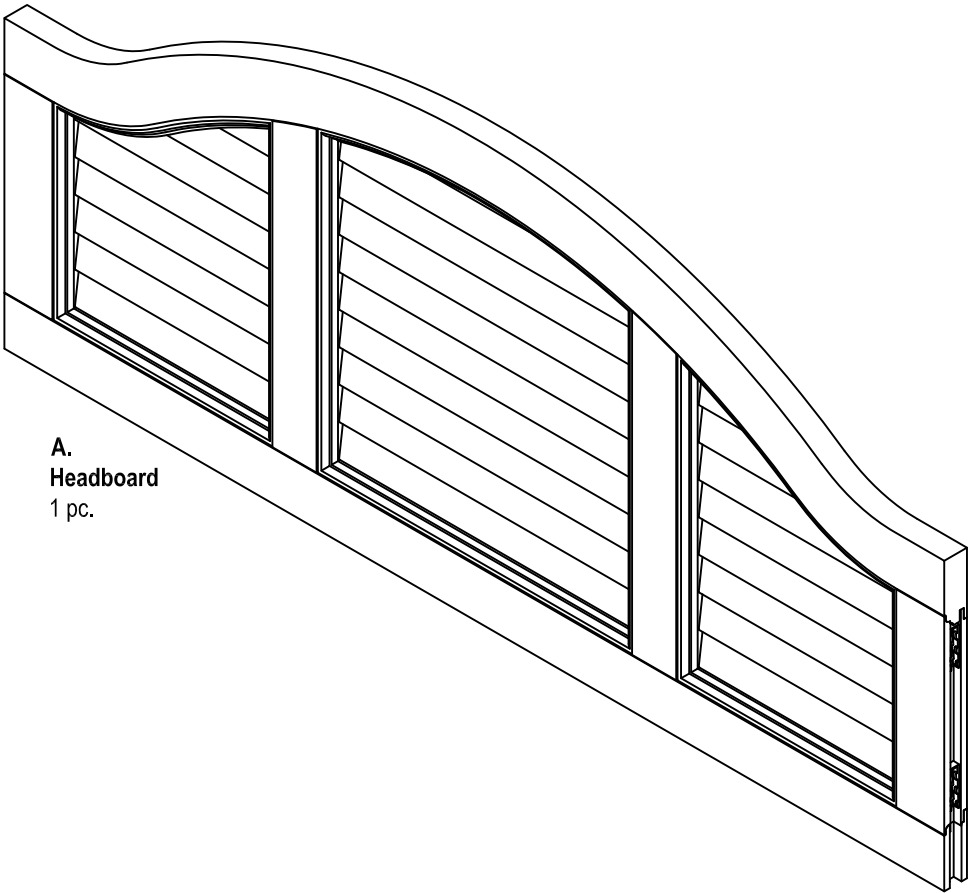

A.
Headboard
1 pc.

For assembly see instructions in carton 88 5543 5012

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

88 5543 5012


Bermuda Queen Headboard

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home
Styles

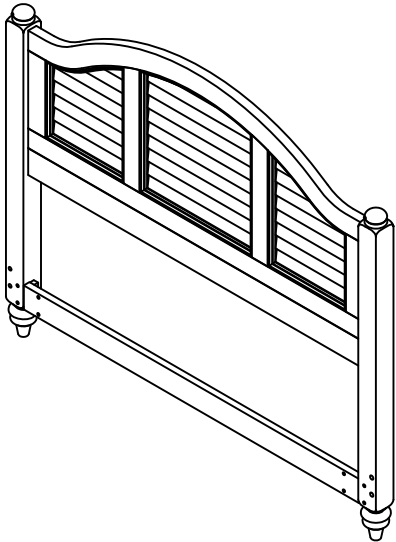


Part List



 
B.
Post
1 pc.



C.
Post
1 pc.

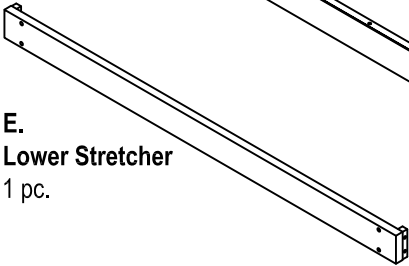

E.
Lower Stretcher
1 pc.

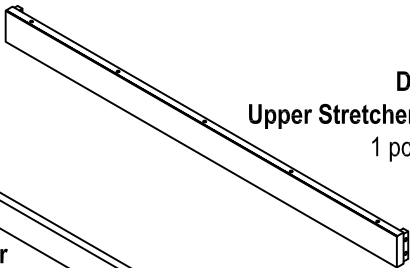

D.
Upper Stretcher
1 pc.



F.
Leg
2 pcs.

 
Hardware List



Cam Lock Screw
5 pcs. (+1 extra)




Cam Lock
5 pcs. (+1 extra)



Bolt
8 pcs. (+1 extra)



 Flat Washer
8 pcs. (+1 extra)



Key Wrench
1 pc.




Small Key Wrench
1 pc.

For assembly also need the following :

88 5543 5011 Bermuda Queen Headboard Panel

Carton quantity: 1

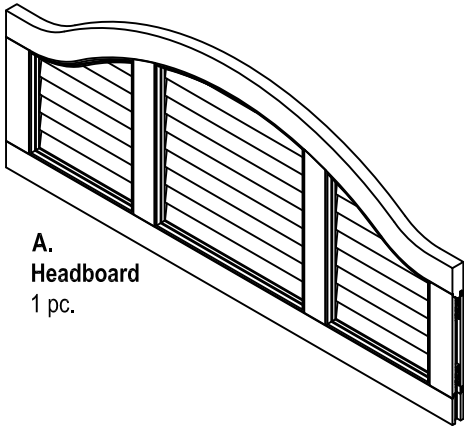

A.
Headboard
1 pc.

Tools Required For Assembly : Phillips screwdriver

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319


Assembly Instructions 2/3

IMPORTANT

- * Do not tighten up all the bolts until each part is properly assembled.
- * You should keep Key Wrench in a safe place as you may need to tighten up the bolts in the future.


STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Headboard (A).

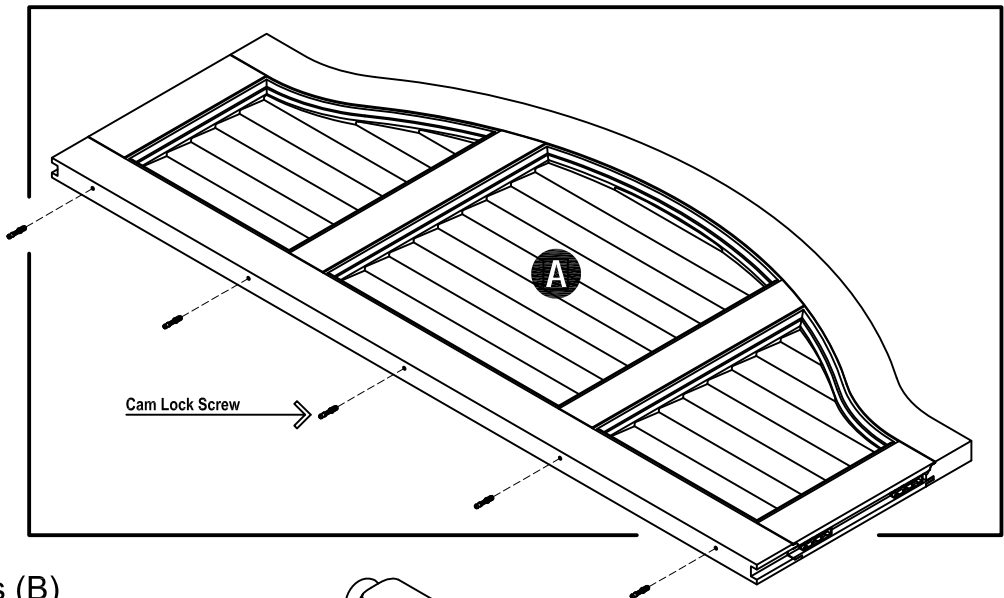

STEP 2

Attach Leg (F) to the Posts (B) and (C).

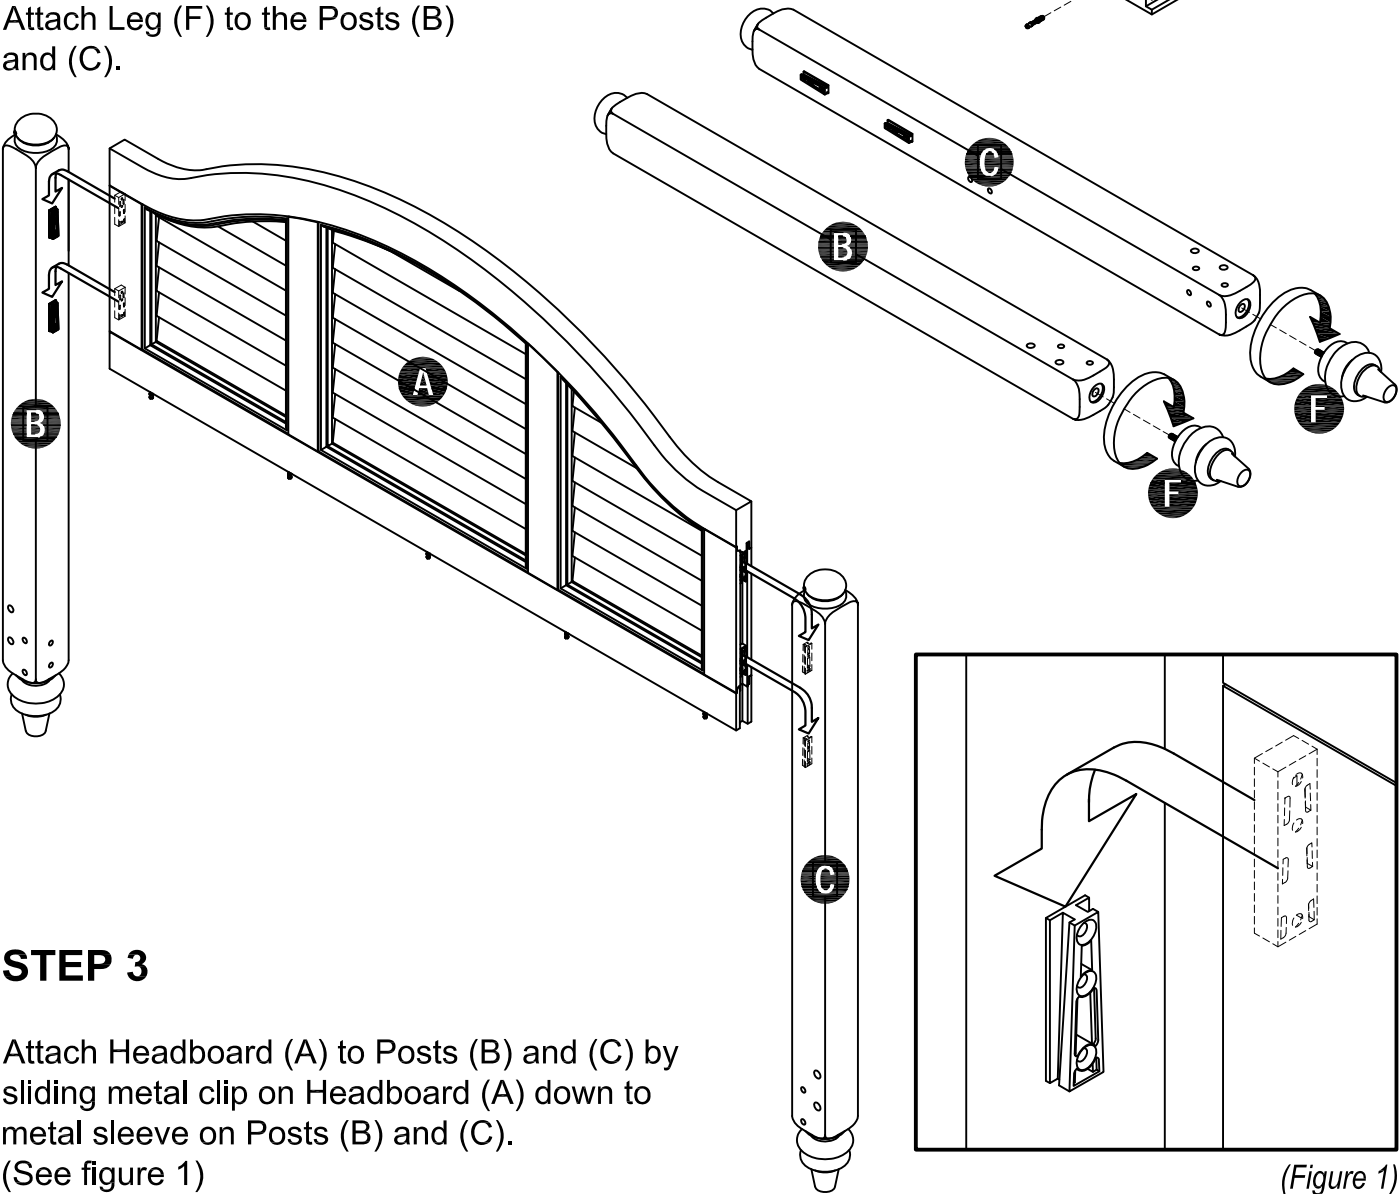

STEP 3



Attach Headboard (A) to Posts (B) and (C) by sliding metal clip on Headboard (A) down to metal sleeve on Posts (B) and (C). (See figure 1)

(Figure 1)

Assembly Instructions 3/3

STEP 4


Attach Upper Stretcher (D) to unit using Cam Locks.
(See figure 2)

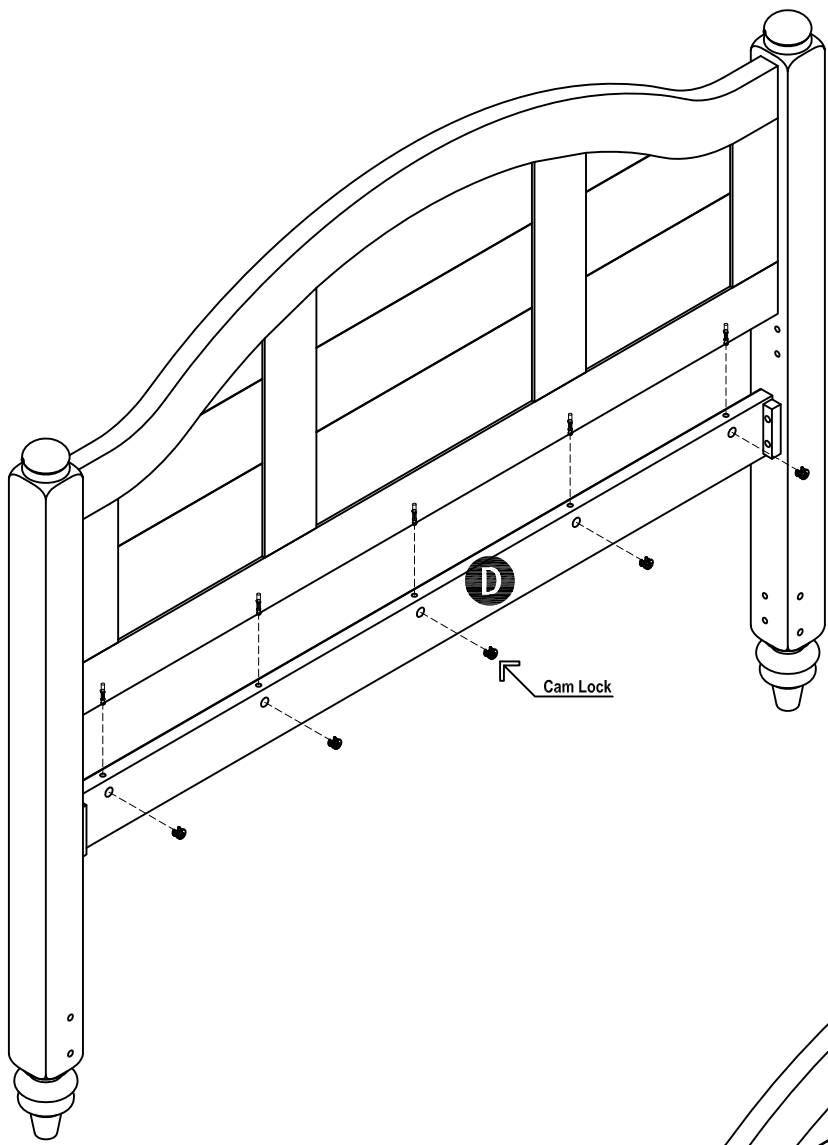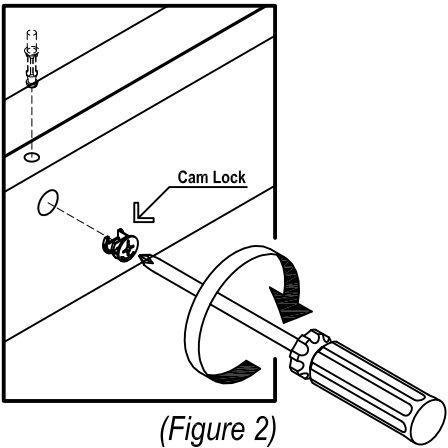


STEP 5

Attach Lower Stretcher (E) to unit with Bolts and Flat Washers.

Turn Bolt clockwise using Key Wrench.
(See figure 3)

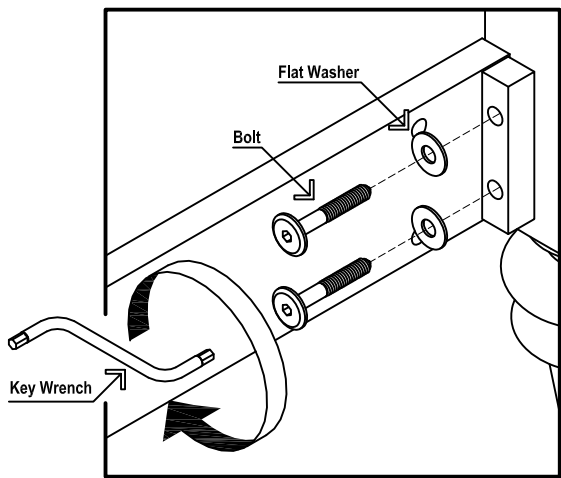

(Figure 3)

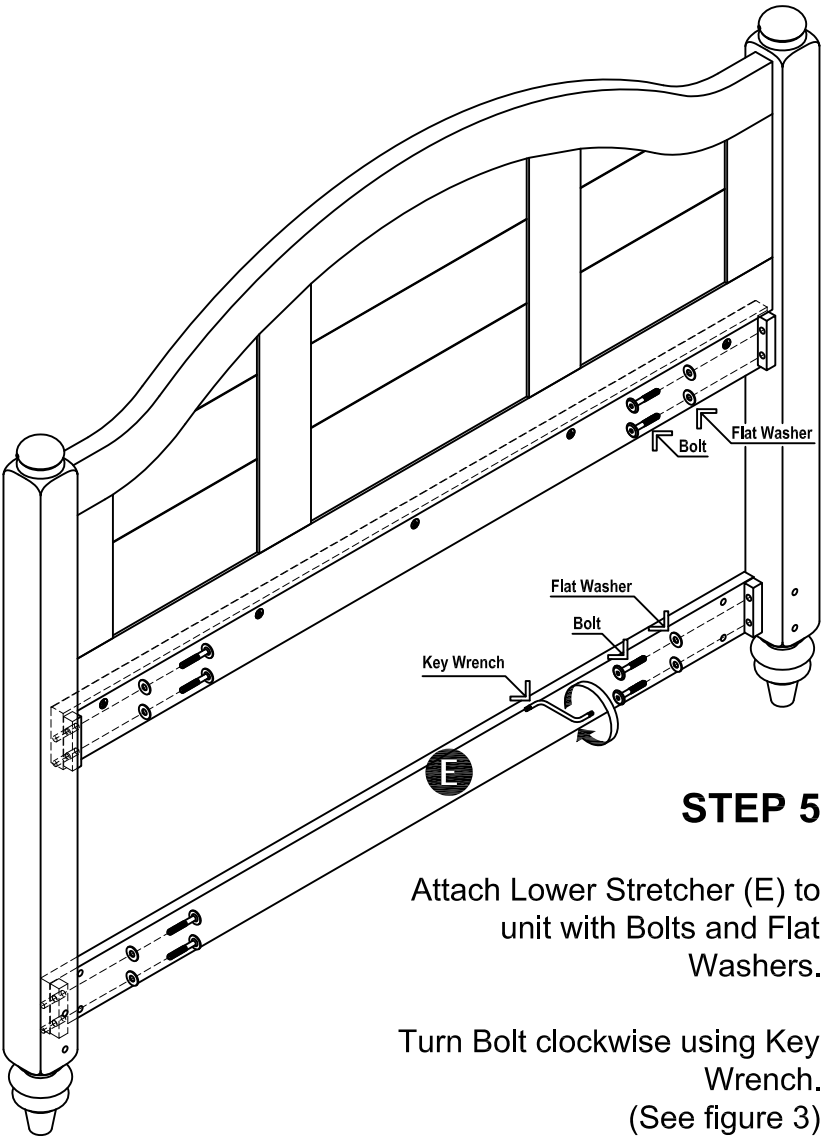

VERY IMPORTANT !!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES WOOD TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT
WRITE
DIRECTLY
ON
SURFACE.



**PREVENT
MARKING**

DO NOT
PLACE IN
DIRECT
SUNLIGHT.



**PREVENT
FADING**

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES.



**PREVENT
YELLOWING**

DO NOT
PLACE HOT
OBJECTS
ON SURFACE.



**PREVENT
FINISH DAMAGE**

DO NOT
USE
RUBBER
BASED
PLACE MATS.



**PREVENT
DISCOLORING**

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer_service

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319