

88 5549 101

 
Entertainment Credenza

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home
Styles

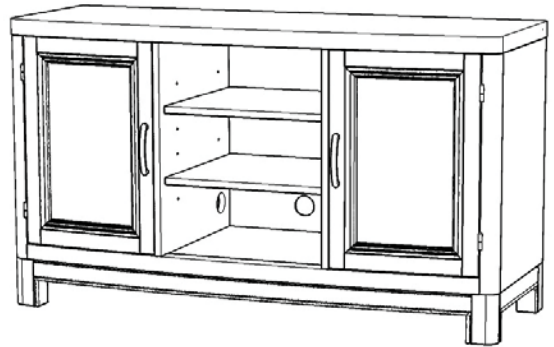

Part List

 

 
A.
Top
1 Pc.

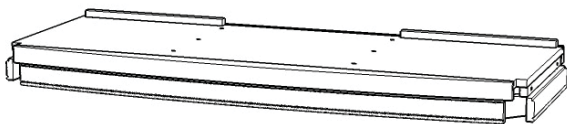


L.
Base
1 Pc.



 
I.
Shelf
4 Pcs.

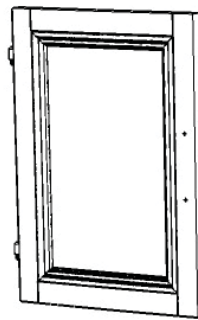

 J.
Door
1 Pc.

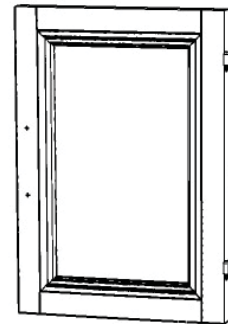

 
K.
Door
1 Pc.




M.
Leg
1 Pc.



 N.
Leg
1 Pc.




 O.
Leg
1 Pc.



P.
Leg
1 Pc.

 
Hardware List

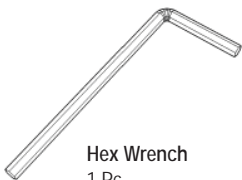

Hex Wrench
1 Pc.



 Cam Lock
12 Pcs. (+4 extra)



M6x25
Head Cap Bolt (short)
4 Pcs. (+1 extra)



Flat Washer
8 Pcs. (+1 extra)



 
M3x15
Tapered Wood Screw
4 Pcs. (+1 extra)



M3x15
Wood Screw
12 Pcs. (+1 extra)




Pull Handle
2 Pcs.



Small Hex Wrench
1 Pc.



 
Cam Lock Screw
12 Pcs. (+1 extra)



M6x50
Head Cap Bolt (long)
8 Pcs. (+1 extra)



 Spring Washer
8 Pcs. (+1 extra)



Magnet
2 Pcs.



Adjustable Pin
24 Pcs.



M4x25
Machine Screw
4 Pcs.

For assembly see instructions in carton 88 5549 102

Tools required for assembly : Phillips screwdriver

Tools recommended for assembly : Level

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

88 5549 102

 
Entertainment Credenza

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home
Styles

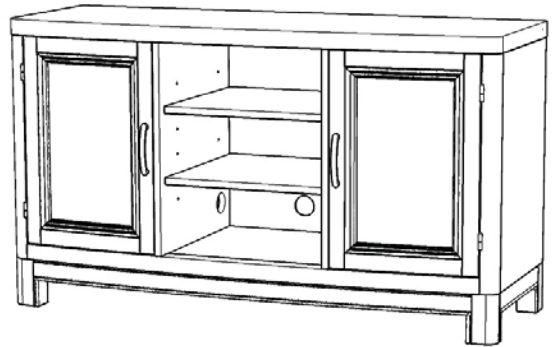


Part List

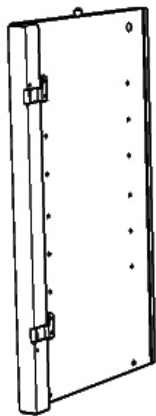 

B.
Side Panel
1 Pc.



 
C.
Side Panel
1 Pc.

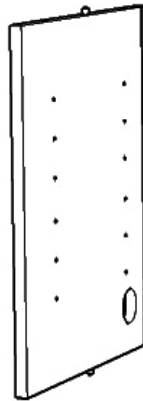


D.
Middle Panel
1 Pc.



 
E.
Middle Panel
1 Pc.



 H.
Shelf
2 Pcs.

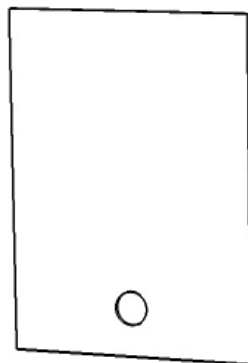

 F.
Back Panel
2 Pcs.

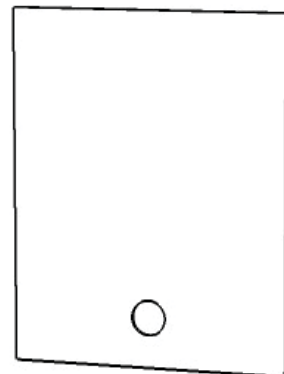

G.
Back Panel
1 Pc.

Also need the following from carton 88 5549 101 :

Tools required for assembly : Phillips screwdriver

Tools recommended for assembly : Level

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 3/4

IMPORTANT

* Please keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.

* Do not tighten up all the bolts until each part is properly assembled.

* Use a soft cloth between these parts and the floor.

* After assembly item must be level to work properly. Use the included adjustable levelers to level.

STEP 1

Place Base (L) upside down on a soft cloth then attach Legs (M), (N), (O) and (P) to Base (L) with Flat Washers, Spring Washers and Head Cap Bolts (long).

(See Figure 1)


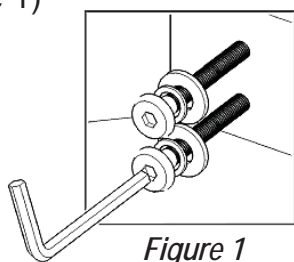 


Figure 1

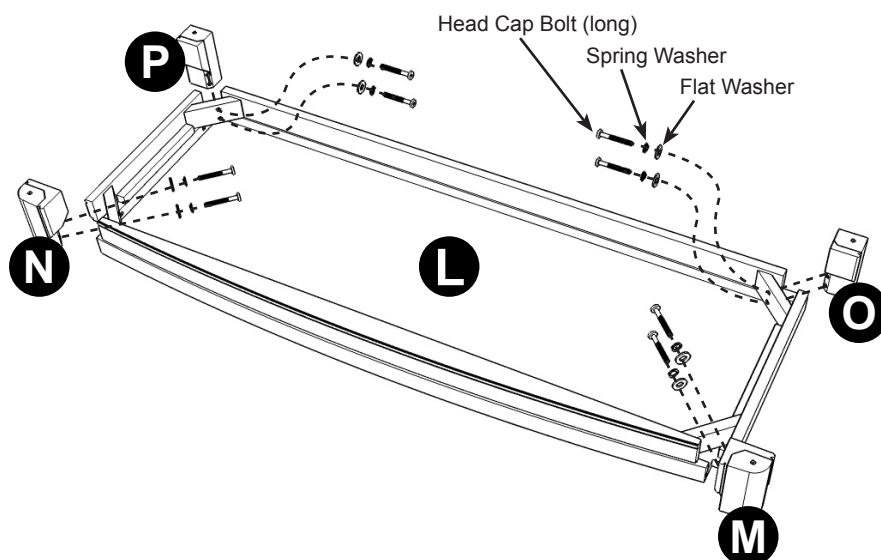 

STEP 2

Turn the unit over to its' upright position.

Insert Cam Lock Screws into pre-drilled holes of the unit and Top (A).

(See Figure 2)

Attach Magnet to Top (A) with Tapered Wood Screws. (See Figure 3)

 
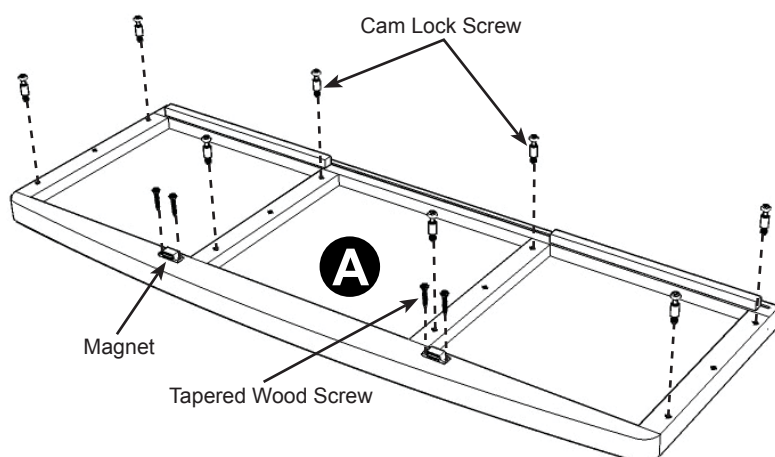 
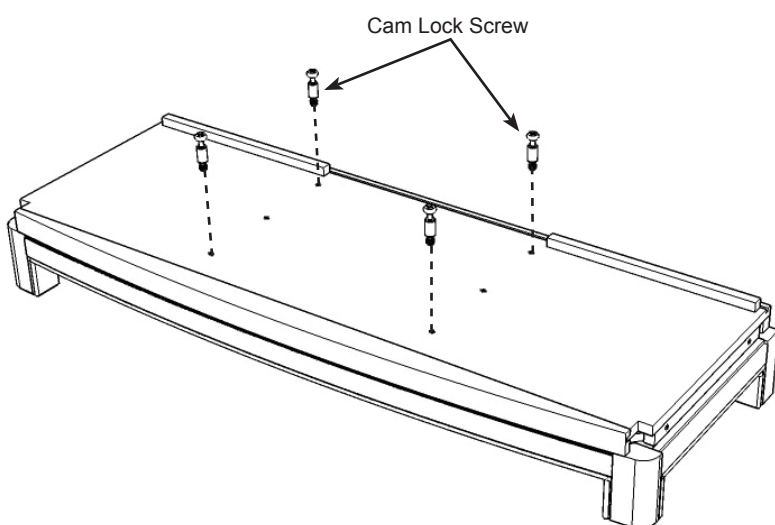 


Figure 2


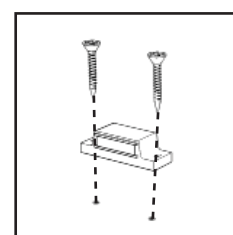 


Figure 3

STEP 3

 Attach Side Panels (B) and (C) with Head Cap Bolts (short).

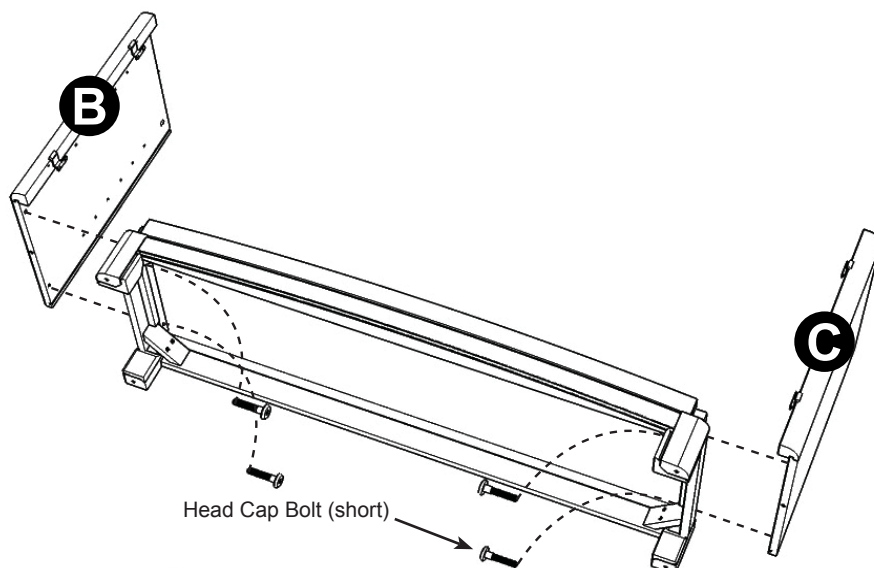

STEP 4

Turn the unit over to its' upright position.

Attach Middle Panels (D) and (E) to the unit with Cam Locks.
(See Figure 4)

Slide Back Panels (F) and (G) into position.

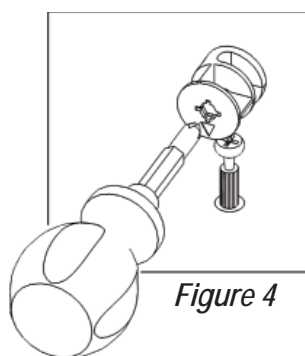 
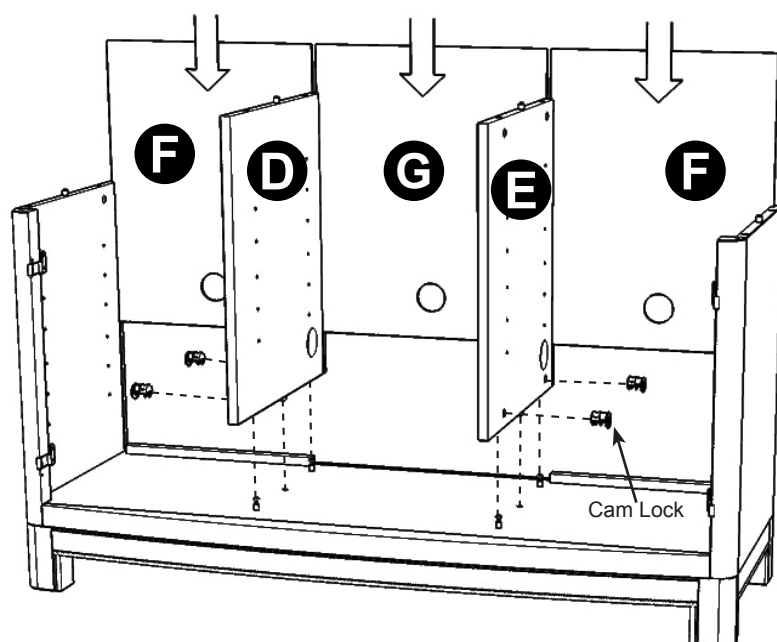 



Figure 4

STEP 5

Attach Top (A) to the unit with Cam Locks.

Insert Adjustable Pins into side panels and middle panels at the desired level.

 Place Shelves (H) and (I) into position.

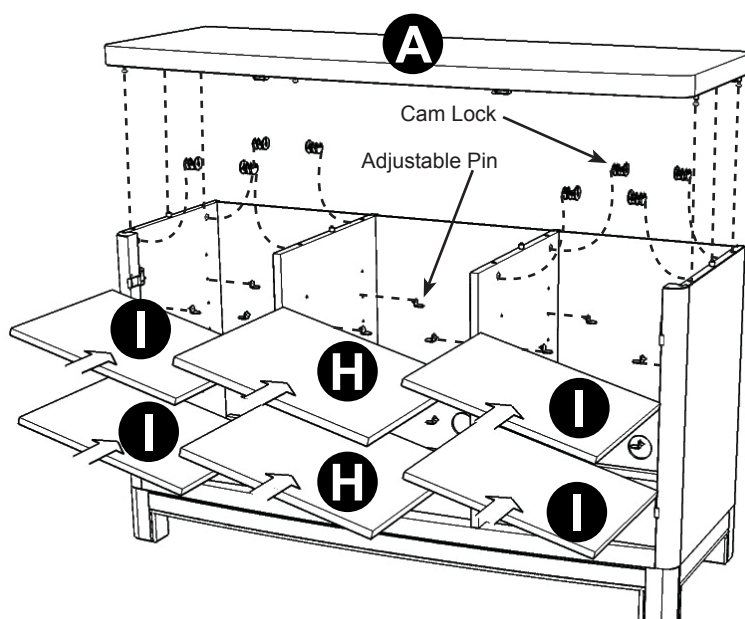

STEP 6

Attach Pull Handles to Doors (J) and (K) with Machine Screws. (See Figure 5)

Attach Doors (J) and (K) to unit by sliding the door life hinges into the side panel lift hinges. (See Figure 6)

Level the unit by adjusting the adjustable levelers on the bottom of the legs. (See Figure 7)

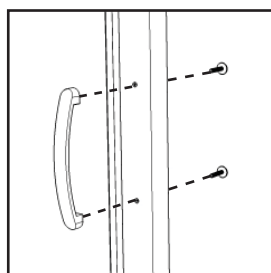 
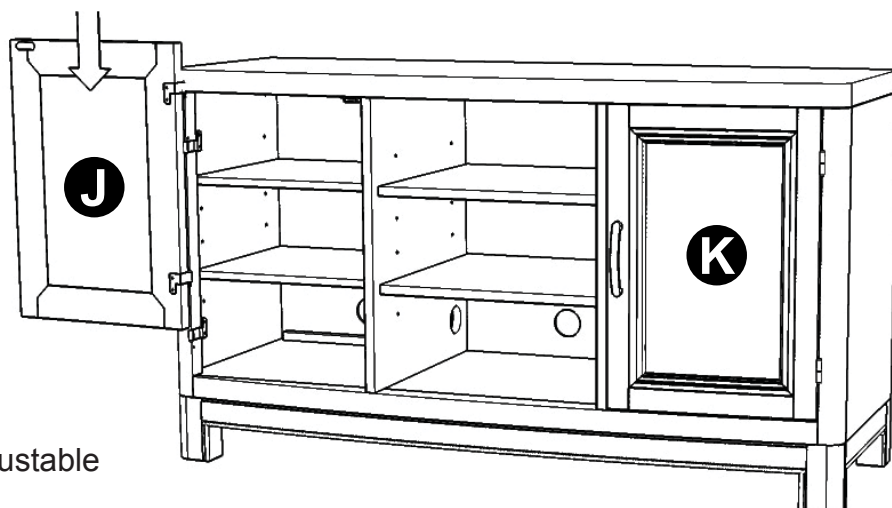 


Figure 5

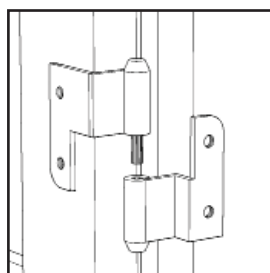 


Figure 6


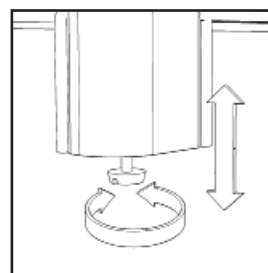 


Figure 7

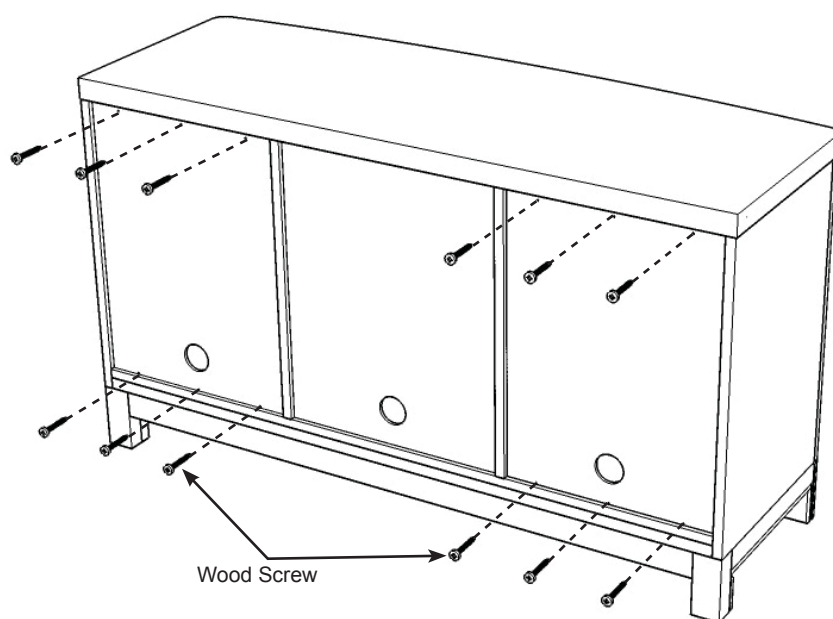 

Wood Screw

STEP 7

Insert Wood Screws into the pre-drilled holes in the back panel.

Note : Please make sure unit is level before tightening these screws.