

88 5549 651


Pantry

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home
Styles

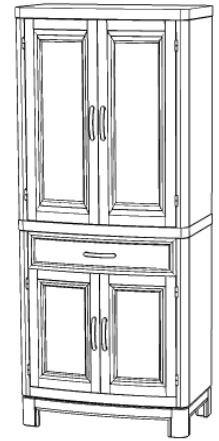

Part List

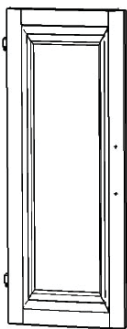


H.
Door
1 Pc.

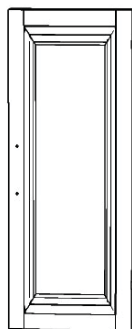


I.
Door
1 Pc.



 
B.
Side Panel
1 Pc.




C.
Side Panel
1 Pc.

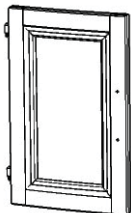


P.
Door
1 Pc.

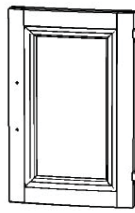

 Q.
Door
1 Pc.



 K.
Side Panel
1 Pc.



L.
Side Panel
1 Pc.

 
Hardware List



Hex Wrench
1 Pc.




Cam Lock
22 Pcs. (+6 extra)



Magnet
4 Pcs.



 M3x15
Wood Screw (short)
30 Pcs. (+1 extra)



M6x25
Head Cap Bolt (short)
4 Pcs. (+1 extra)



Adjustable Pin
16 Pcs.



Pull Handle
5 Pcs.



Small Hex Wrench
1 Pc.



 
Cam Lock Screw
22 Pcs. (+2 extra)



M3x15
Wood Screw
for Magnet
8 Pcs. (+1 extra)



M3x20
Wood Screw (long)
8 Pcs. (+1 extra)



M6x50
Head Cap Bolt (long)
8 Pcs. (+1 extra)



Spring Washer
8 Pcs. (+1 extra)



Flat Washer
8 Pcs. (+1 extra)



M4x25
Machine Screw
10 Pcs.

For assembly see instructions in carton 88 5549 652

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319