

88 5575 42


Night Stand

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home
Styles

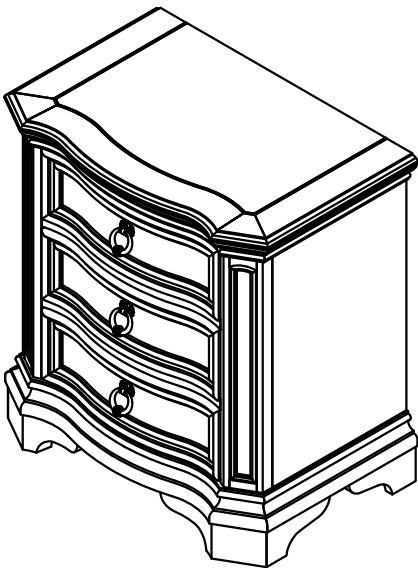

Part List

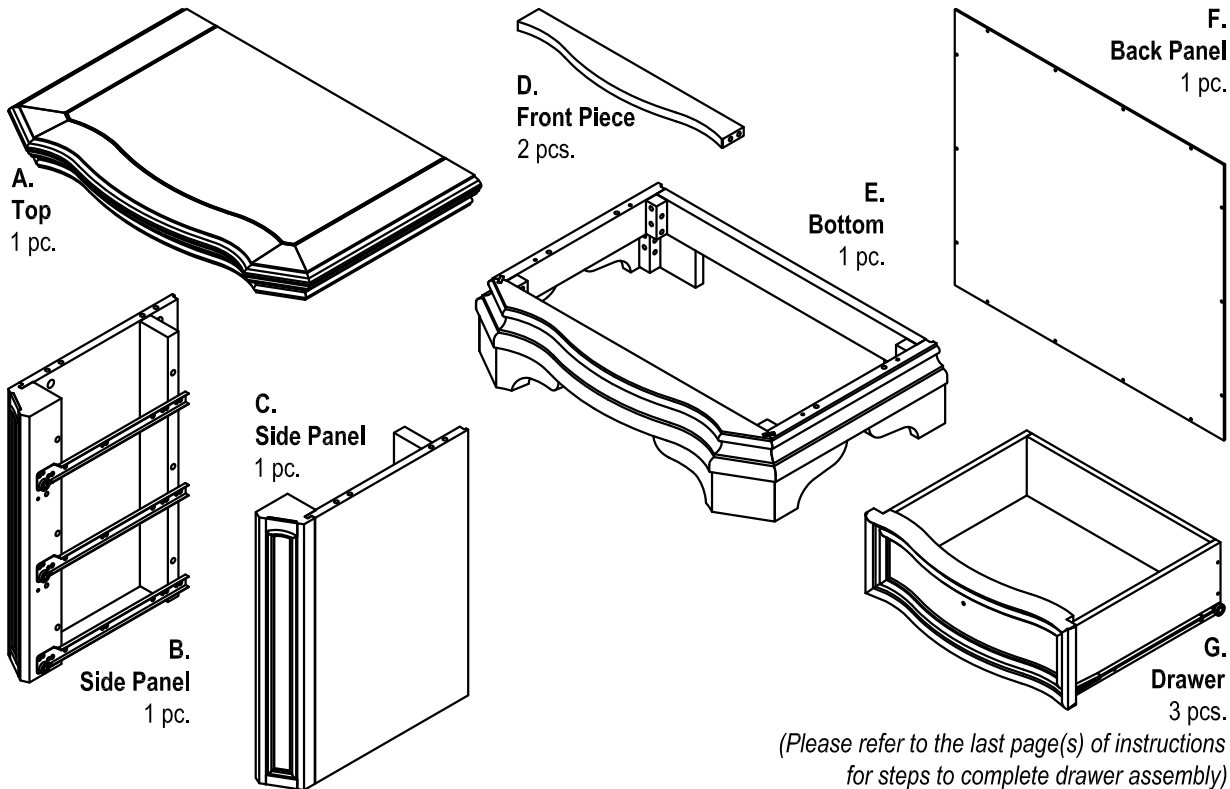

Hardware List



Cam Lock Screw
8 pcs. (+1 extra)



Cam Lock
8 pcs. (+1 extra)



(M4x76)
3" Flat Head Screw
4 pcs. (+1 extra)



(M3x13)
1/2" Flat Head Screw
14 pcs. (+1 extra)



(M3x32)
1 1/4" Flat Head Screw
24 pcs. (+1 extra)



Handle
3 pcs.



(5/32"x5/8")
Machine Screw
3 pcs.



Wooden Dowel
8 pcs. (+1 extra)

Tools Required For Assembly : Phillips screwdriver

Tools Recommended For Assembly : Level

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/5

IMPORTANT

- * Do not tighten up all the screws and bolts until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly. Use the included adjustable levellers to level.

STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Top (A) and Side Panels (B) and (C).



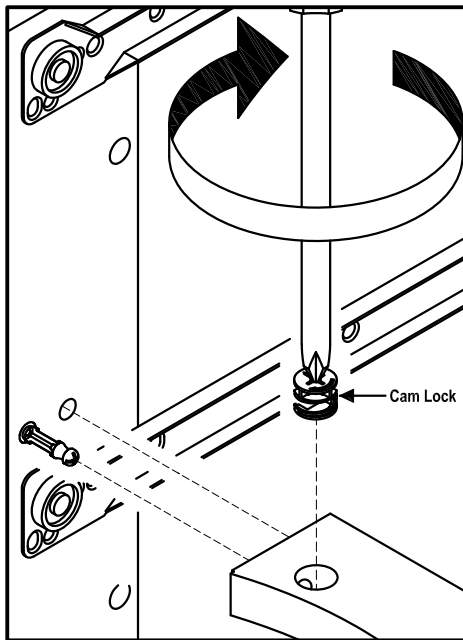


Figure 1

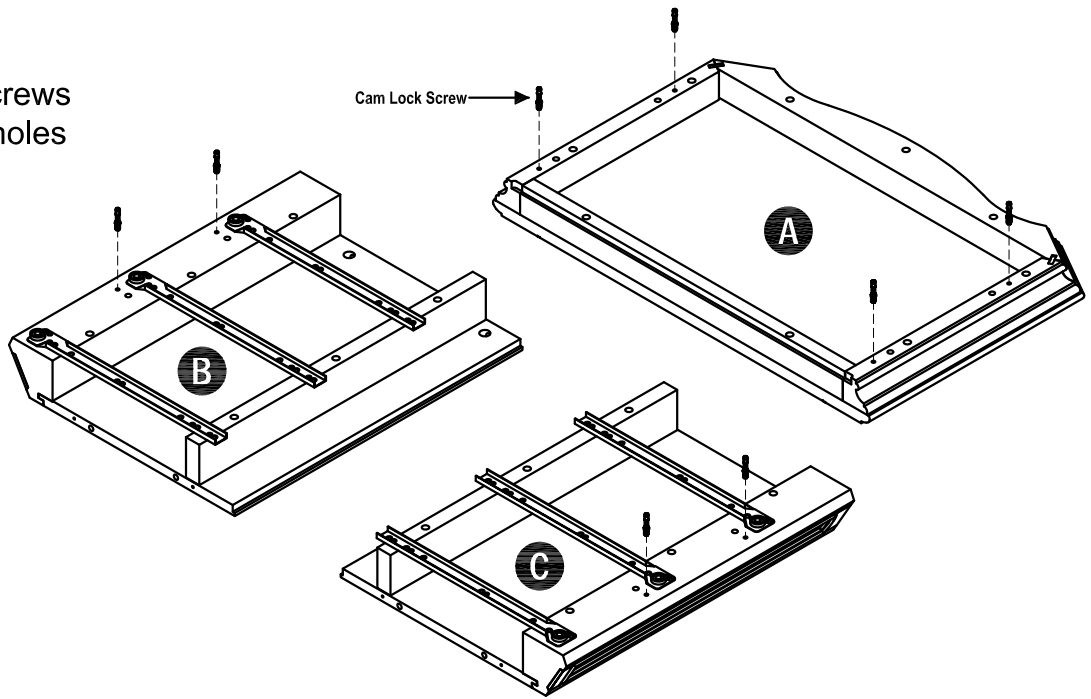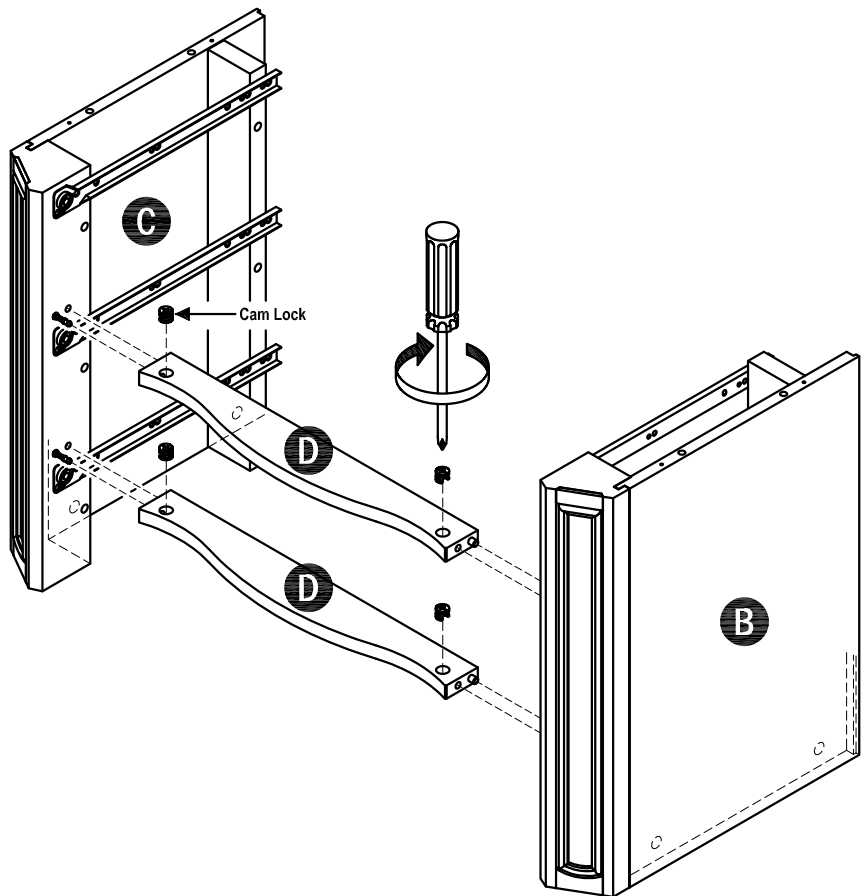


STEP 2

Attach Side Panels (B) and (C) to Front Pieces (D) with Cam Locks. (See Figure 1)

STEP 3

Attach Bottom (E) to unit with Wooden Dowels and 3" Round Head Screws.

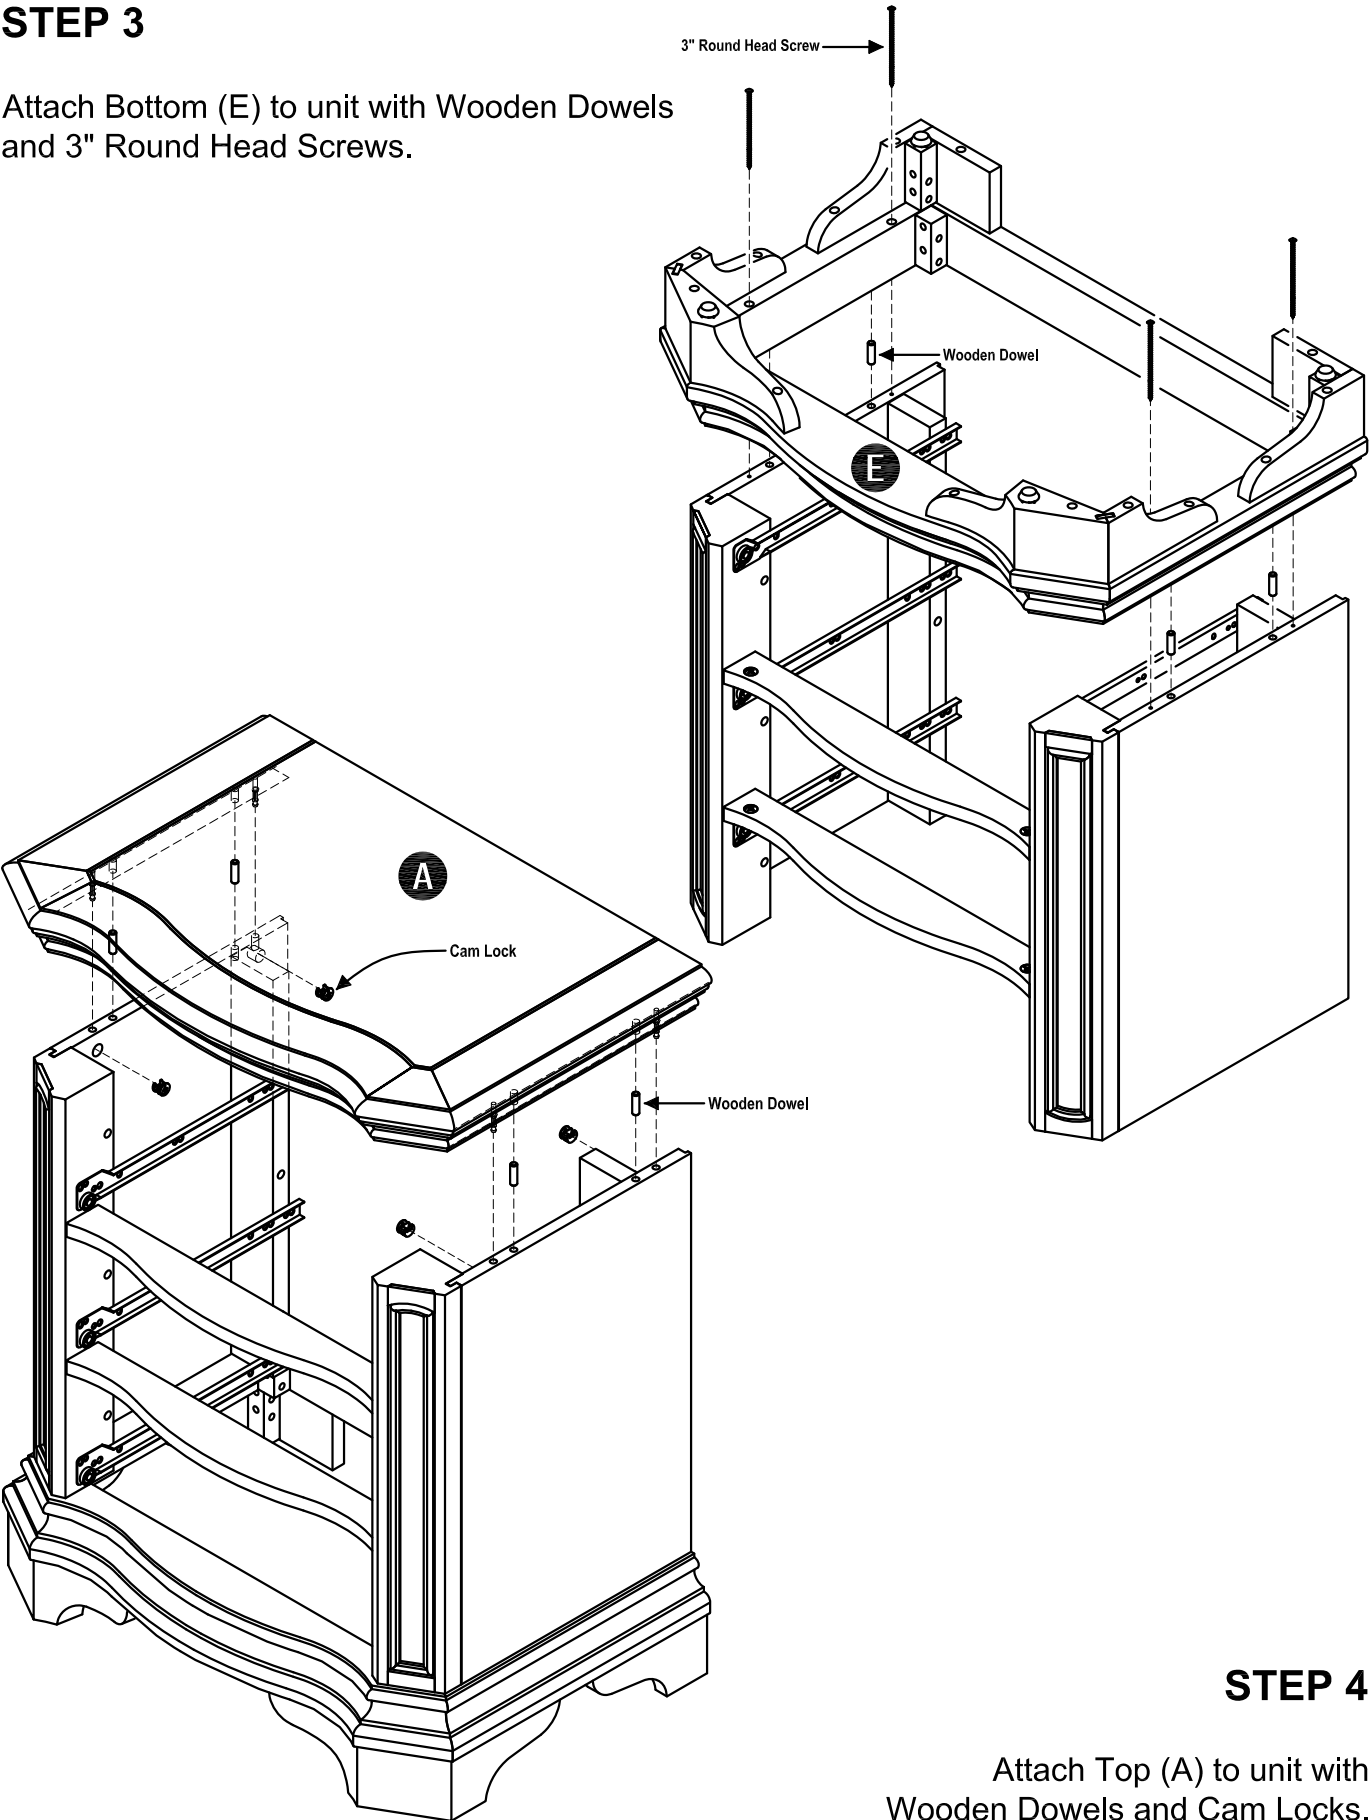

STEP 4

Attach Top (A) to unit with Wooden Dowels and Cam Locks.

STEP 5

To level the unit, adjust the adjustable levelers on the bottom of the legs. (See Figure 2)


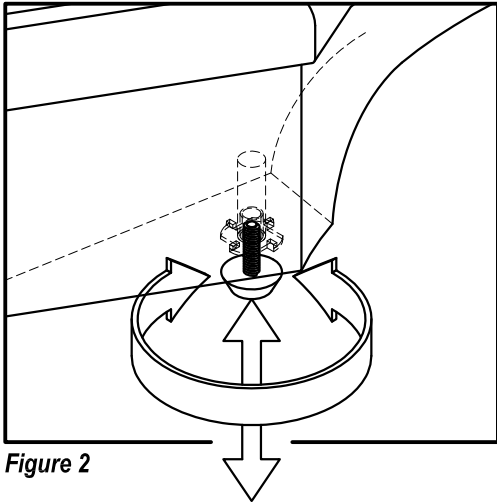



Figure 2

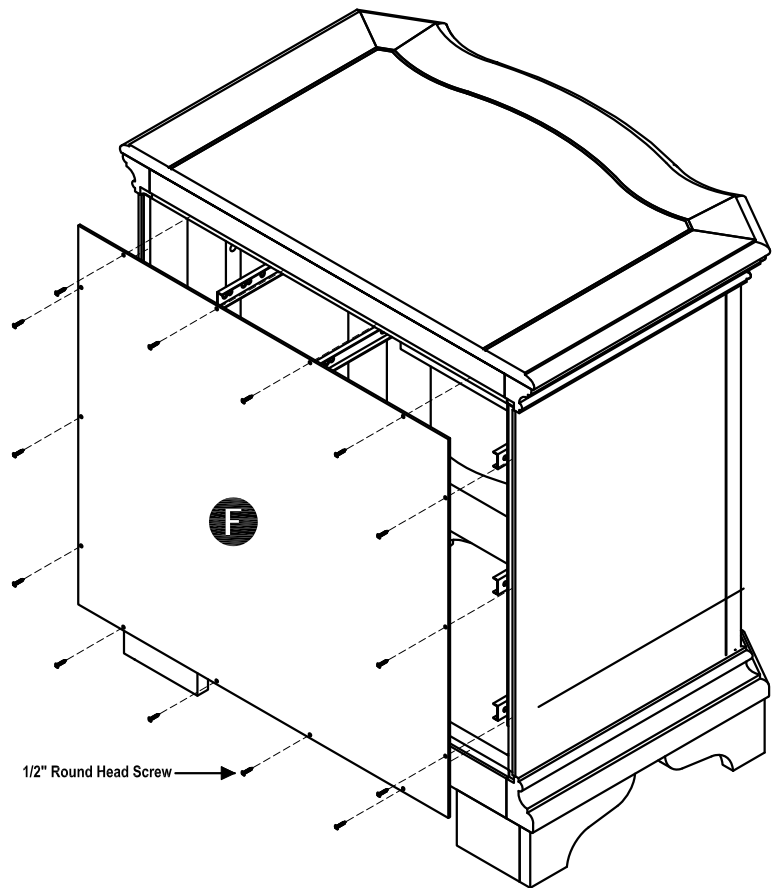

STEP 6

Attach Back Panel (F) to unit with 1/2" Round Head Screws.


Note: Please make sure unit is level before tightening these screws.

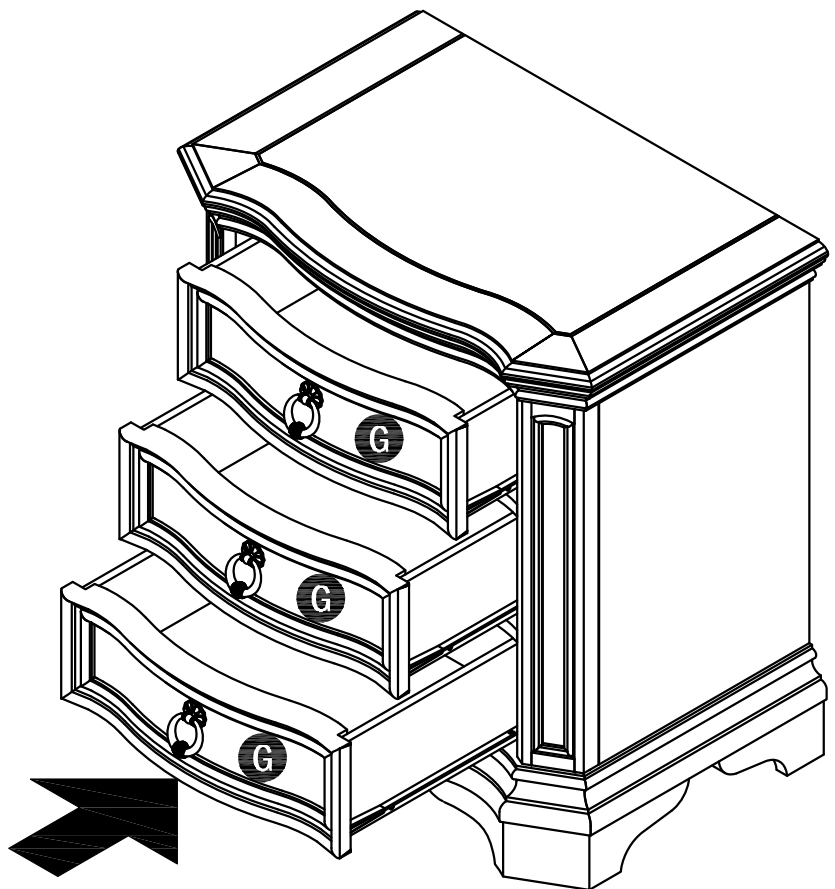

STEP 7


Slide Drawers (G) into place.

Drawer (G)

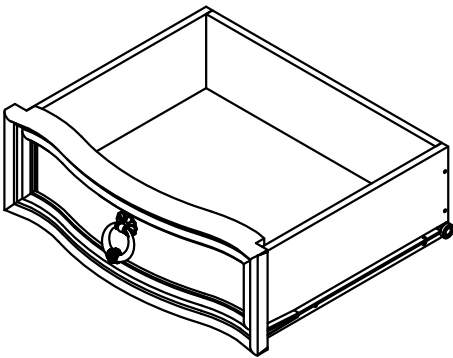



STEP 1

Attach Side Parts (G3) and (G4) to Back Part (G2) with 1 1/4" Flat Head Screws.

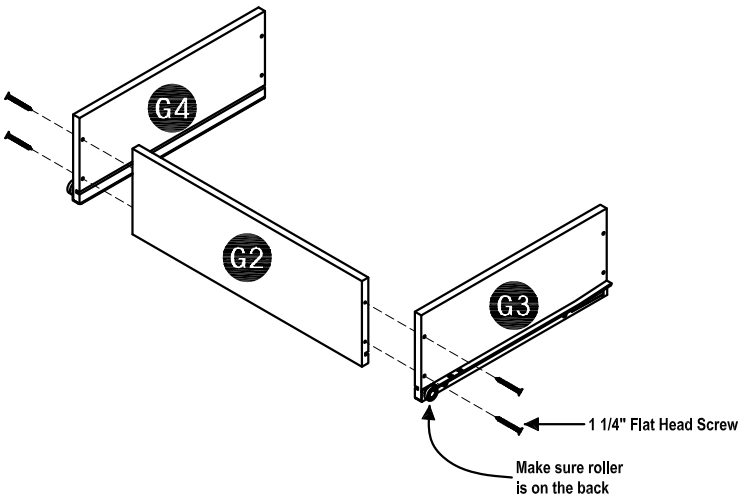

STEP 2

Insert Base Part (G5) into the groove.
Attach Front Part (G1) to unit with 1 1/4" Flat Head Screws.

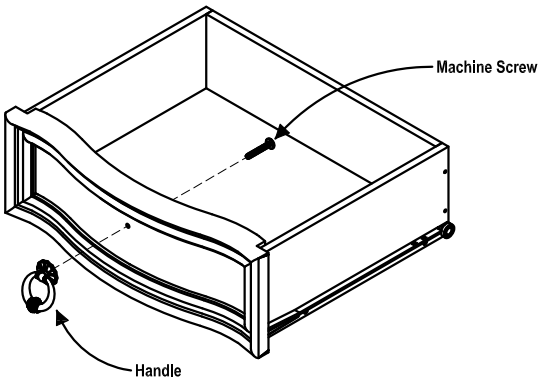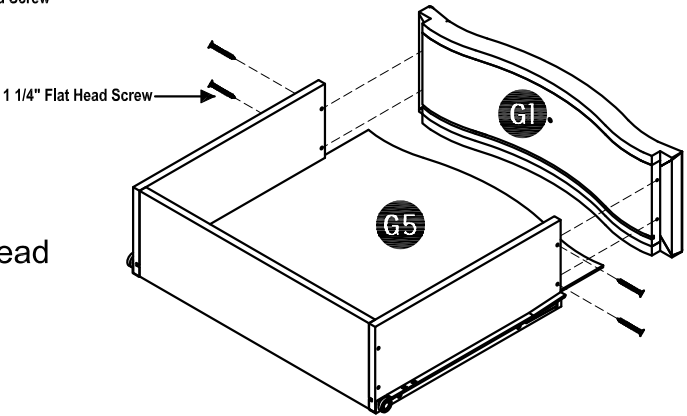

STEP 3

Attach Handle with Machine Screw.

Part List

G1. Front Part 3 pcs.	G2. Back Part 3 pcs.	G3. Side Part 3 pcs.	G4. Side Part 3 pcs.	G5. Base Part 3 pcs.

VERY IMPORTANT !!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES PART TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT
WRITE
DIRECTLY
ON
SURFACE.



**PREVENT
MARKING**

DO NOT
PLACE IN
DIRECT
SUNLIGHT.



**PREVENT
FADING**

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES.



**PREVENT
YELLOWING**

DO NOT
PLACE HOT
OBJECTS
ON SURFACE.



**PREVENT
FINISH DAMAGE**

DO NOT
USE
RUBBER
BASED
PLACE MATS.



**PREVENT
DISCOLORING**

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer_service

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319