

# 88 5661 27

## Indoor / Outdoor Four Door Storage Cabinet

### IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home  
Styles



### Part List

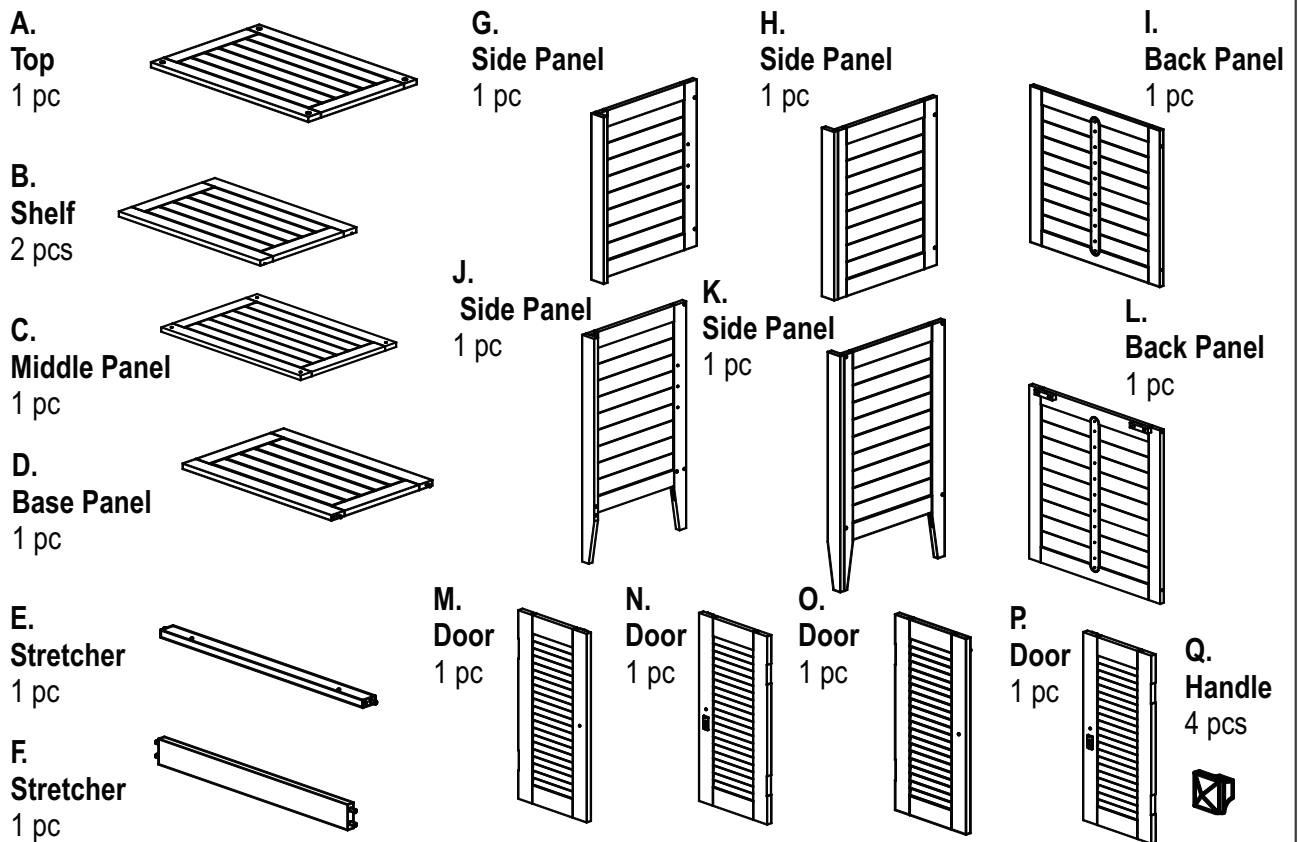

### Hardware List



Tools required for assembly : **Phillips** screwdriver

Tools recommended for assembly : Level

**Home Styles Consumer Assistance:** [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319

## Assembly Instructions 2/4


### IMPORTANT

- \* Do not tighten up all the screws until each part is properly assembled.
- \* You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- \* Use a soft cloth between these parts and the floor.
- \* After assembly, item must be level to work properly. Use the included adjustable levelers to level.

### STEP 1


Attach Back Panel (L), Base Panel (D) and Stretchers (E), (F) to Side Panel (J) with Assembly Screws.

Attach Side Panel (K) to the unit with Assembly Screws.

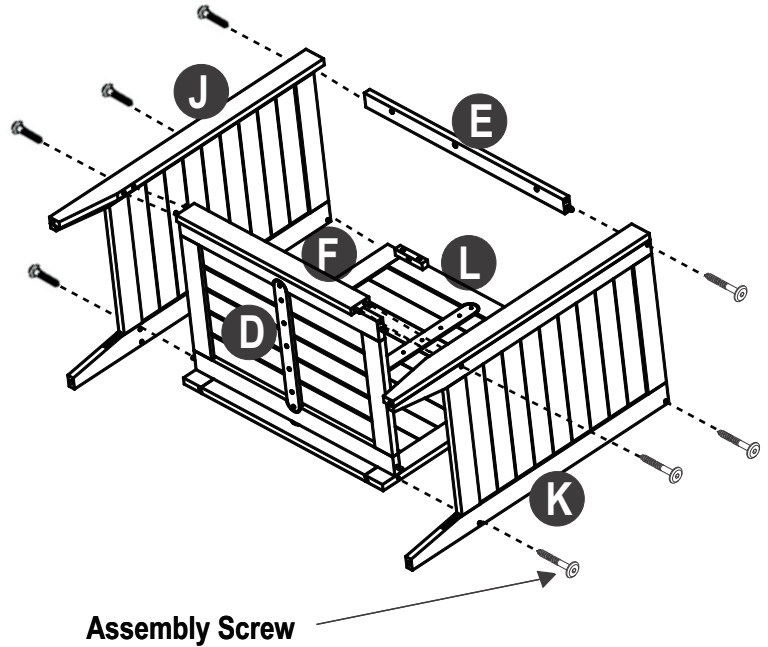


### STEP 2

Attach Back Panel (I) to Side Panel (G), (H) with Assembly Screws.

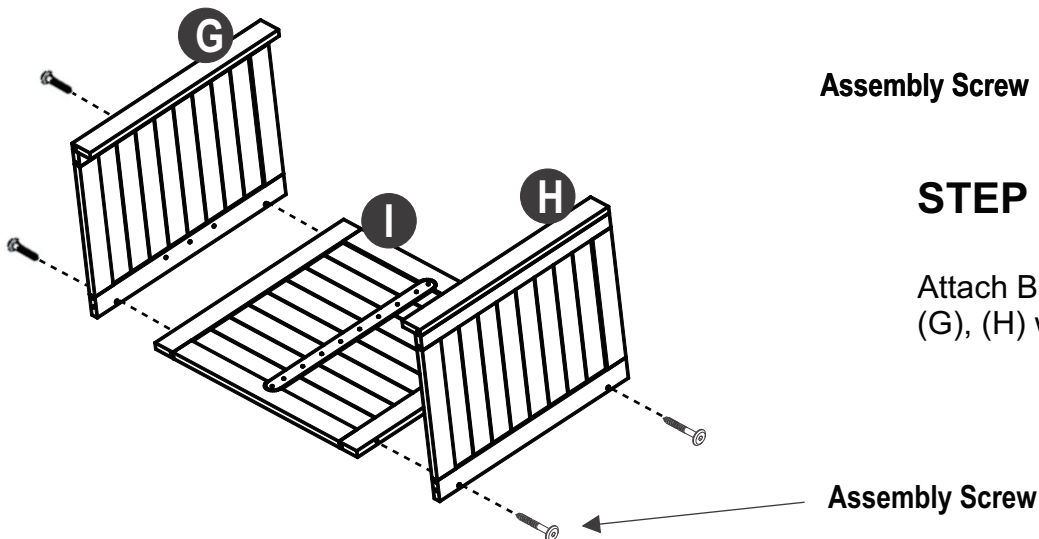


### STEP 3

Attach Top (A) and Middle Panel (C) to unit with Assembly Screws.

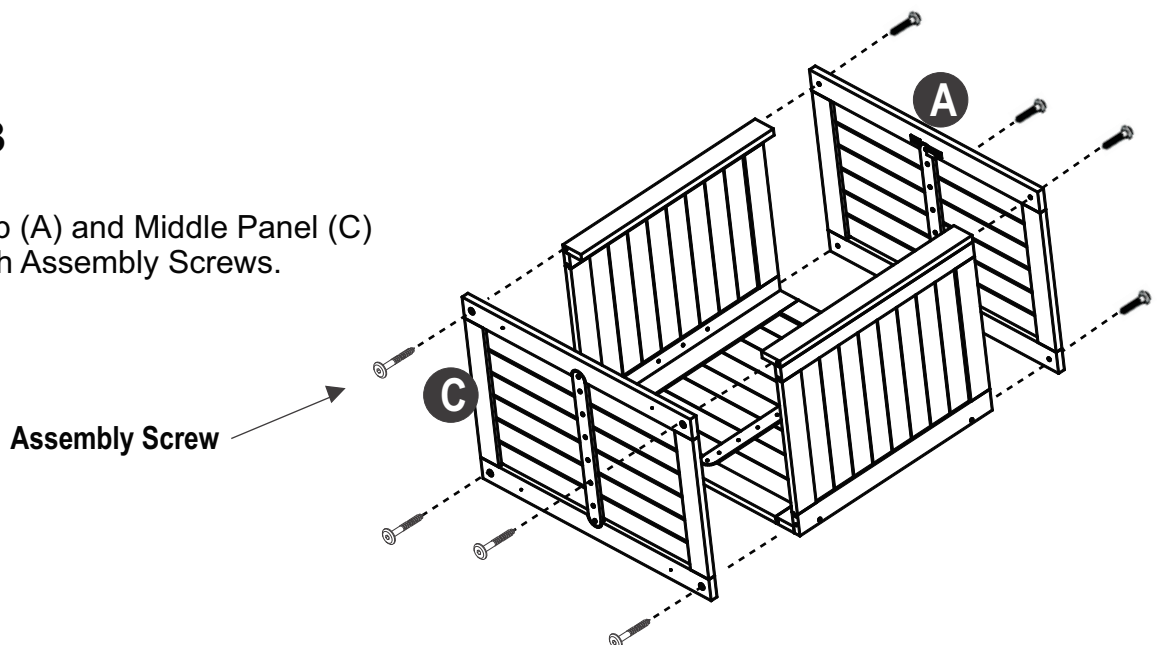


## STEP 4

Attach unit to unit with Wood Screws.

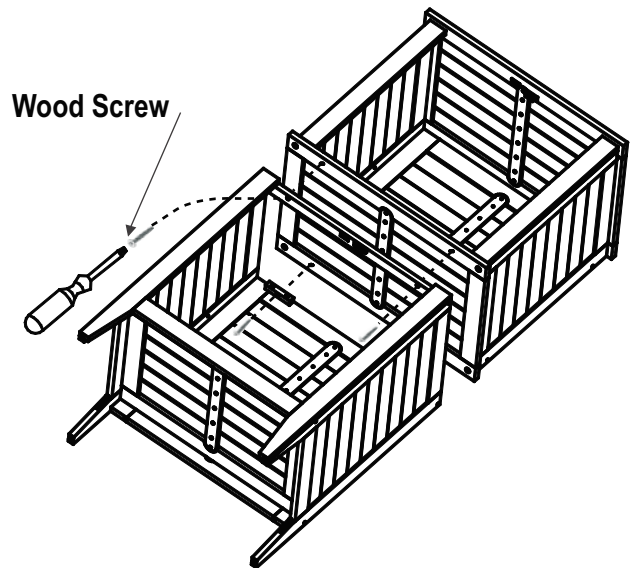

Adjustable Pin

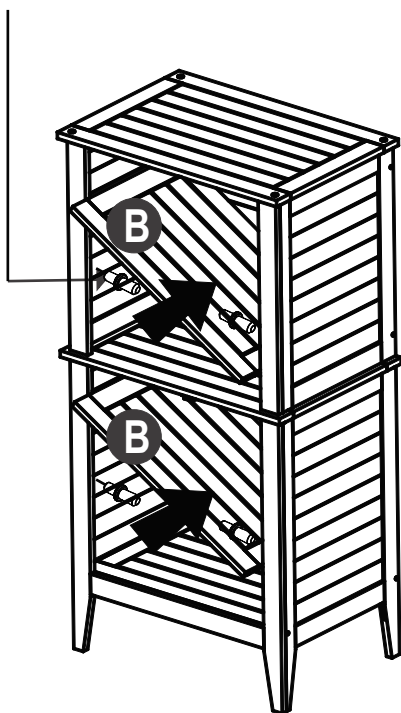

## STEP 5

Insert Adjustable Pins into side panels at desired level.  
Place Shelves (B) into position.

## STEP 6

Attach Doors (M), (N), (O) and (P) to unit with Wood Screw for Door. (see Figure 1)


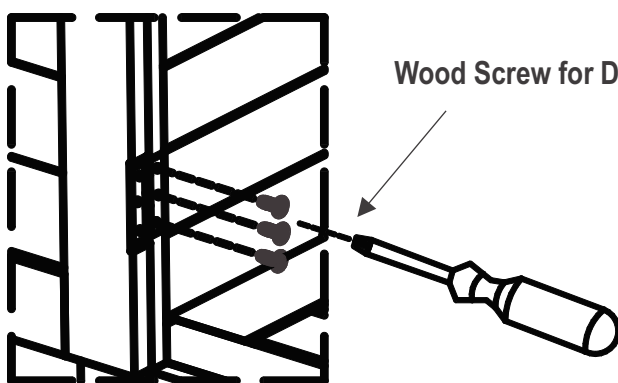


Figure 1

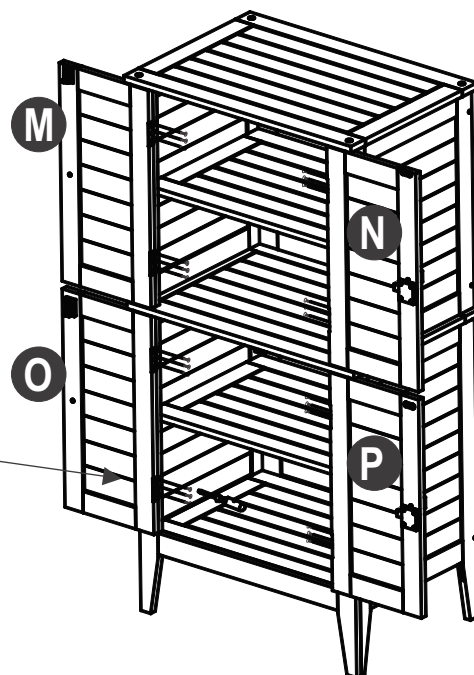

## STEP 7

Attach Handle (Q) to unit with Wood Screw for Handle.

Move the door catch up then turn left to lock the door and turn right then pull down to unlock. (see Figure 2)

Turn key counter clockwise to lock the door and clockwise to unlock. (see Figure 3)

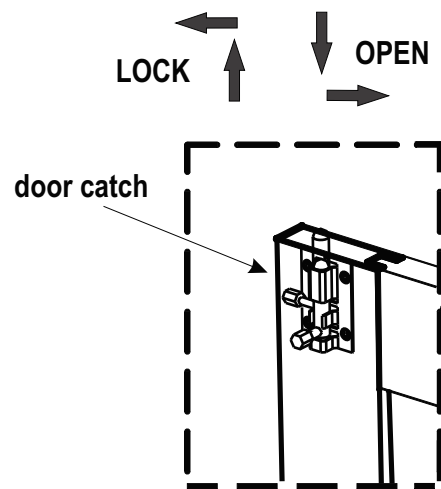
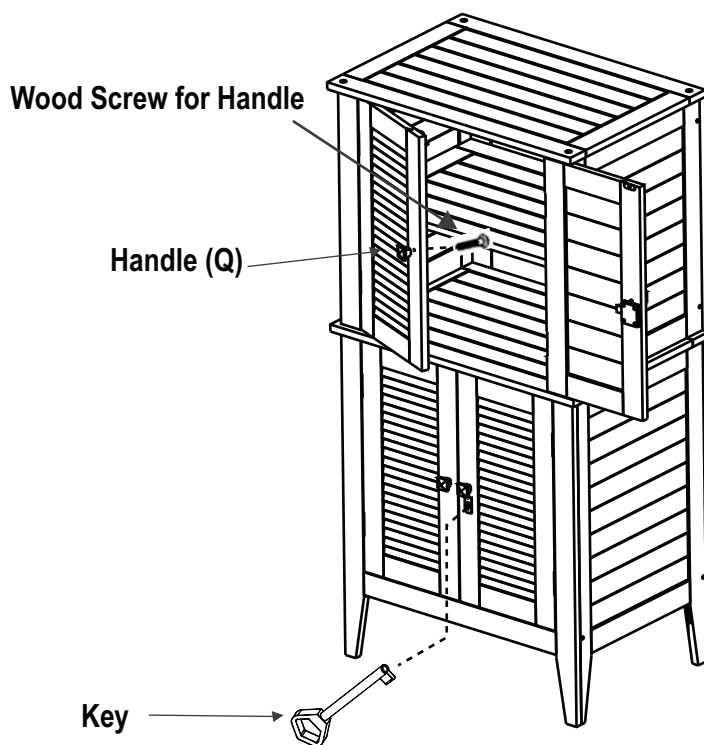


Figure 2

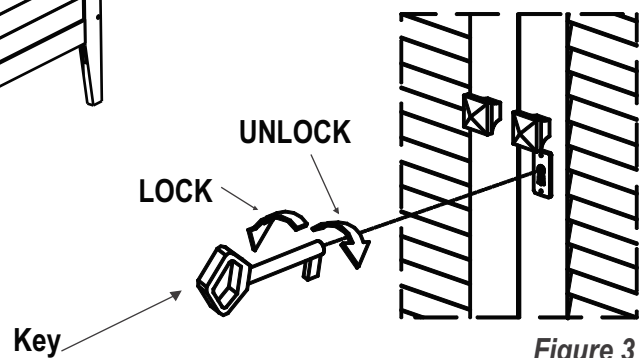


Figure 3

## STEP 8

To level the unit, adjust the adjustable levelers on the bottom of legs. (see Figure 4)

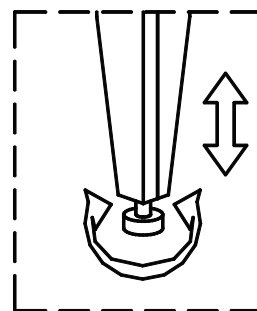


Figure 4