

Kitchen Cart



 
IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.


Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

Part List

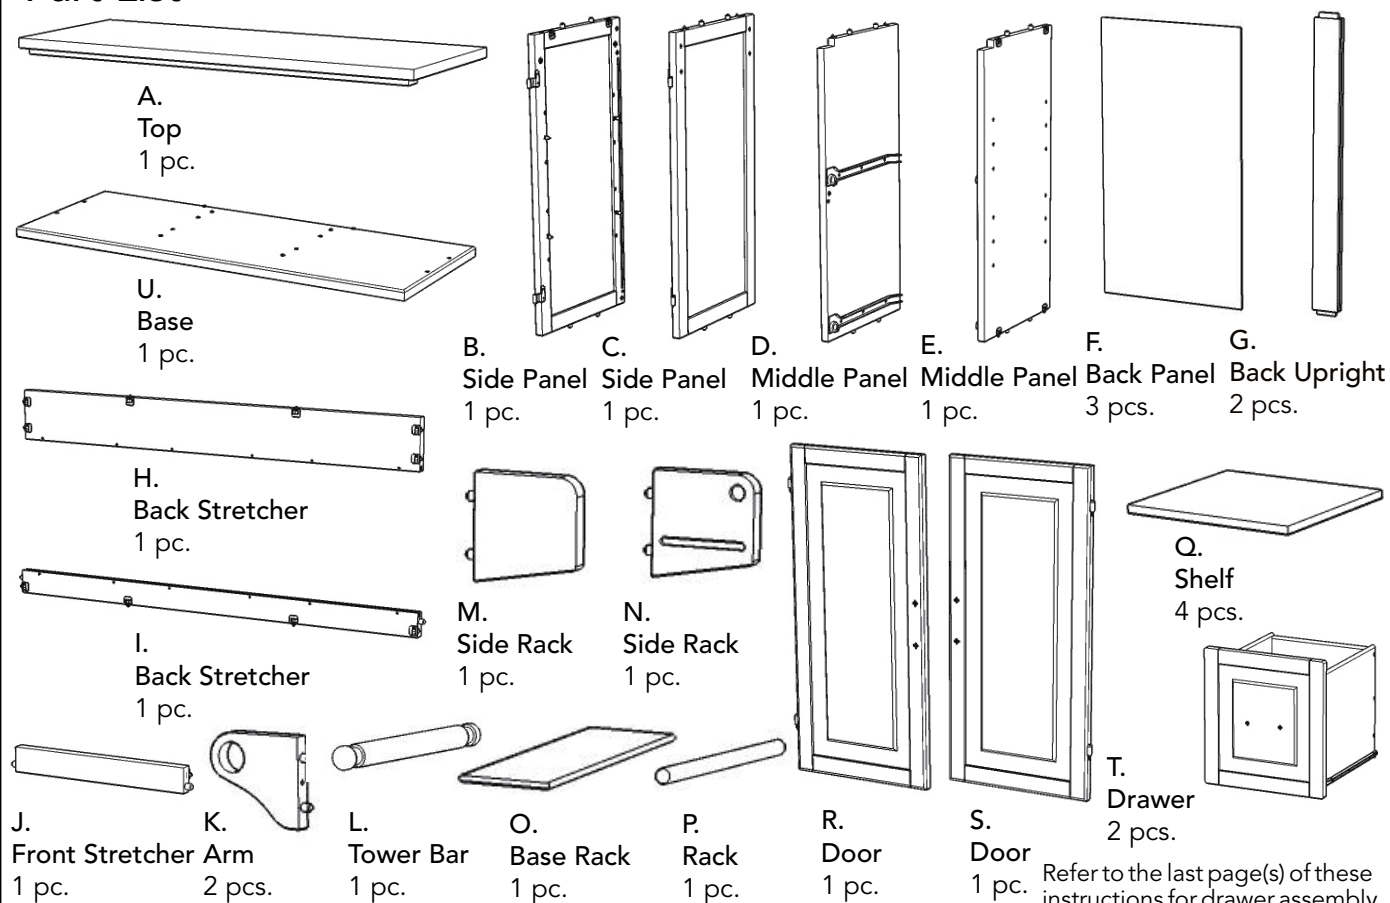

Hardware List

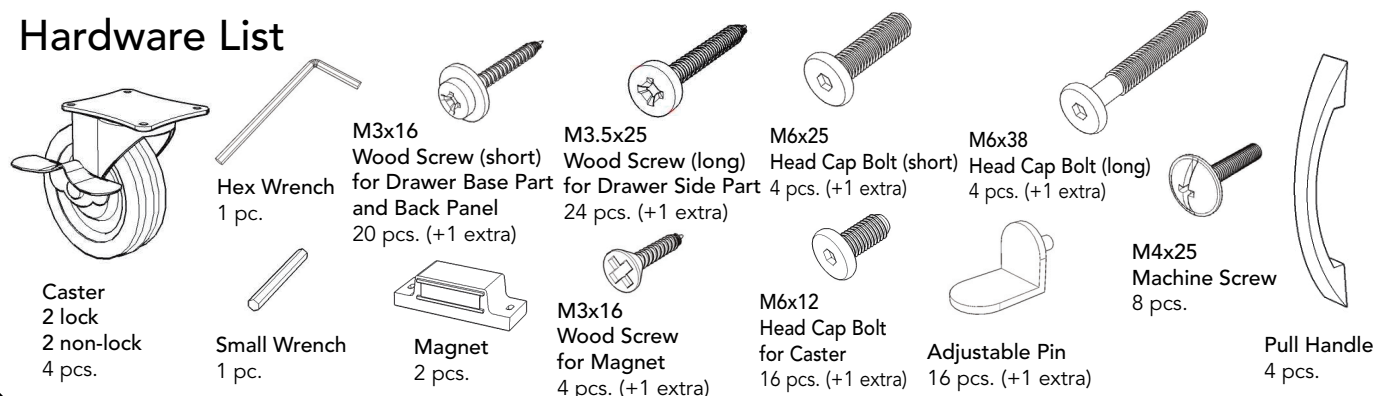 

Tool(s) required for assembly: Phillips screwdriver

Assembly Instructions 2/6

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- Keep Hex Wrench in a safe place as the bolts may need to be tightened up in the future.

STEP 1

Attach Magnets to Top (A) with Wood Screws for Magnet.
(See Figure 1)

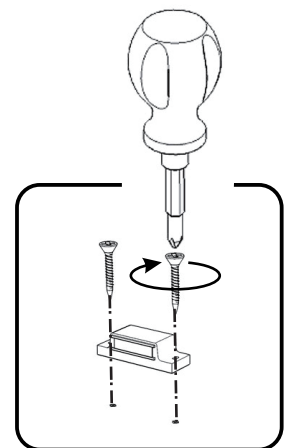 
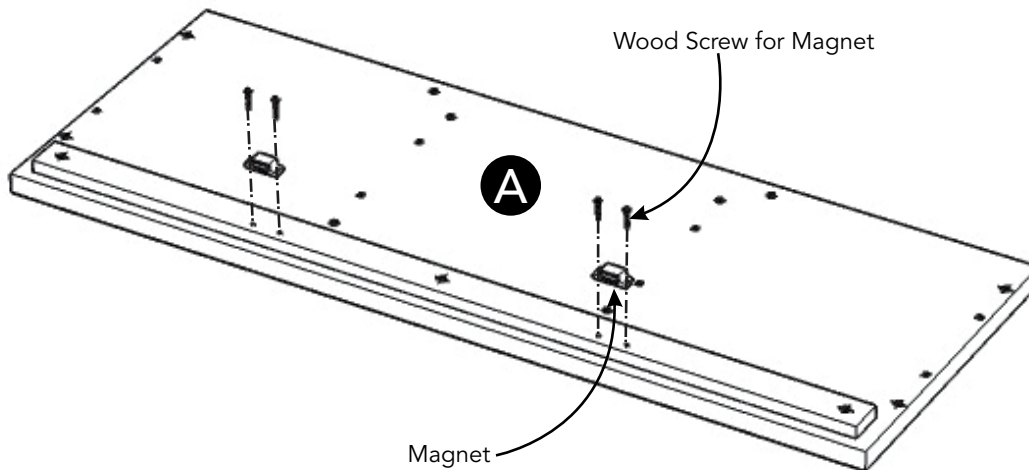 


Figure 1

STEP 2

Attach Casters underneath Base (U) with Head Cap Bolts for Caster, with Locking Casters on the front. (See Figure 2)

Note: The 'Arrow' sticker indicates the front of Base (U).

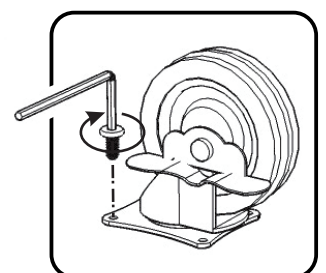 
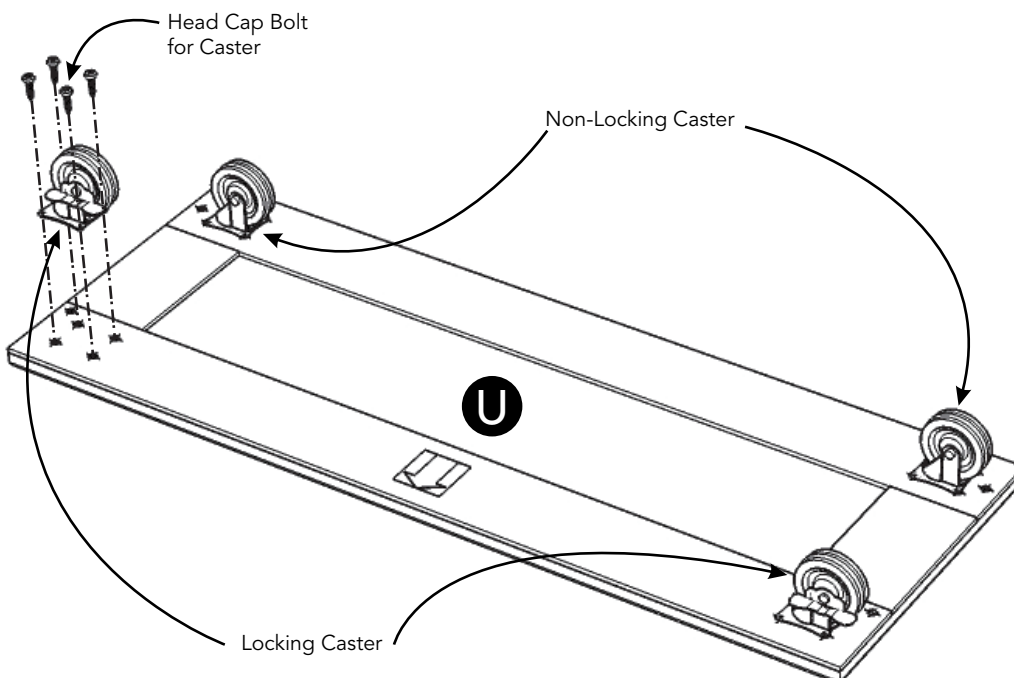 


Figure 2

Assembly Instructions 3/6

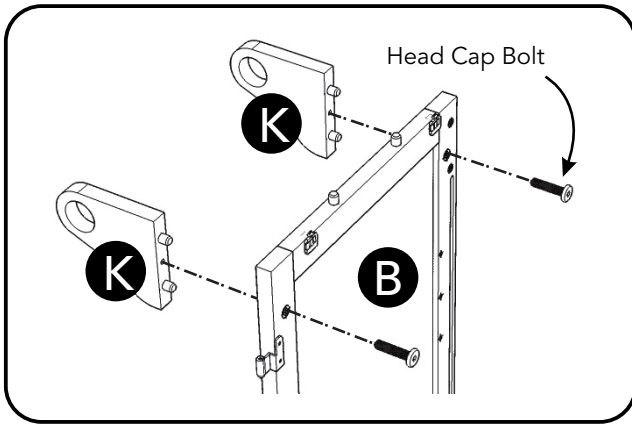 


Figure 3

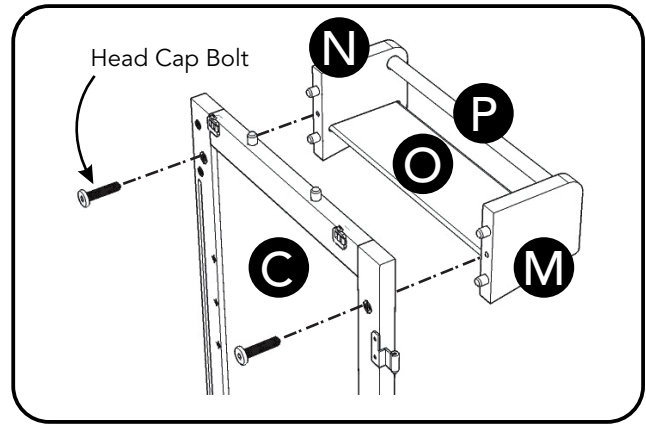 


Figure 4

STEP 3

Attach Arms (K) to Side Panel (B) with Head Cap Bolts (short). (See Figure 3)

Assemble Side Racks (M), (N), Base Rack (O) and Rack (P), then attach to Side Panel (C) with Head Cap Bolts. (See Figure 4)

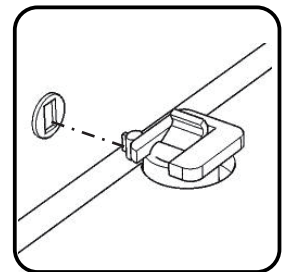 
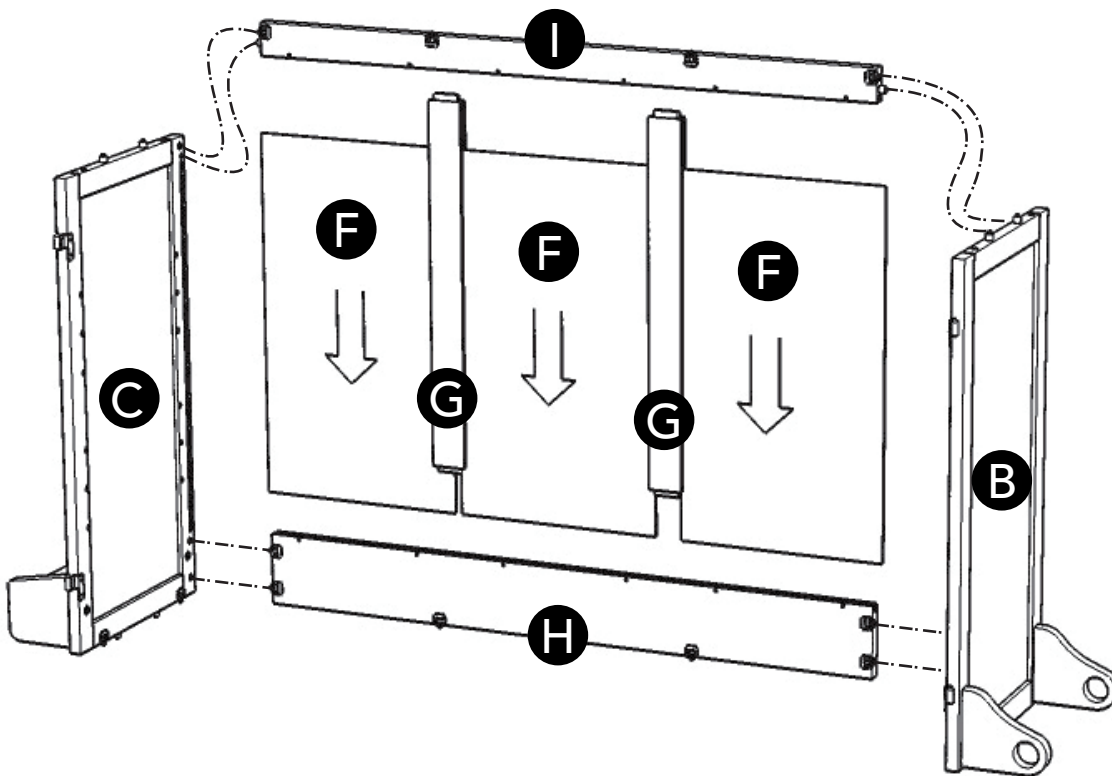 


Figure 5

STEP 4

Attach Back Stretcher (H) to Side Panel (B), then flip the lock. (See Figures 5 and 6)

Attach Back Uprights (G) to unit, then slide Back Panels (F) into position.

Attach Back Stretcher (I) to unit, then flip the locks.

Attach Side Panel (C) to unit, then flip the locks.


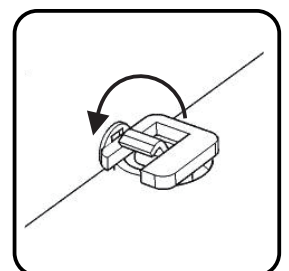 



Figure 6

 Assembly Instructions 4/6

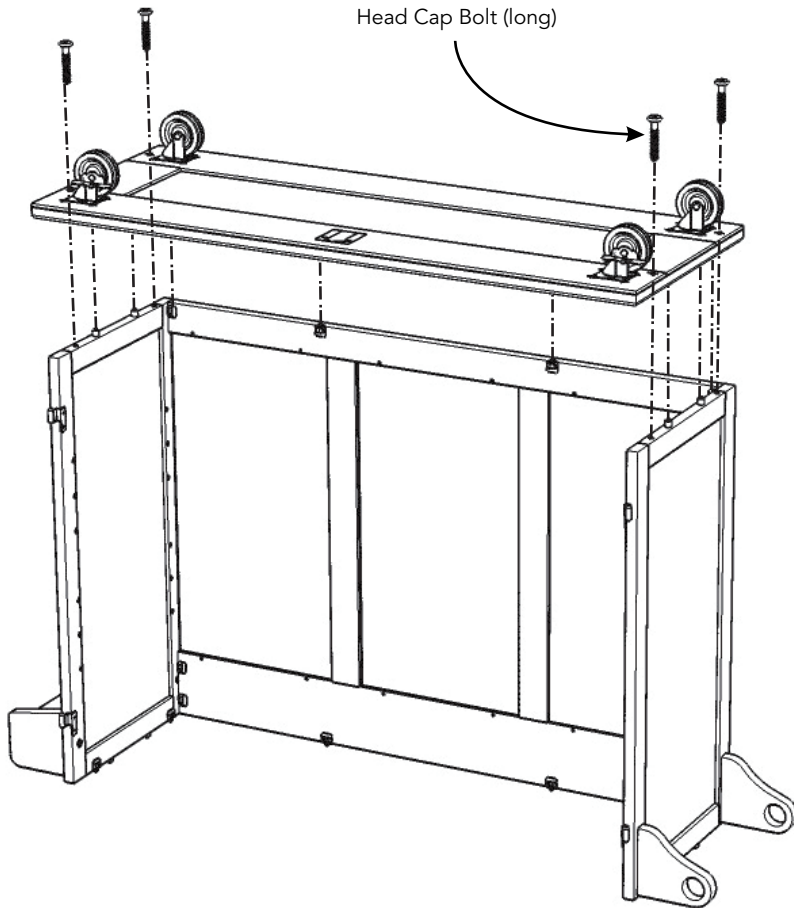

STEP 5

 Attach unit from Step 2 to unit from Step 4 with Head Cap Bolts (long), then flip the locks.

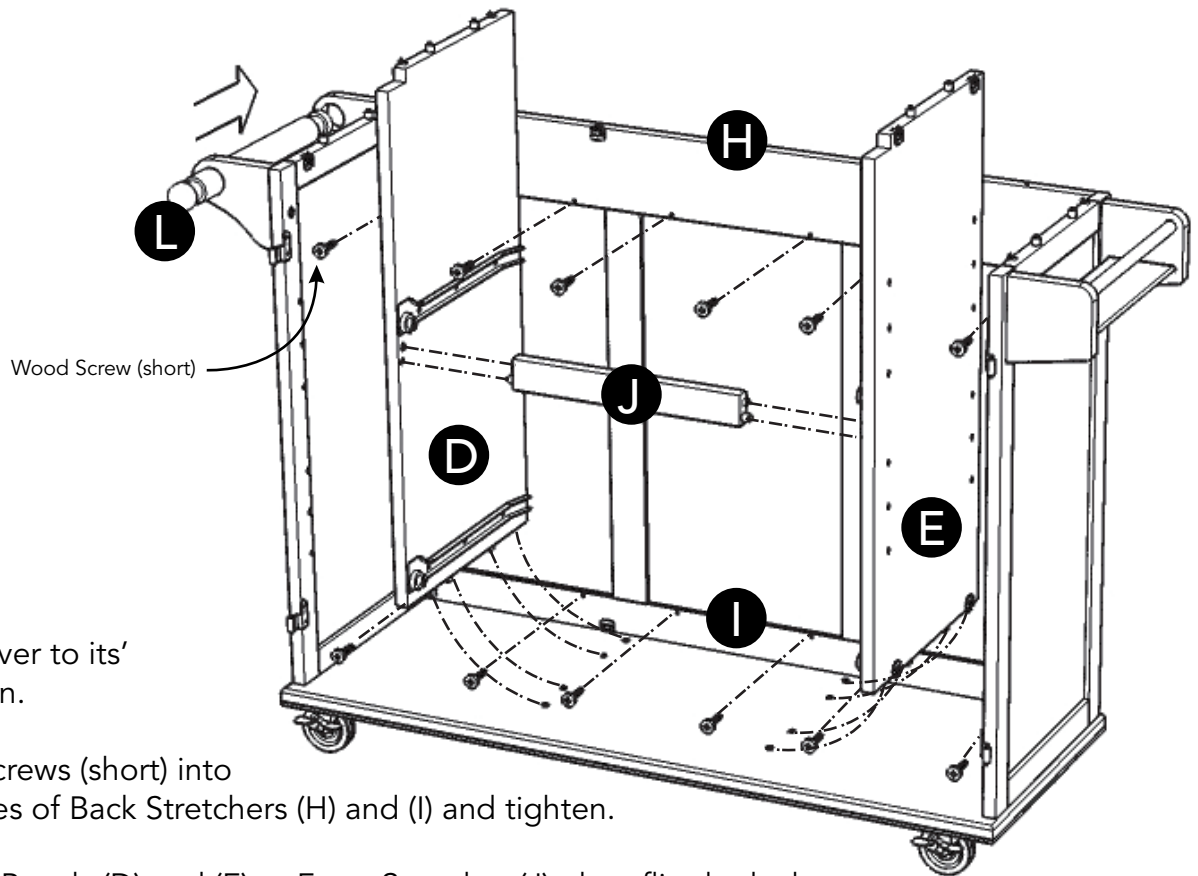

STEP 6

 
Turn the unit over to its' upright position.

Insert Wood Screws (short) into pre-drilled holes of Back Stretchers (H) and (I) and tighten.

Attach Middle Panels (D) and (E) to Front Stretcher (J), then flip the locks.

Attach unit to unit from Step 5, then flip the locks.

Slide Tower Bar (L) into place.

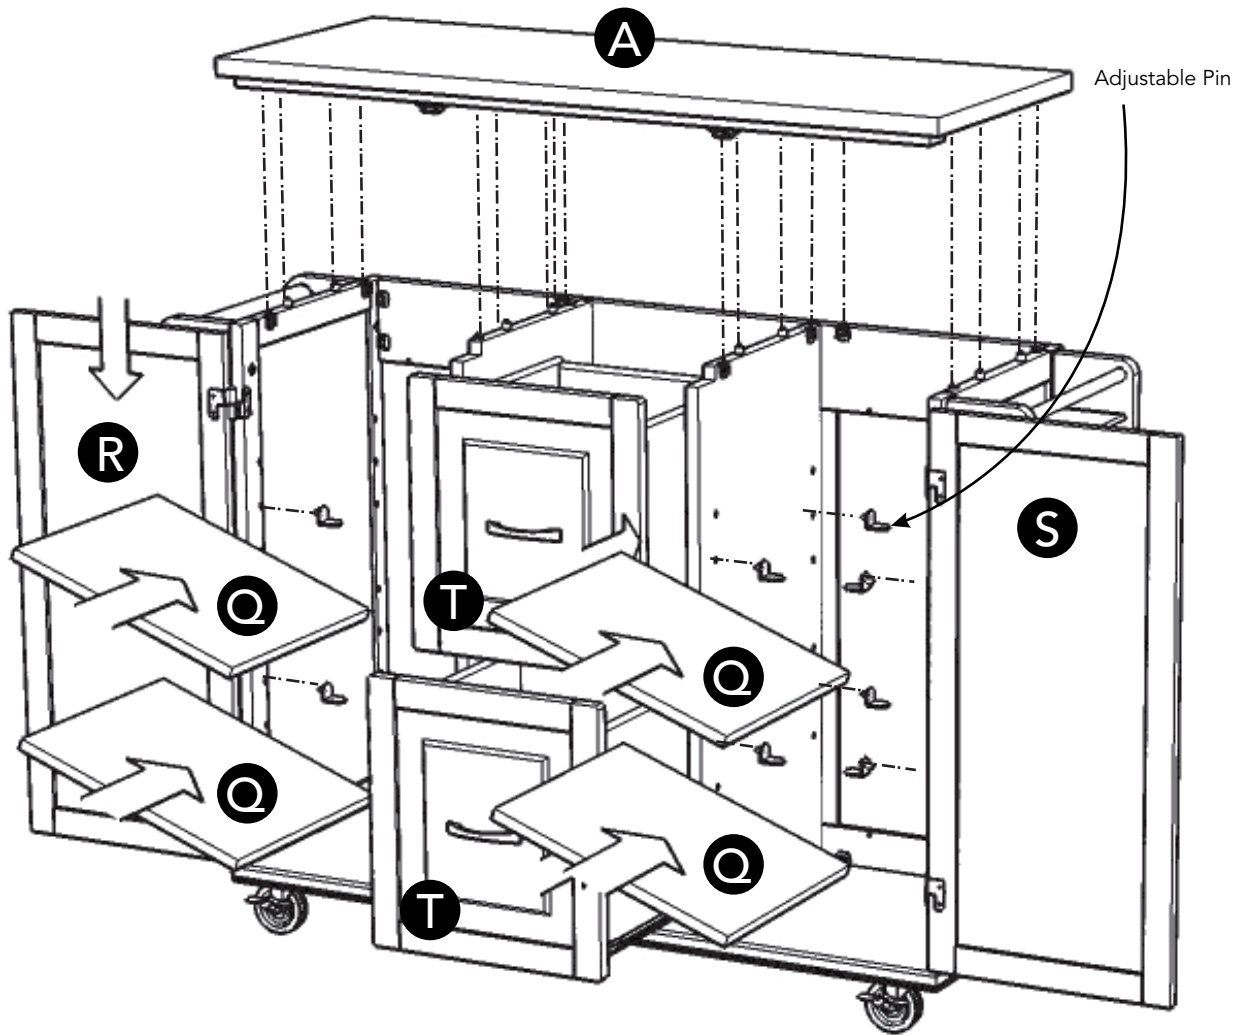

STEP 7

Attach Pull Handles to Doors (R) and (S) with Machine Screws. (See Figure 7)

Attach Doors (R) and (S) by sliding the door life hinges to side panel lift hinges. (See Figure 8)

Attach Top (A) to unit, then flip the locks.

Insert Adjustable Pins into side panels and middle panels at the desired level, then place Shelves (Q) into position.

Slide Drawers (T) into position.

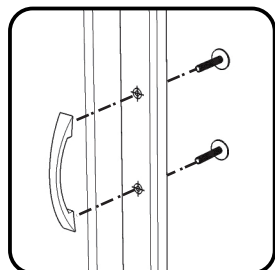 


Figure 7


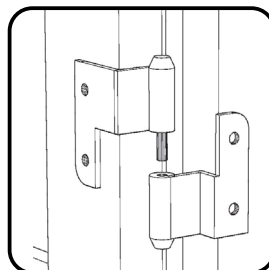 


Figure 8

Assembly Instructions 6/6

 
Drawer (T)

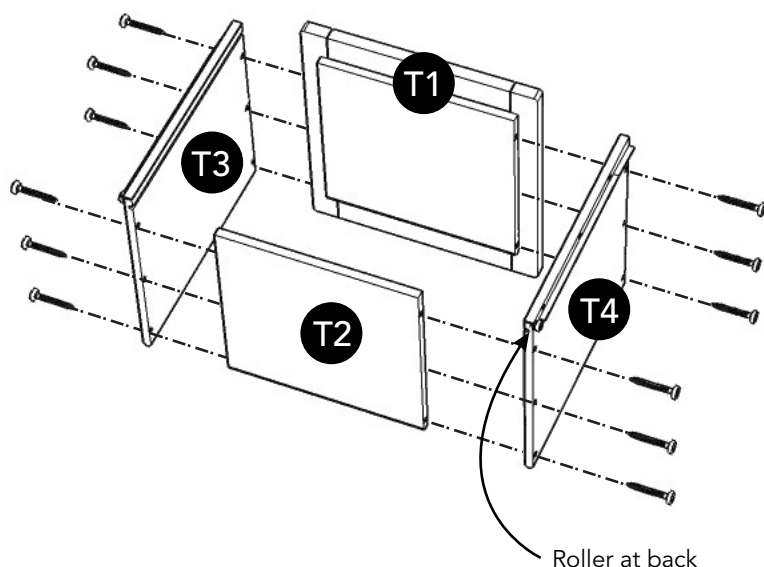

STEP 1

Attach Drawer Front (T1) and Drawer Back (T2) to Drawer Side (T3) with Wood Screws (long).


 
Attach Drawer Side (T4) to unit with Wood Screws (long).

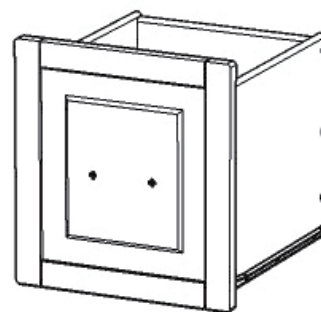

STEP 2

Slide Drawer Bottom (T5) into the grooves of Drawer Sides (T3) and (T4) until it meets Drawer Front (T1).

  
Attach Drawer Bottom (T5) to unit with Wood Screws (short).

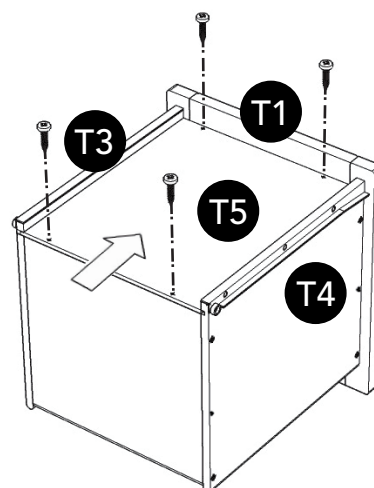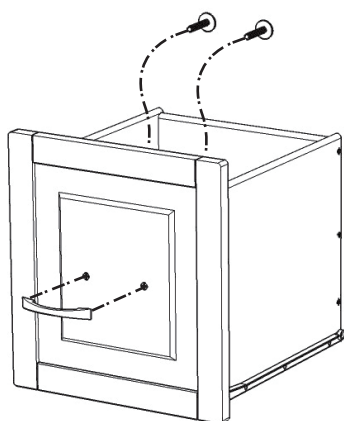


STEP 3

Attach Pull Handle with Machine Screw.

 Part List

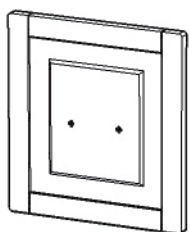

T1.
Drawer Front
2 pcs.

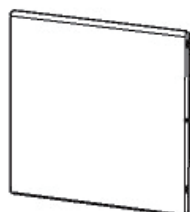 

T2.
Drawer Back
2 pcs.



T3.
Drawer Side
2 pcs.



T4.
Drawer Side
2 pcs.



T5.
Drawer Bottom
2 pcs.

CARE INSTRUCTIONS

NEVER


allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.
**PREVENT
CRACKING**

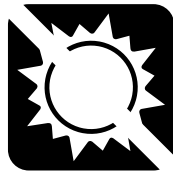


Do not place
in direct sunlight.
**PREVENT
FADING**



Do not write
directly on surface.
**PREVENT
MARKING**



Do not place hot
objects on surface.
**PREVENT
FINISH DAMAGE**

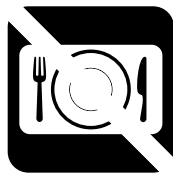

Do not use rubber
based placemats.
**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.
**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319