

# 88 5514 41

 
## Chest

### IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home  
Styles

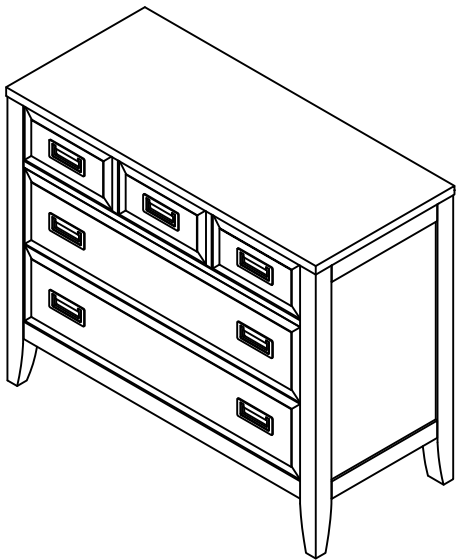

## Part List

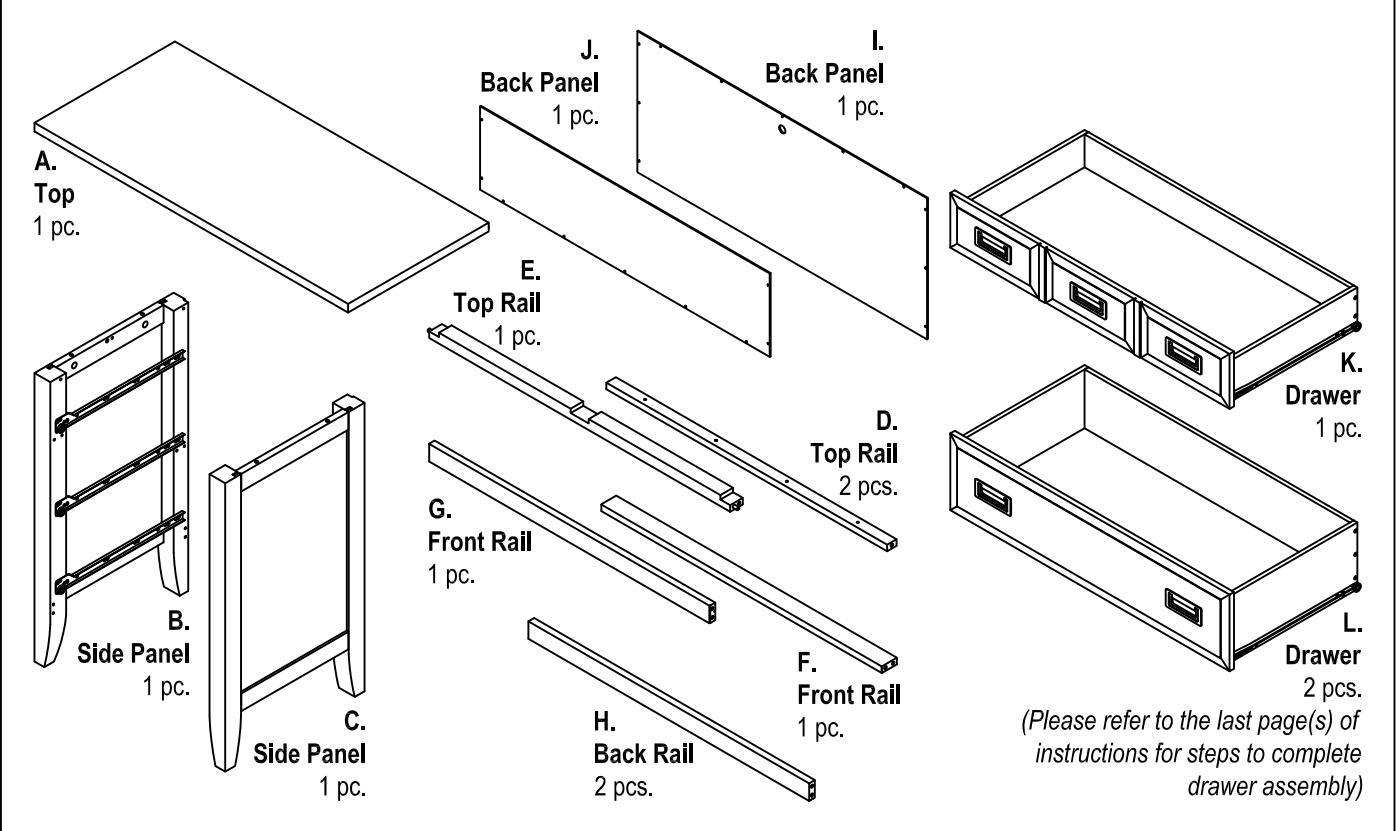 

## Hardware List

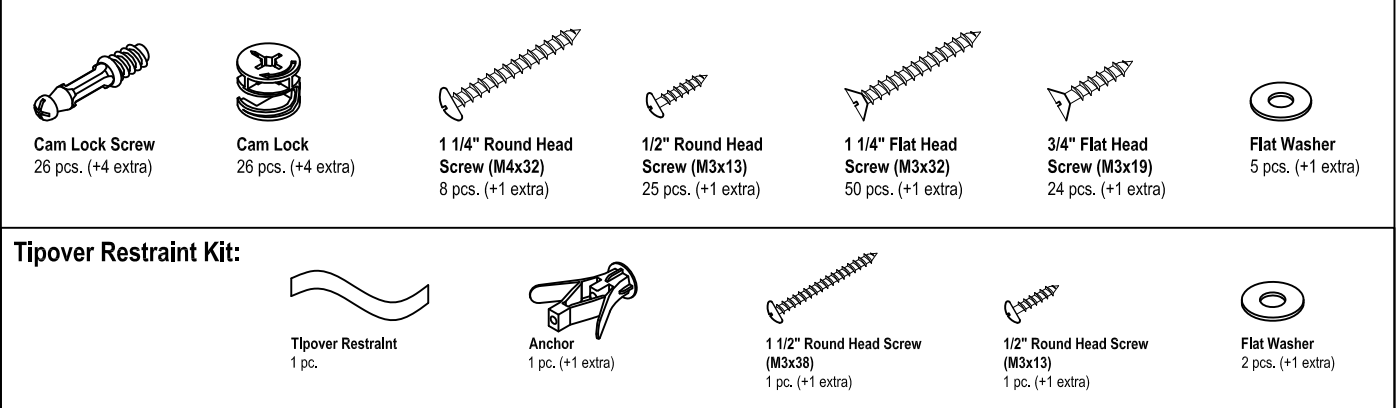 

Tools Required For Assembly : Phillips screwdriver, Drill, 3/8" Drill Bit, Level


**Home Styles Consumer Assistance:** [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319

## IMPORTANT

 - \* Do not tighten up all the screws until each part is properly assembled.
- \* Use a soft cloth between these parts and the floor.
- \* After assembly, item must be level to work properly. Use the included adjustable levellers to level.

## STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Top (A), Side Panels (B) and (C).

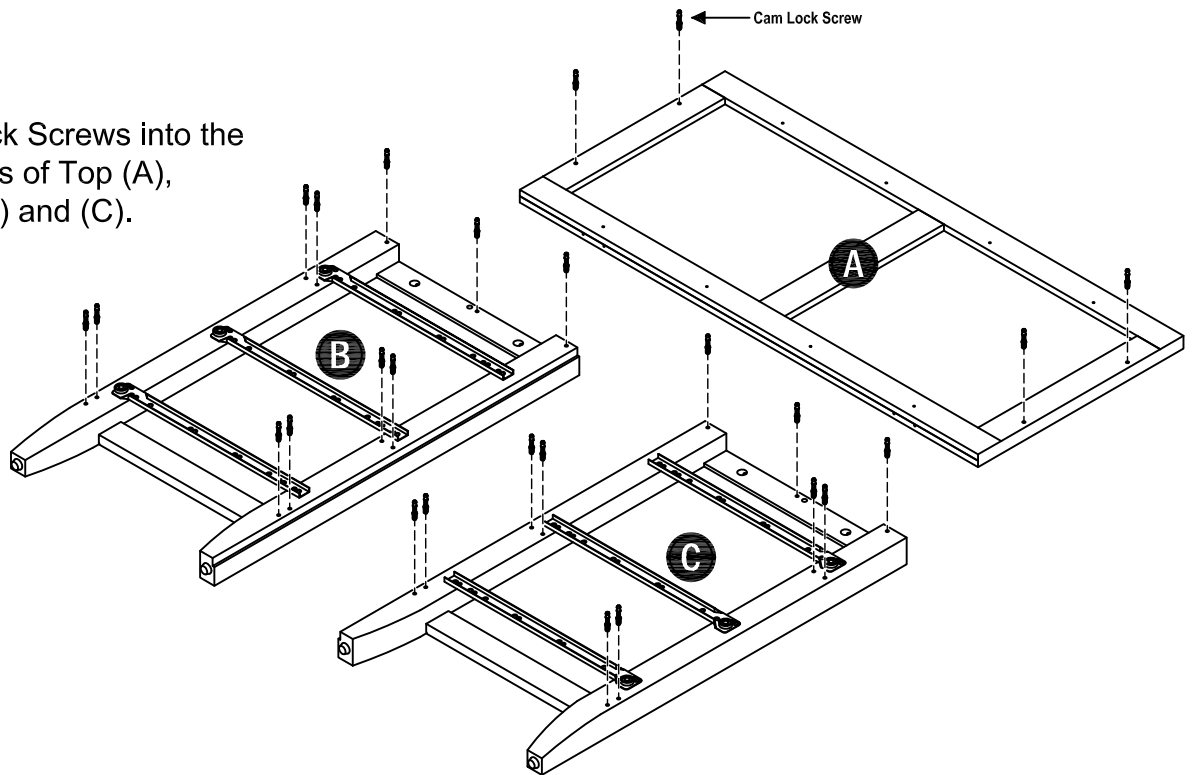

## STEP 2

Attach Top Rails (D) and (E), Front Rails (F) and (G) and Back Rails (H) to Side Panel (B) with Cam Locks. (See Figure 1)

Please orientate Rail (F) so notch on ends of rail is to the front edge of Side Panel (B).



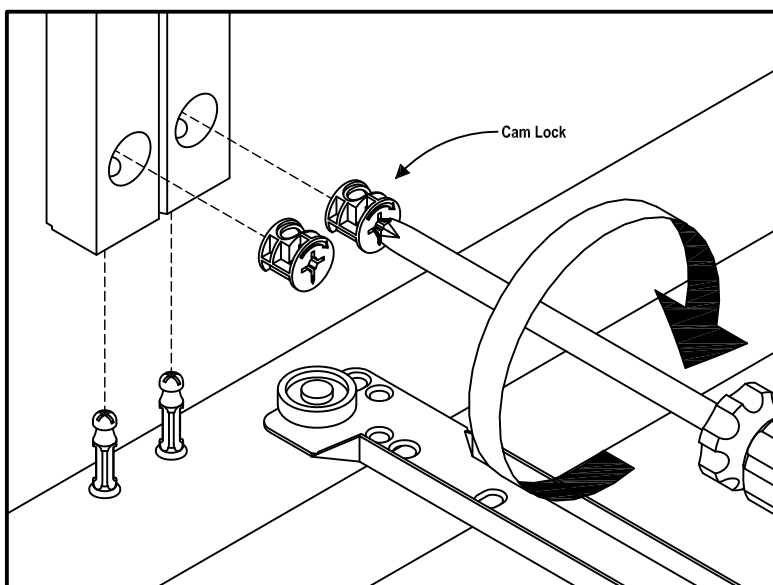 


Figure 1

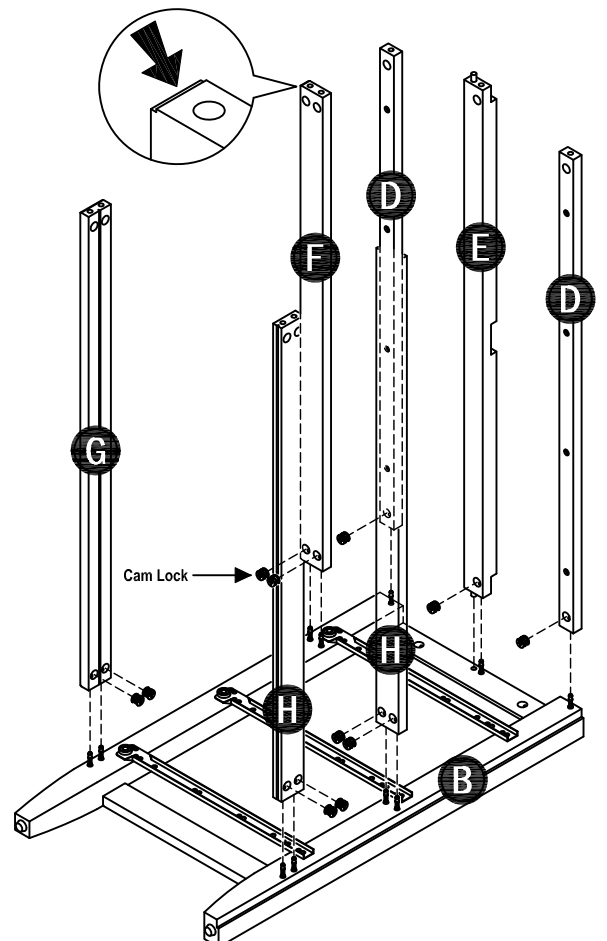 



## STEP 3

 Attach Side Panel (C) to unit with Cam Locks.  
(See Figure 1)

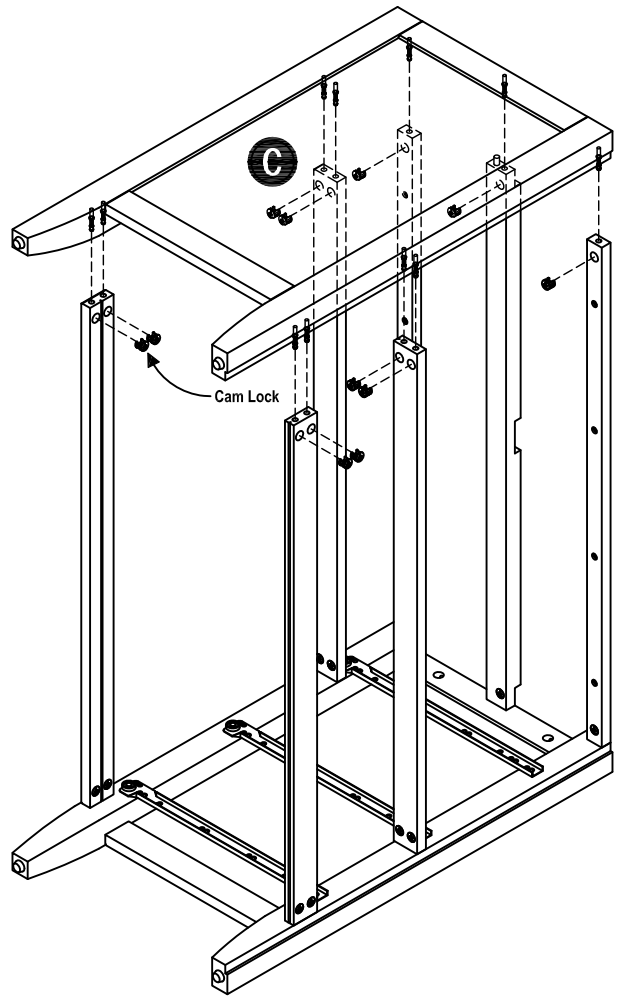

## STEP 4

  Attach Top (A) to unit with Cam Locks and 1 1/4" Round Head Screws.  
**Note: A Philips screwdriver 5" or less in length is recommended.**

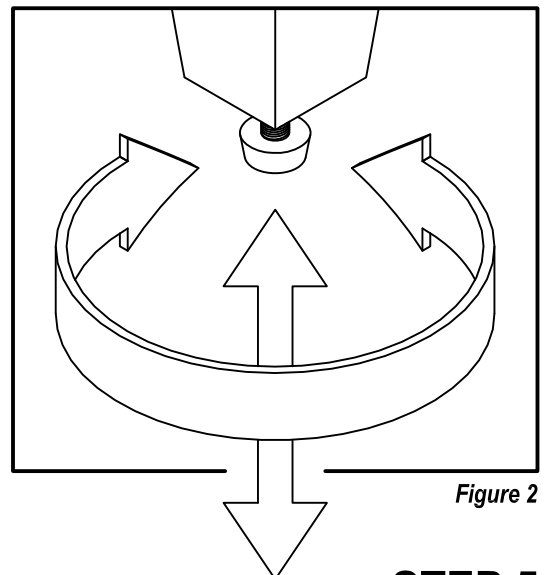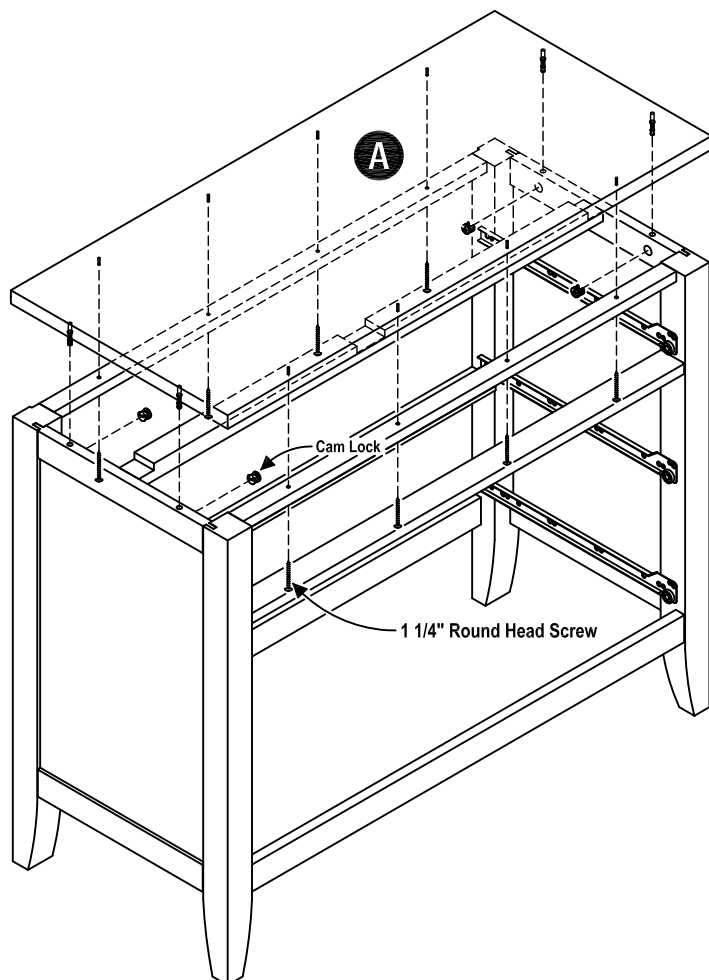

## STEP 5

To level the unit, adjust the adjustable levelers on the bottom of the feet.

 
**Note: Unit must be level to work properly.**

(See Figure 2)

## STEP 6

Attach 1/2" Round Head Screws and Flat Washers to unit.

**Note: Please make sure unit is level before tightening these screws.**

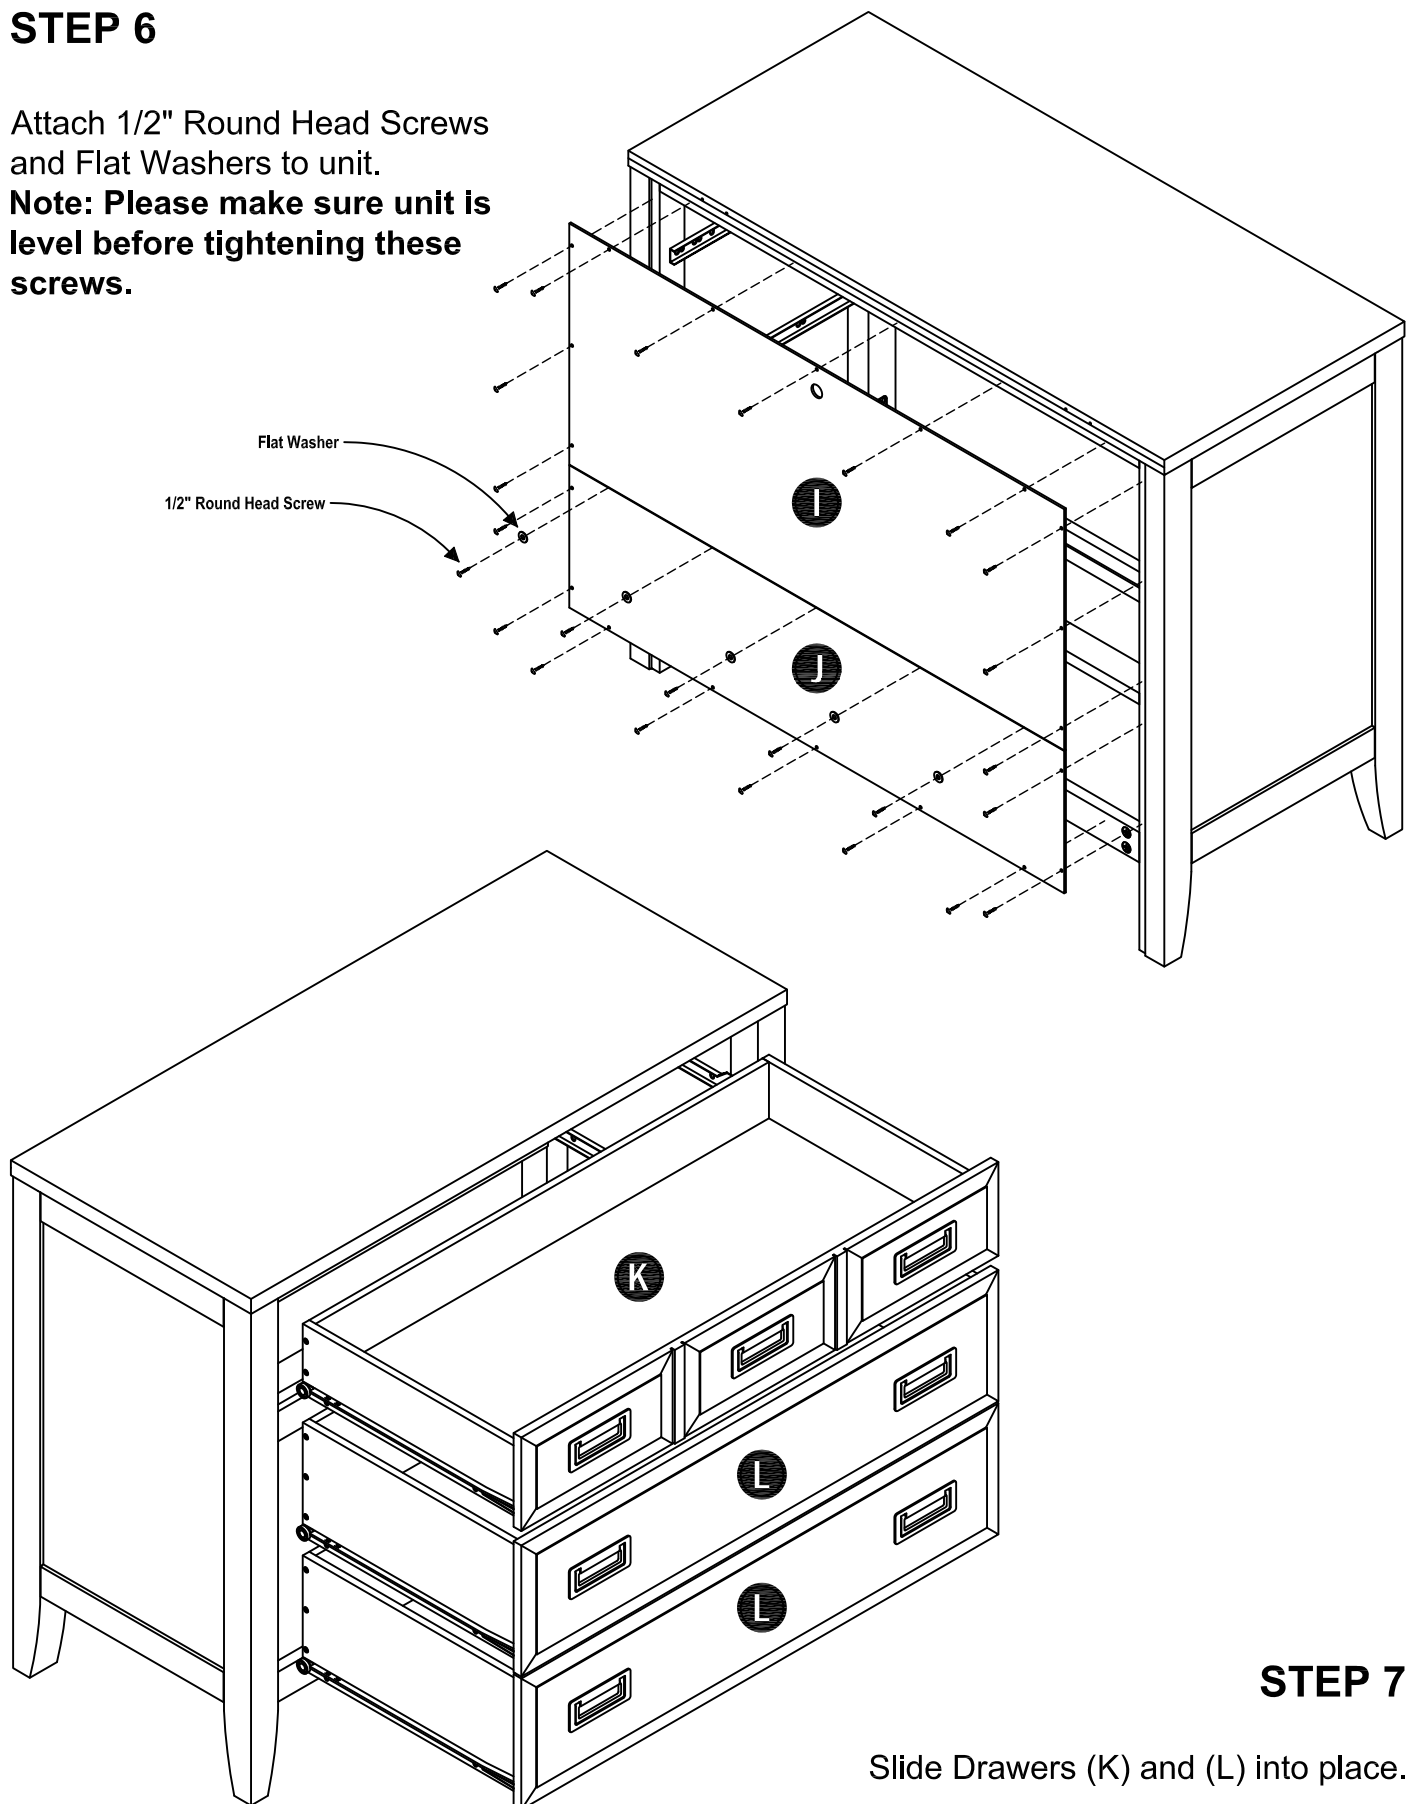



## STEP 7

Slide Drawers (K) and (L) into place.

Note: Follow the steps on the next page to use 3/4" Flat Head Screws to complete drawer assembly.

STEP 8

  Loosen slightly the four screws pre-installed on the back of the drawer fronts.

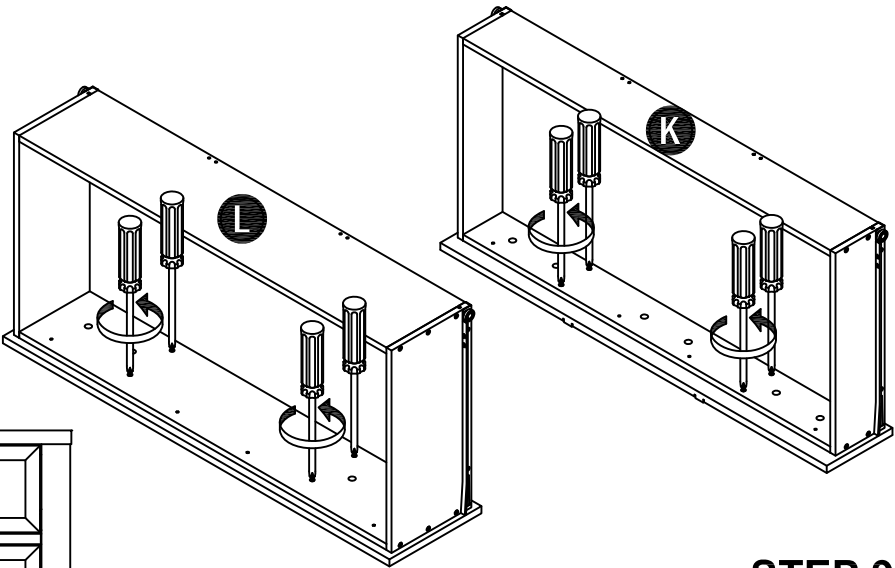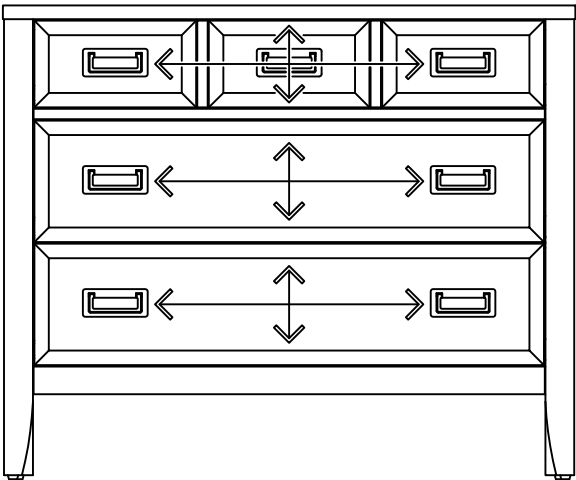


STEP 9

Insert the drawers into the main body, then adjust the drawer front panels left or right and up or down until the drawer gaps look proportional.

STEP 10


 
Pull the drawers open slowly and re-tighten the screws from Step 8. Make sure the front panels do not move and lock the drawer front panels into position with 3/4" Flat Head Screws.

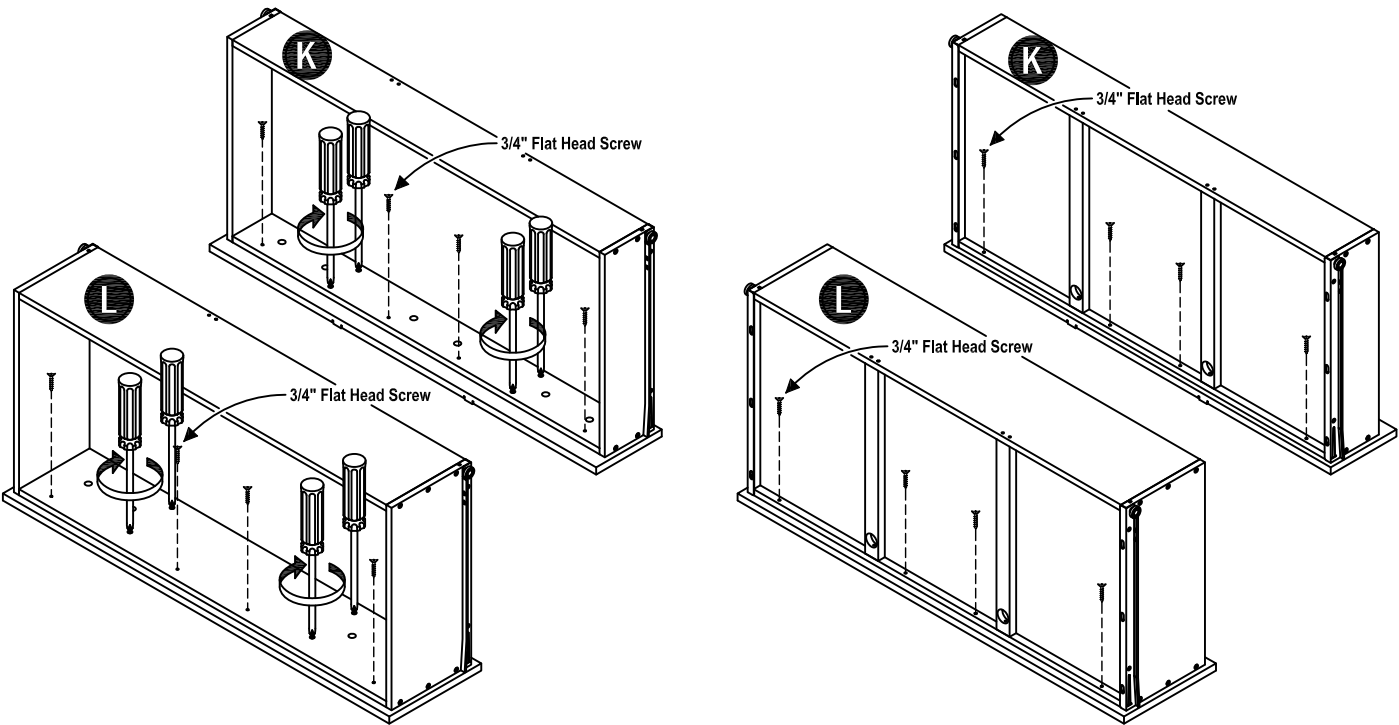


**Note:** These 3/4" Flat Head Screws on this page must be installed to complete the drawer assembly.

## ATTENTION!

  
To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly!

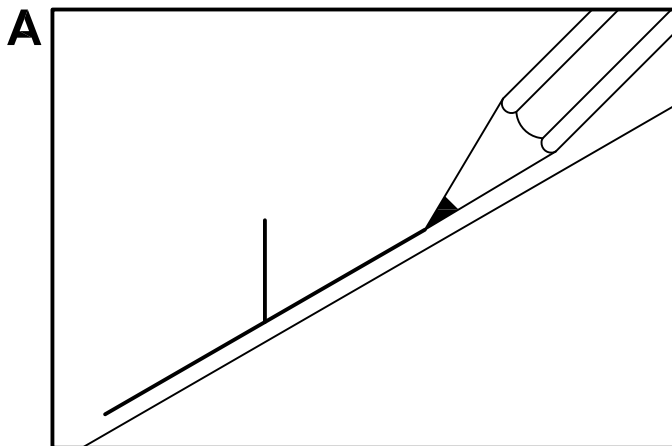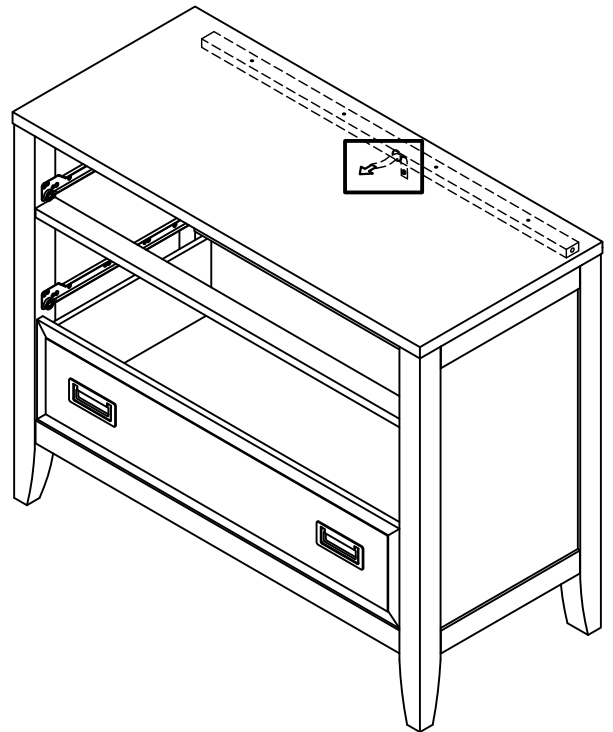

 
- Place the unit at desired location.
- Remove Drawers (K,L) from unit.
- Mark wall with pencil to show position of hole in Top (A).
- Move unit.

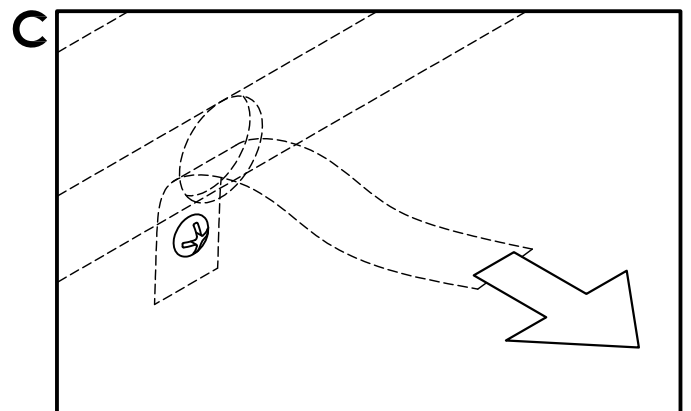

 - Move unit back into place.
- Insert Tipover Restraint into unit through hole in Back Panel (I).

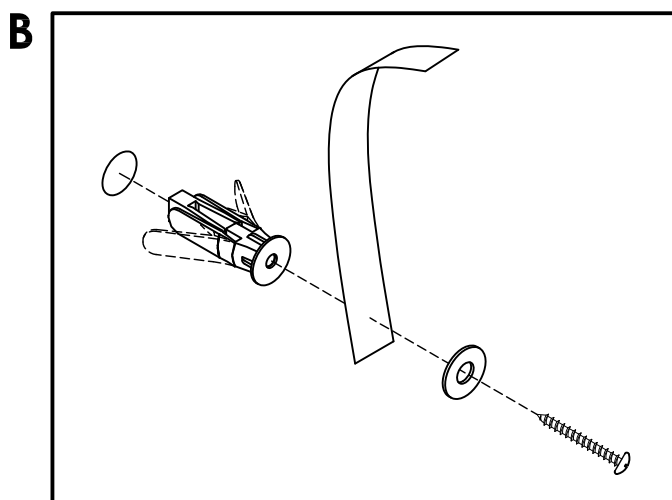


 - Drill a 3/8" hole in wall 2 1/2" below mark.
- Insert Anchor into the wall hole.
- Attach Tipover Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer.

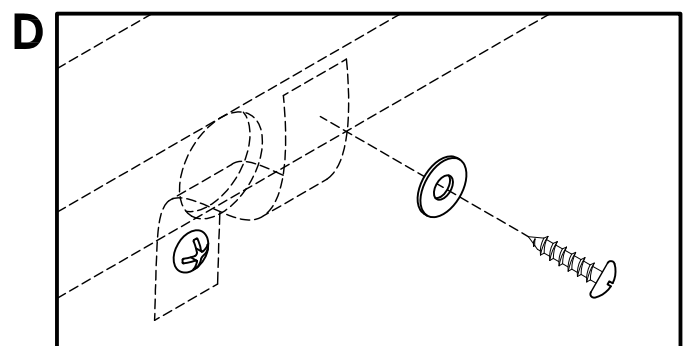

- Screw Tipover Restraint to unit with 1/2" Round Head Screw and Flat Washer.
- Slide Drawers (K,L) back into place.

# Drawer (K)

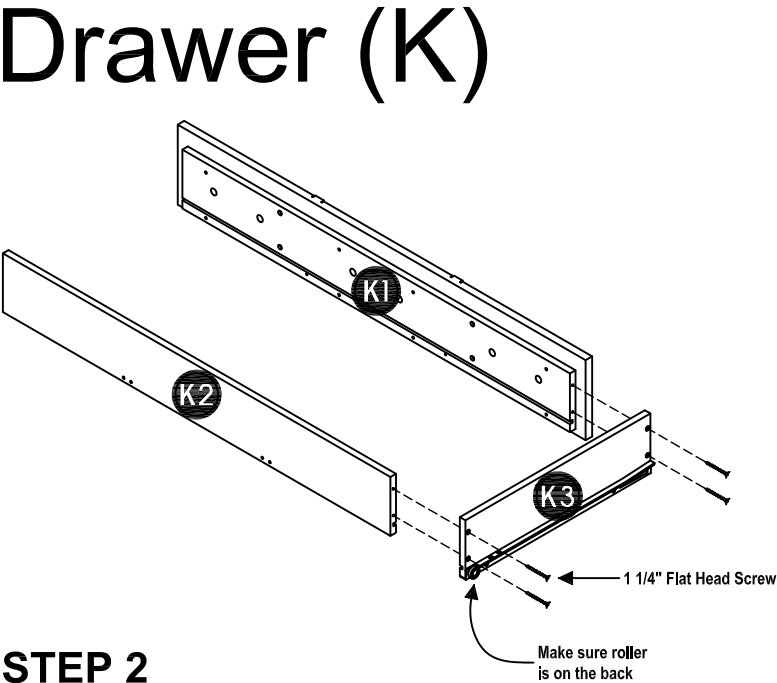 


## STEP 1

Attach Side Part (K3) to Front Part (K1) and Back Part (K2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

## STEP 2


Insert Base Part (K5) into the groove.

 Attach Side Part (K4) to unit using a Phillips screwdriver and 1 1/4" Flat Head Screws.

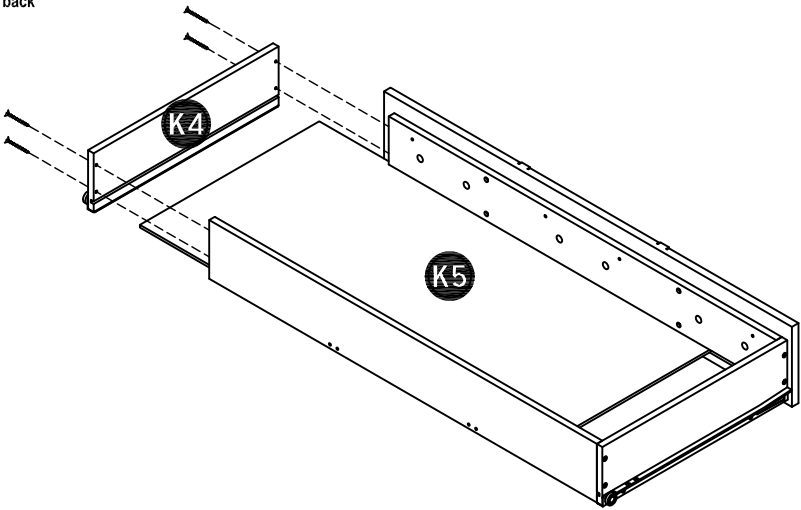







## STEP 3

 Attach Base Part (K6) to unit using a Phillips screwdriver and 1 1/4" Flat Head Screws.

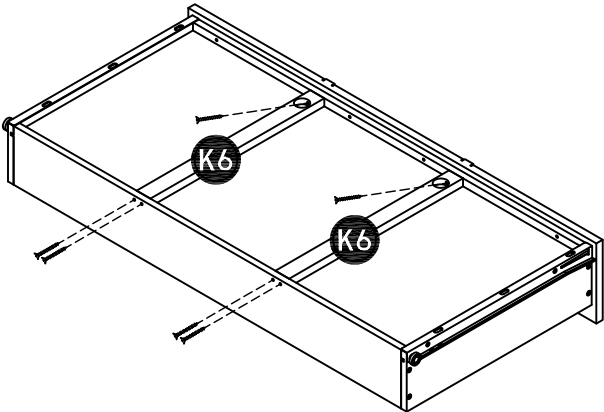



Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

     Part List

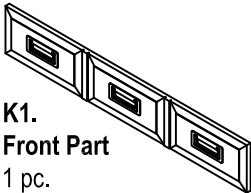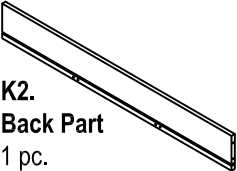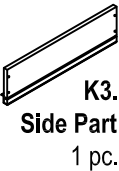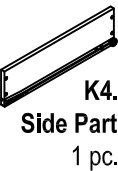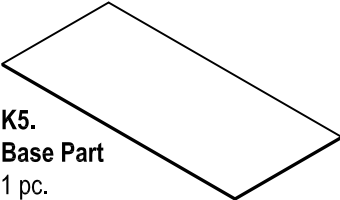 K1. Front Part 1 pc.	 K2. Back Part 1 pc.	 K3. Side Part 1 pc.	 K4. Side Part 1 pc.	 K5. Base Part 1 pc.	 K6. Base Part 2 pc.
---	--	--	--	---	--



# Drawer (L)

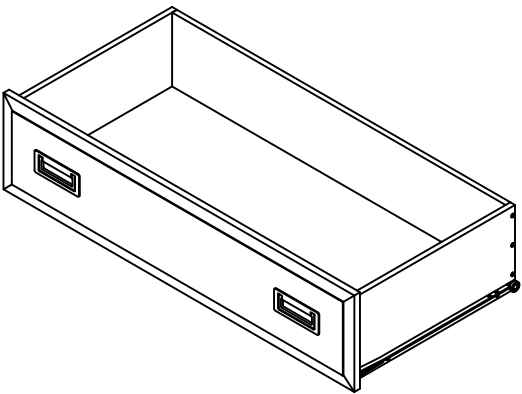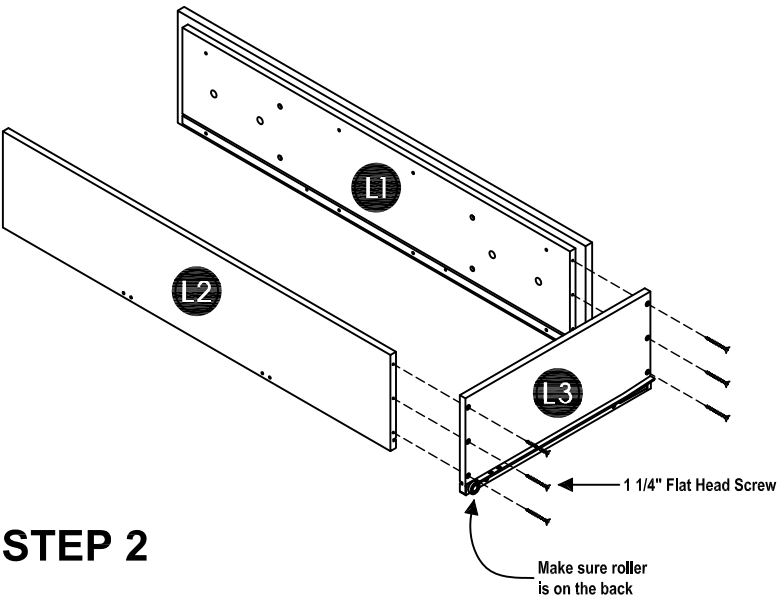  



## STEP 1

Attach Side Part (L3) to Front Part (L1) and Back Part (L2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

## STEP 2

Insert Base Part (L5) into the groove.





 
 
Attach Side Part (L4) to unit using a Phillips screwdriver and 1 1/4" Flat Head Screws.

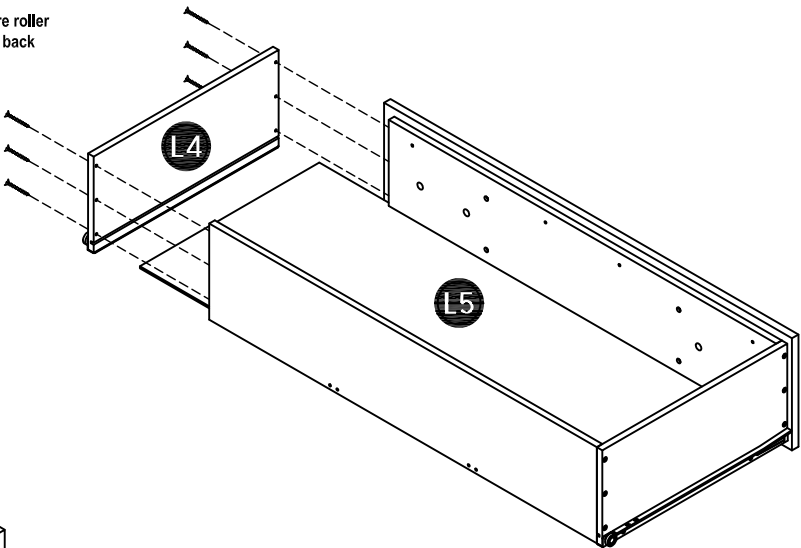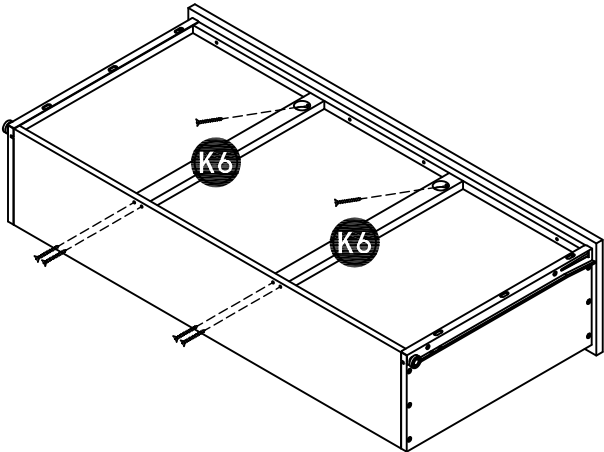

## STEP 3

Attach Base Part (K6) to unit using a Phillips screwdriver and 1 1/4" Flat Head Screws.

      Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

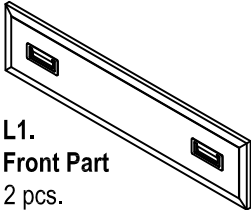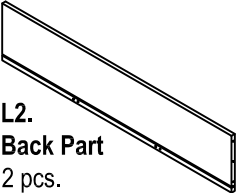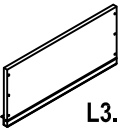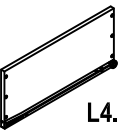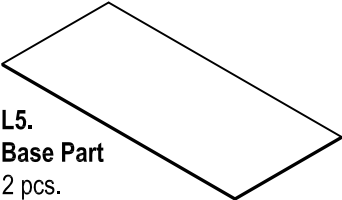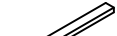Part List						
						
L1. Front Part 2 pcs.	L2. Back Part 2 pcs.	L3. Side Part 2 pcs.	L4. Side Part 2 pcs.	L5. Base Part 2 pcs.	K6. Base Part 4 pcs.	



# VERY IMPORTANT !!

## CARE INSTRUCTIONS

### NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.

### NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES PART TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT  
WRITE  
DIRECTLY  
ON  
SURFACE.



**PREVENT  
MARKING**

DO NOT  
PLACE IN  
DIRECT  
SUNLIGHT.



**PREVENT  
FADING**

DO NOT USE  
COMMERCIAL  
WAXES AND  
POLISHES.



**PREVENT  
YELLOWING**

DO NOT  
PLACE HOT  
OBJECTS  
ON SURFACE.



**PREVENT  
FINISH DAMAGE**

DO NOT  
USE  
RUBBER  
BASED  
PLACE MATS.



**PREVENT  
DISCOLORING**

### TO CLEAN

USE A SOFT CLOTH MOISTENED IN LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

[www.homestyles-furniture.com/customer\\_service](http://www.homestyles-furniture.com/customer_service)

**Home Styles Consumer Assistance:** [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319