


**homestyles®**

88 5519 301

## Dining Table

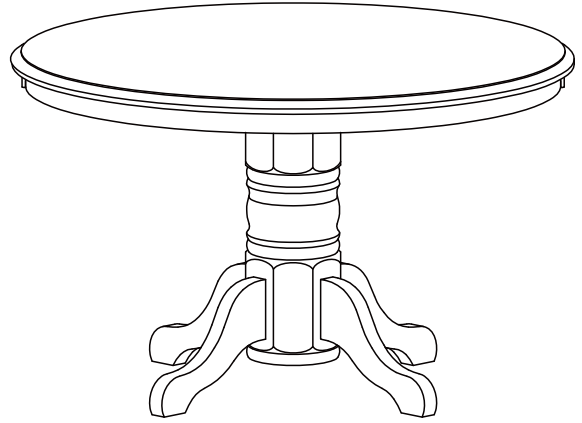


### IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

### Part List

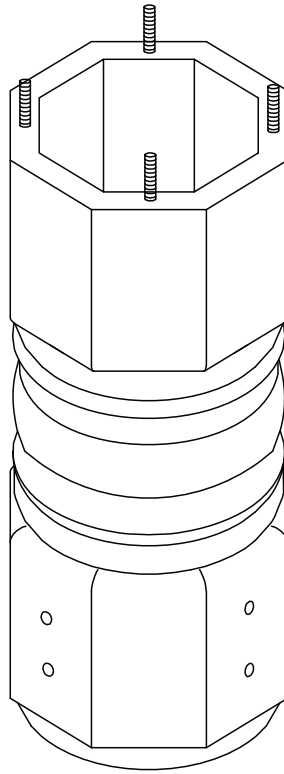

C.  
Post  
1 pc.

For assembly see instructions in carton 88 5519 302.