


# Bench

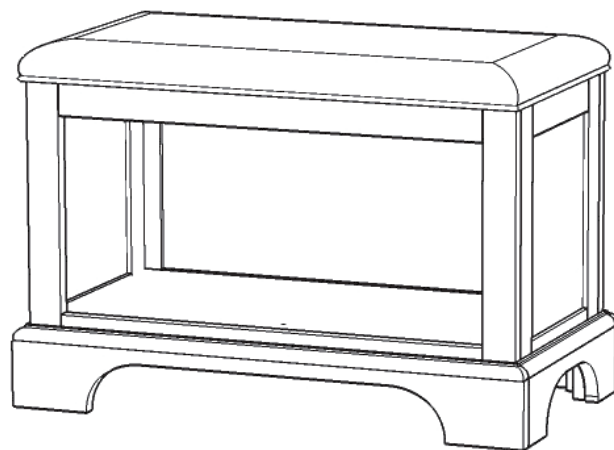


## IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.


## Part List

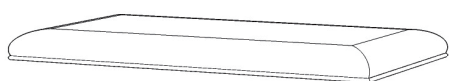


A.  
Cushion  
1 pc.




D.  
Front Stretcher  
1 pc.

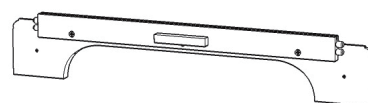


G.  
Plinth  
1 pc.

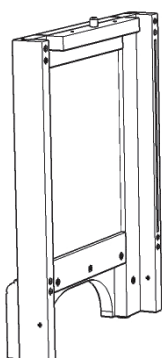


B.  
Side Panel  
1 pc.

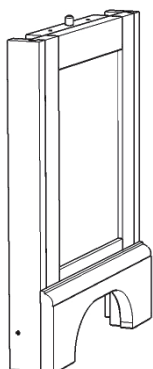

C.  
Side Panel  
1 pc.

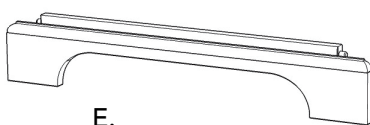


E.  
Plinth  
1 pc.

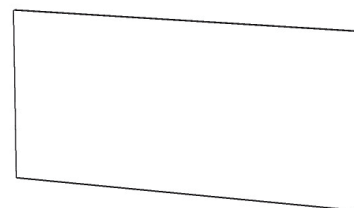

H.  
Back Panel  
1 pc.



F.  
Back Stretcher  
1 pc.

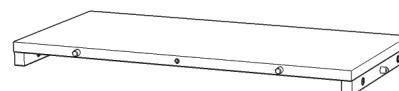

I.  
Base  
1 pc.


## Hardware List




Hex Wrench  
1 pc.




Small Hex Wrench  
1 pc.

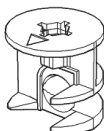


Cam Lock  
5 pcs. (+2 extra)

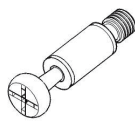

Cam Lock Screw  
5 pcs. (+1 extra)

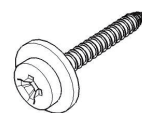

M3x30  
Wood Screw  
10 pcs. (+1 extra)

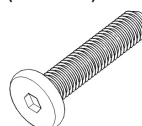

M6x32  
Head Cap Bolt  
4 pcs. (+1 extra)



Spring Washer  
4 pcs. (+1 extra)



Flat Washer  
4 pcs. (+1 extra)

Tool(s) required for assembly: Phillips screwdriver

Home Styles Customer Service: [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

## Assembly Instructions 2/3

### IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- Keep Hex Wrench in a safe place as the bolts may need to be tightened up in the future.

### STEP 1

Insert Cam Lock Screws into pre-drilled holes of Side Panels (B), (C) and Plinth (E).  
(See Figure 1)


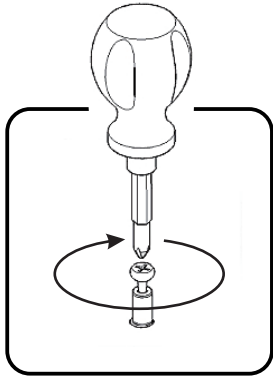


Figure 1

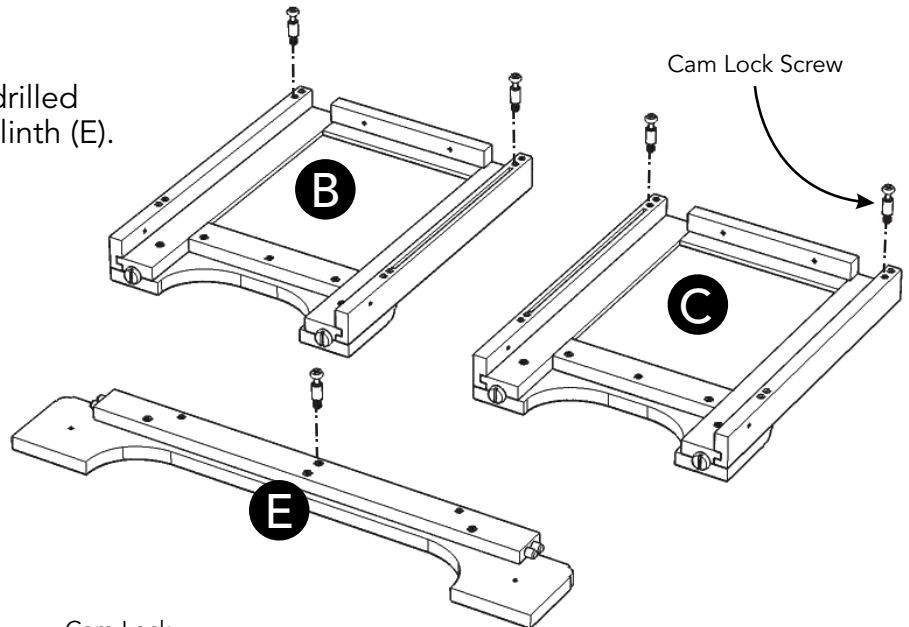

### STEP 2

Attach Plinth (E) to Base (I) with Cam Lock. (See Figure 2)

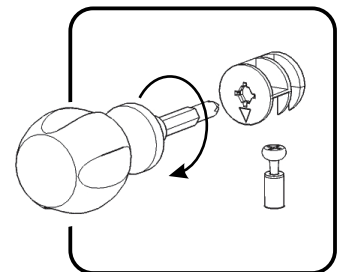
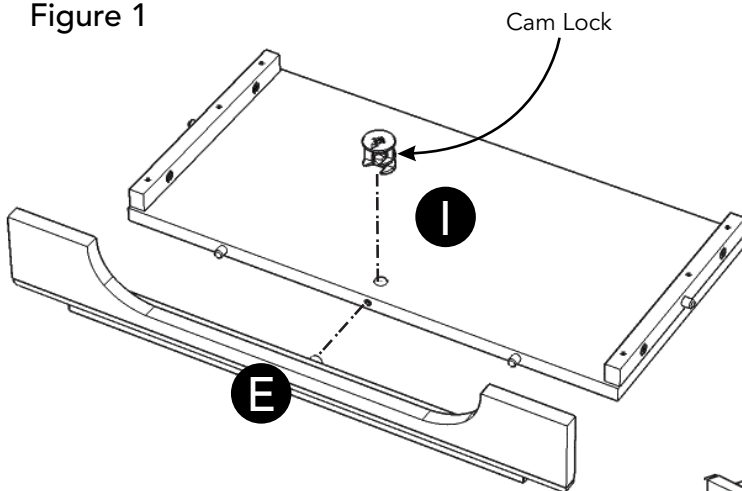


Figure 2

### STEP 3

Attach unit from Step 2 and Plinth (G) to Side Panel (B) with Flat Washers, Spring Washers, Head Cap Bolts and Wood Screws. (See Figures 3 and 4)

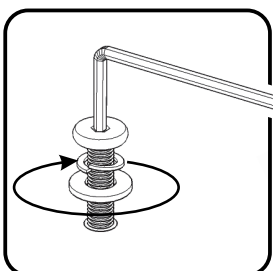


Figure 3


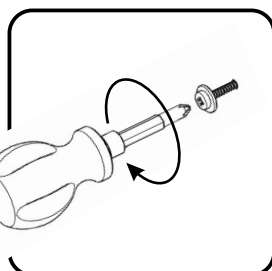




Figure 4

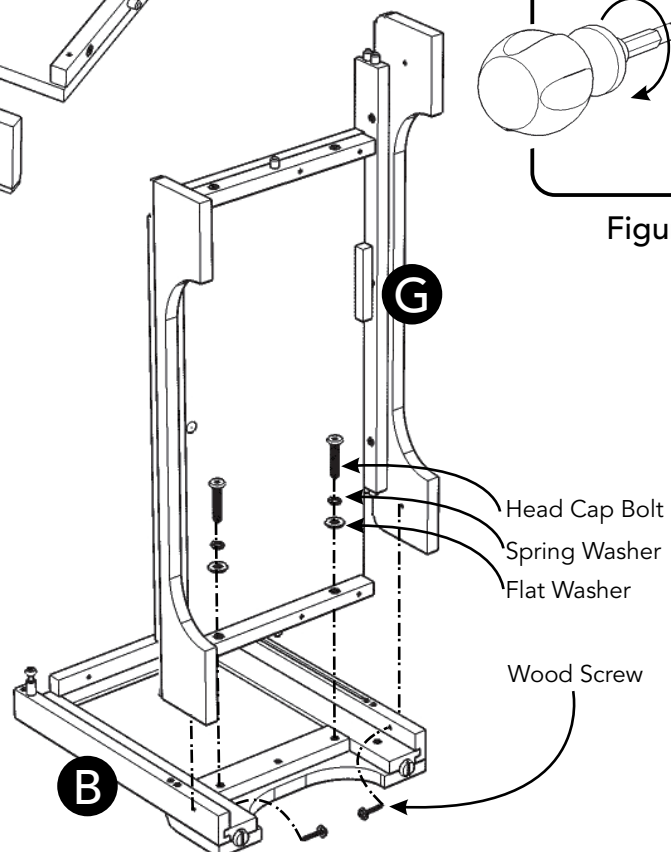

## STEP 4

Attach Front Stretcher (D) and Back Stretcher (F) to unit with Cam Locks.

Slide Back Panel (H) into place.

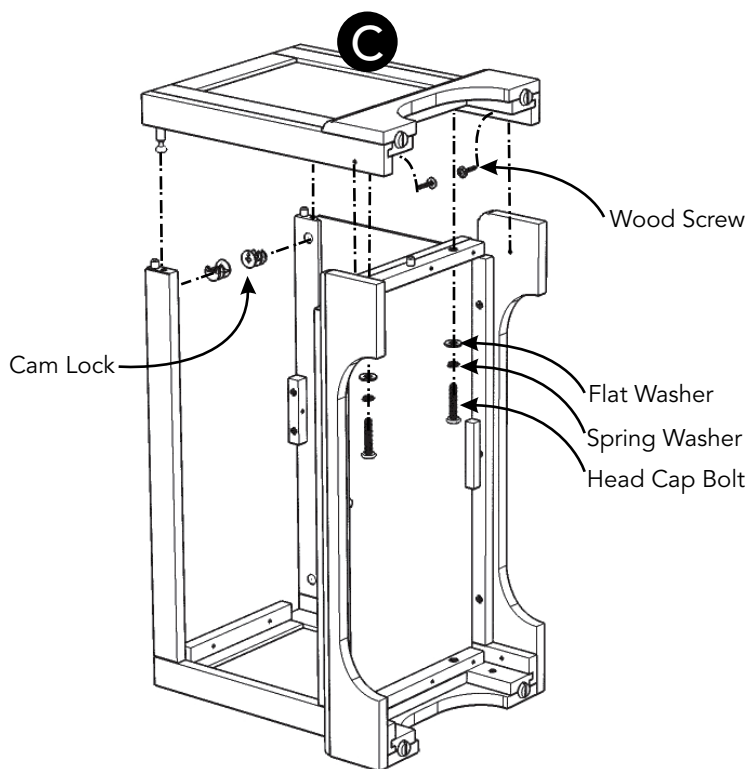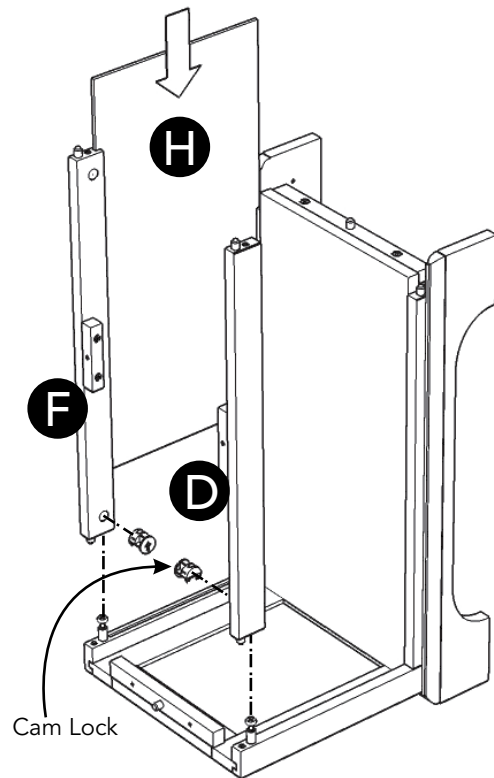

## STEP 5

Attach Side Panel (C) to unit with Flat Washers, Spring Washers, Head Cap Bolts, Cam Locks and Wood Screws.

## STEP 6

Turn the unit to its' upright position.

Attach Cushion (A) to unit with Wood Screws. (See Figure 5)


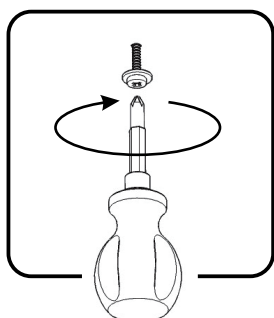


Figure 5

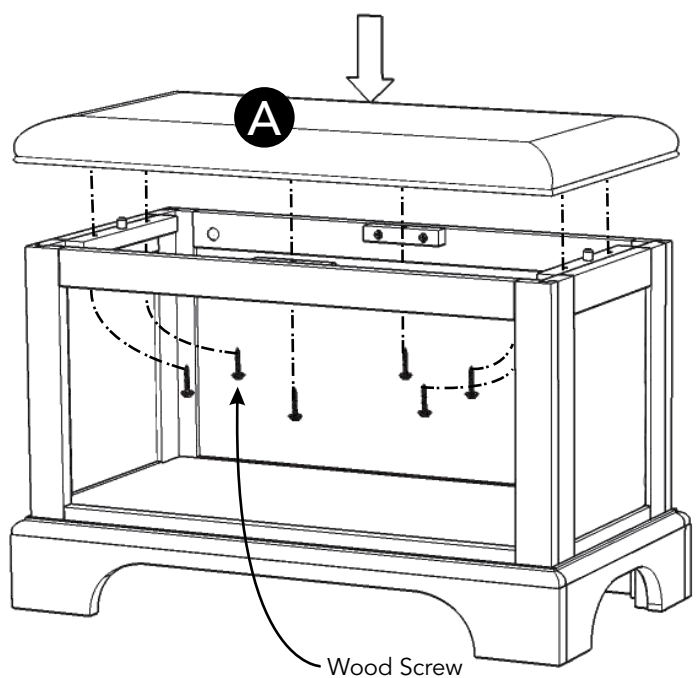

# CARE INSTRUCTIONS

## NEVER


allow liquids to remain on furniture.  
Absorption causes parts to warp  
and split and finishes to delaminate.

## NEVER

use glass cleaners on  
finished furniture. Ammonia  
chemically attacks the finish.



Do not use power tools  
above 8 volts to assemble.  
**PREVENT  
CRACKING**

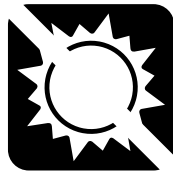


Do not place  
in direct sunlight.  
**PREVENT  
FADING**



Do not write  
directly on surface.  
**PREVENT  
MARKING**



Do not place hot  
objects on surface.  
**PREVENT  
FINISH DAMAGE**

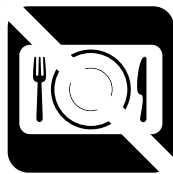

Do not use rubber  
based placemats.  
**PREVENT  
DISCOLORING**



Do not use commercial  
waxes and polishes.  
**PREVENT  
YELLOWING**

## CLEAN

with a soft cloth moistened  
in lukewarm soap and water.  
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

[www.homestyles-furniture.com/customer-service/replacement-parts](http://www.homestyles-furniture.com/customer-service/replacement-parts)

Home Styles Customer Service: [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319