

88 5530 941 Storage Island

IMPORTANT NOTE

 
Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

*Home
Styles*



Part List

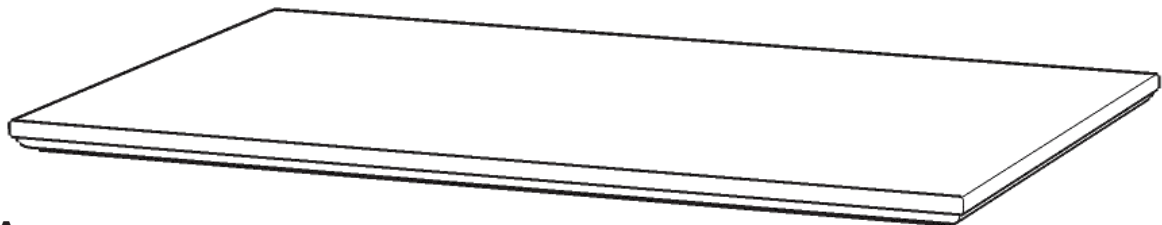

A.
Top
1 pc.

 
For assembly see instructions in carton 88 5530 942

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319
servicedesk@homestyles-furniture.com

HOW TO UNPACK THE TOP


IMPORTANT

Please follow these steps to unpack the top.

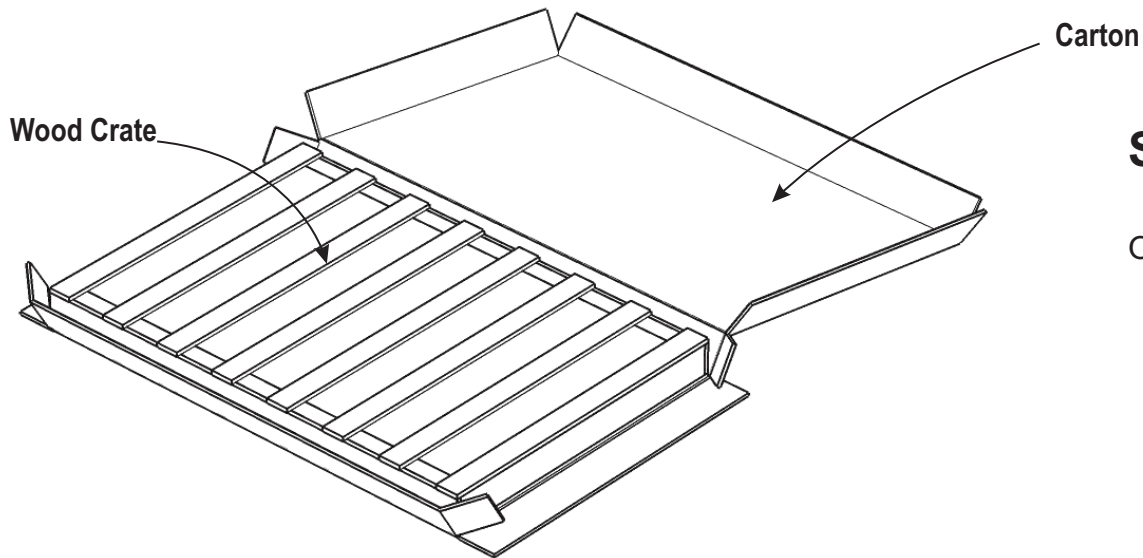

STEP 1

 
Open carton.

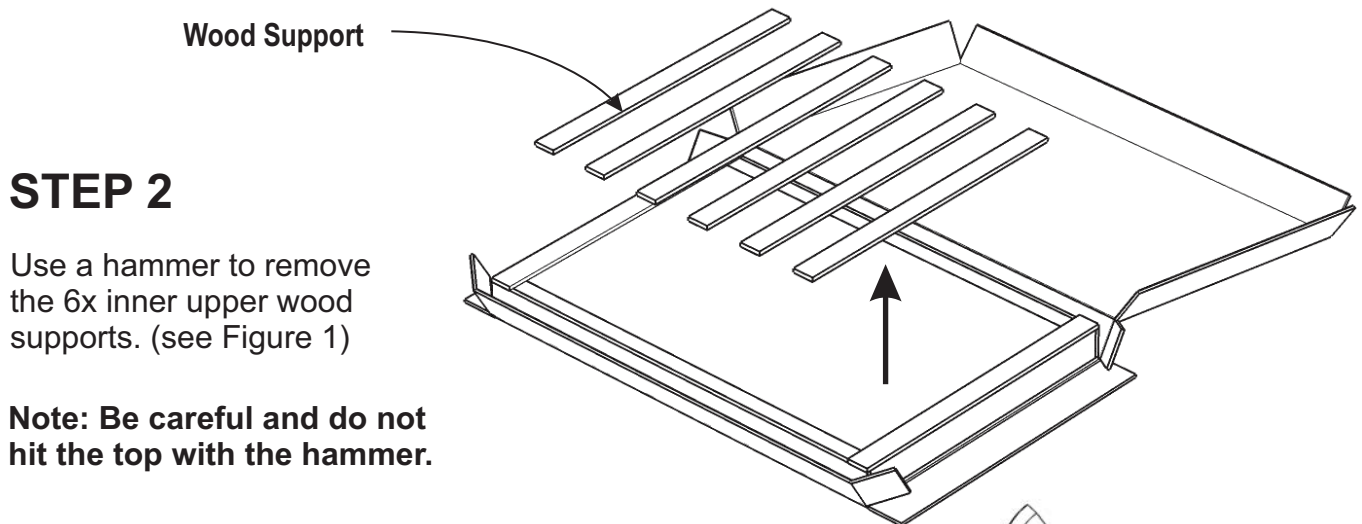

STEP 2

Use a hammer to remove the 6x inner upper wood supports. (see Figure 1)

 Note: Be careful and do not hit the top with the hammer.

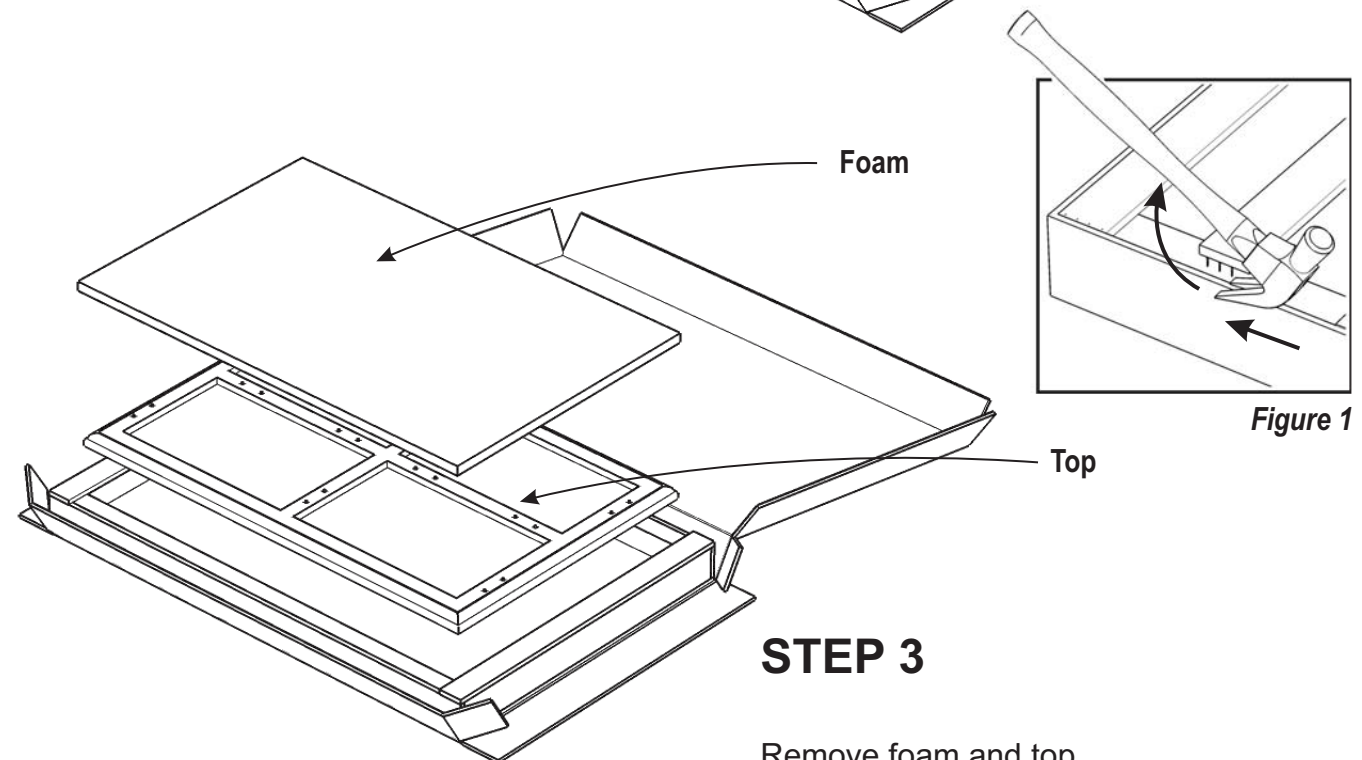

STEP 3

Remove foam and top.