

88 5004 70


Vanity with Mirror

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home
Styles

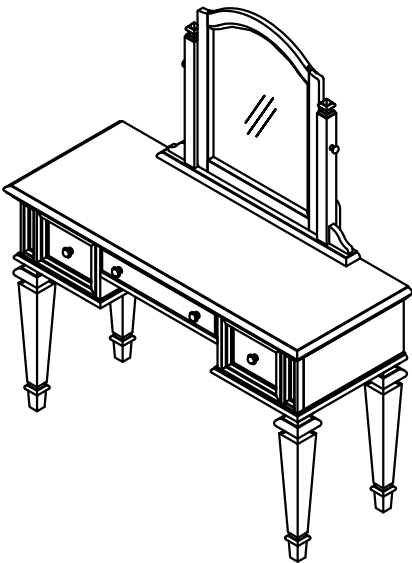

Part List

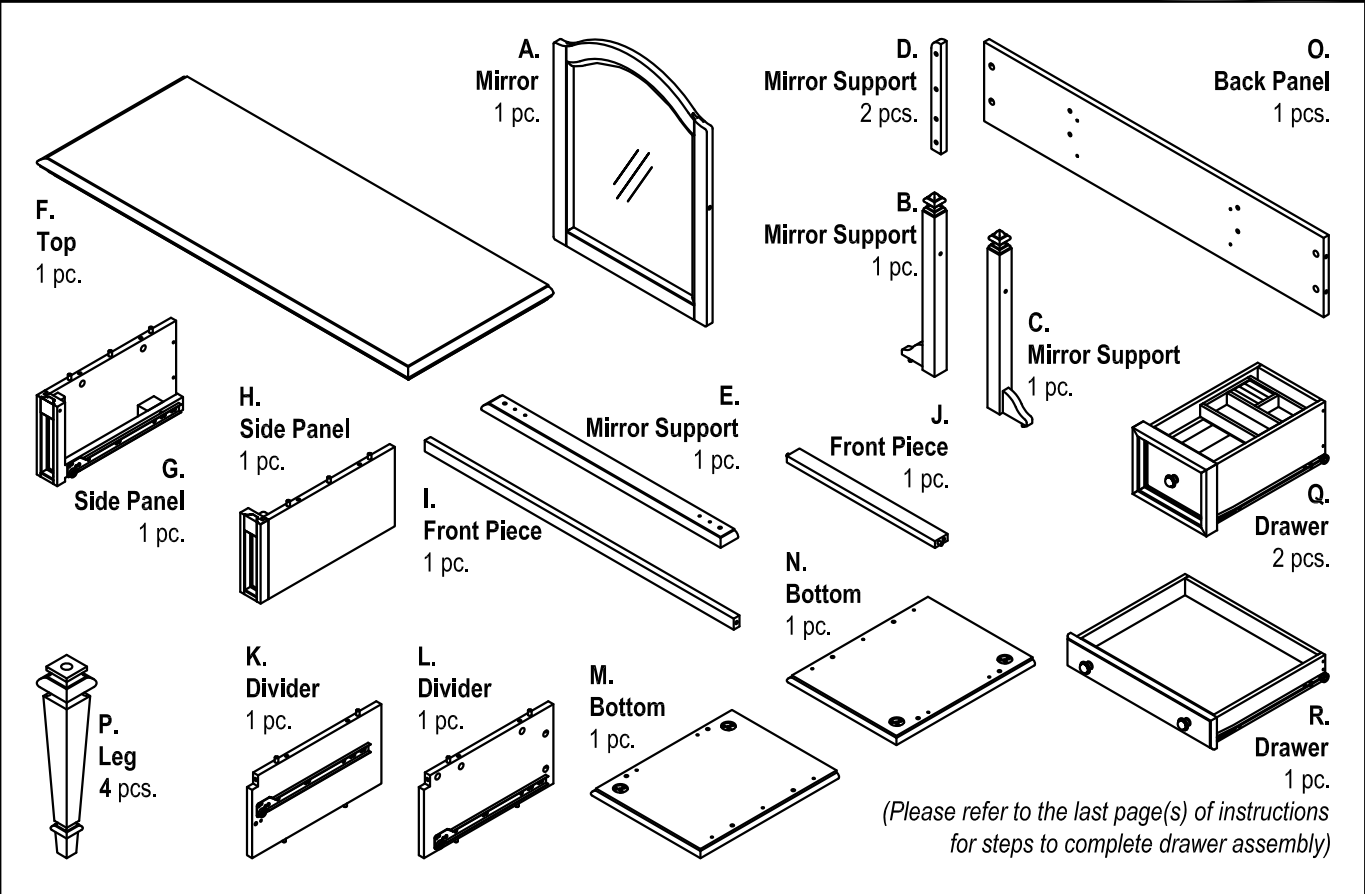

Hardware List

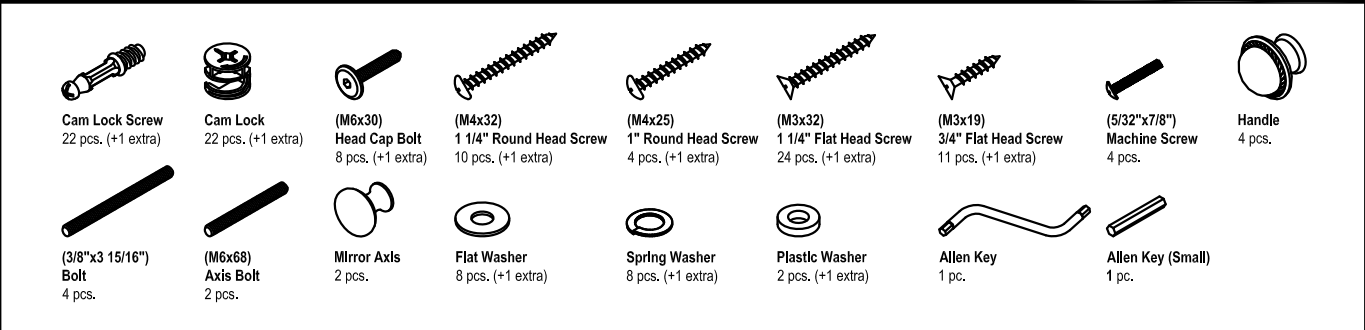

Tools required for assembly : **Phillips** screwdriver

Tools recommended for assembly : Level

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319


Assembly Instructions 2/10

IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * You should keep Allen Key in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * After assembly, item must be level to work properly. use the included adjustable levelers to level
- * Use a soft cloth between these parts and the floor.

STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Top (F), Side Panels (G) and (H), Front Piece (I), Dividers (K) and (L), and Back Panel (O).

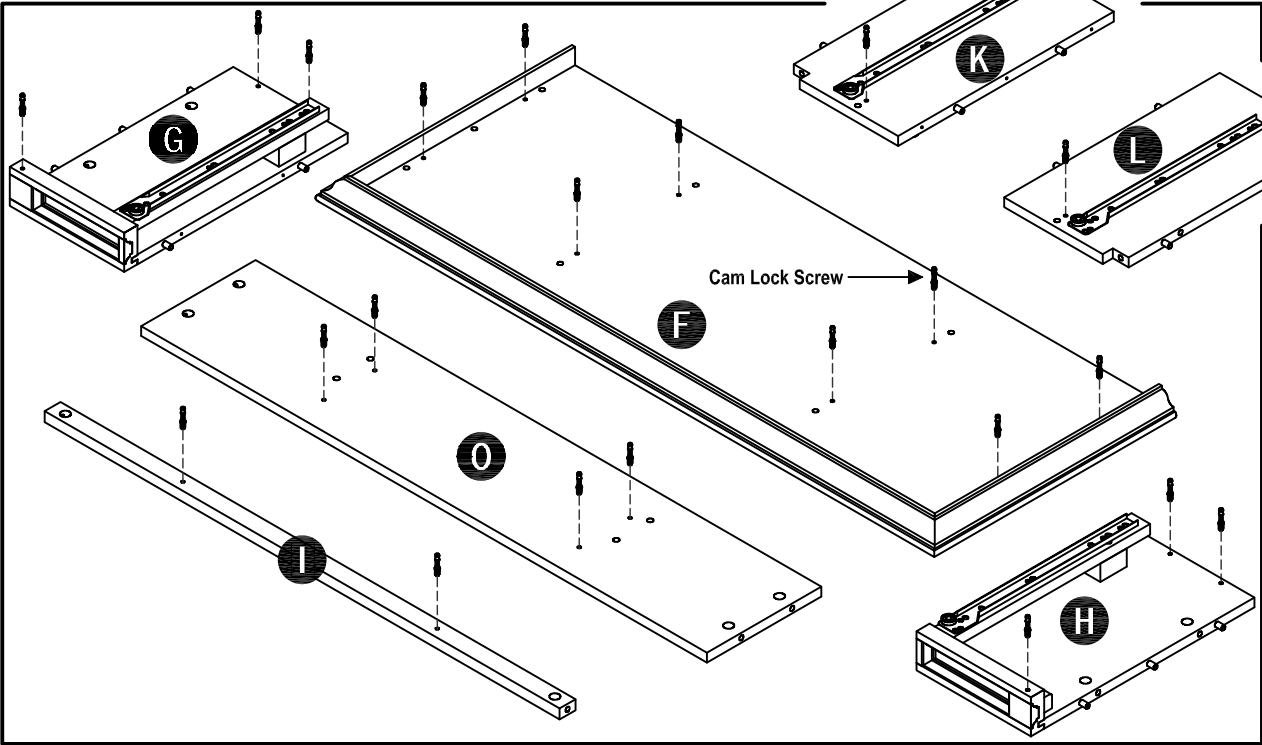

STEP 2

Attach Front Piece (J) to Dividers (K) and (L) with Cam Locks. (See Figure 1)




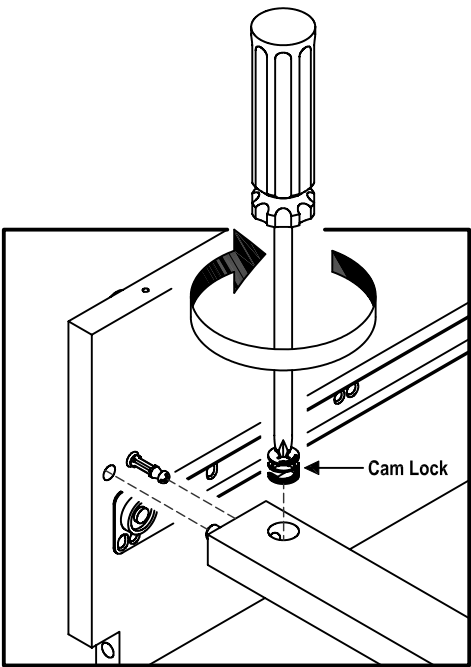


Figure 1

STEP 3

Attach Front Piece (I) and Back Panel (O) to unit with Cam Locks.

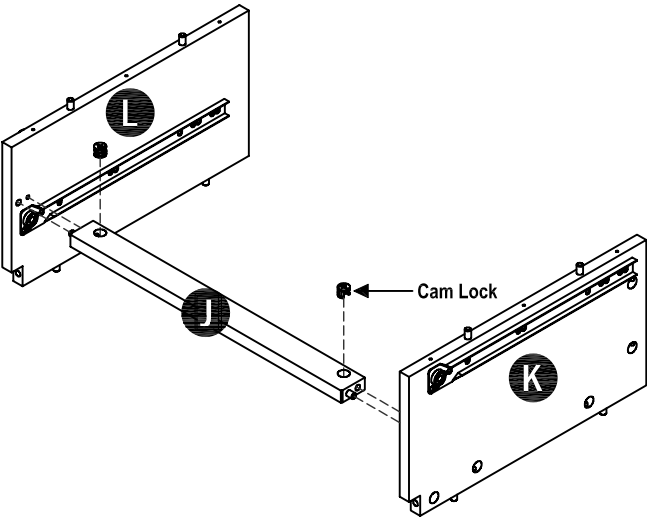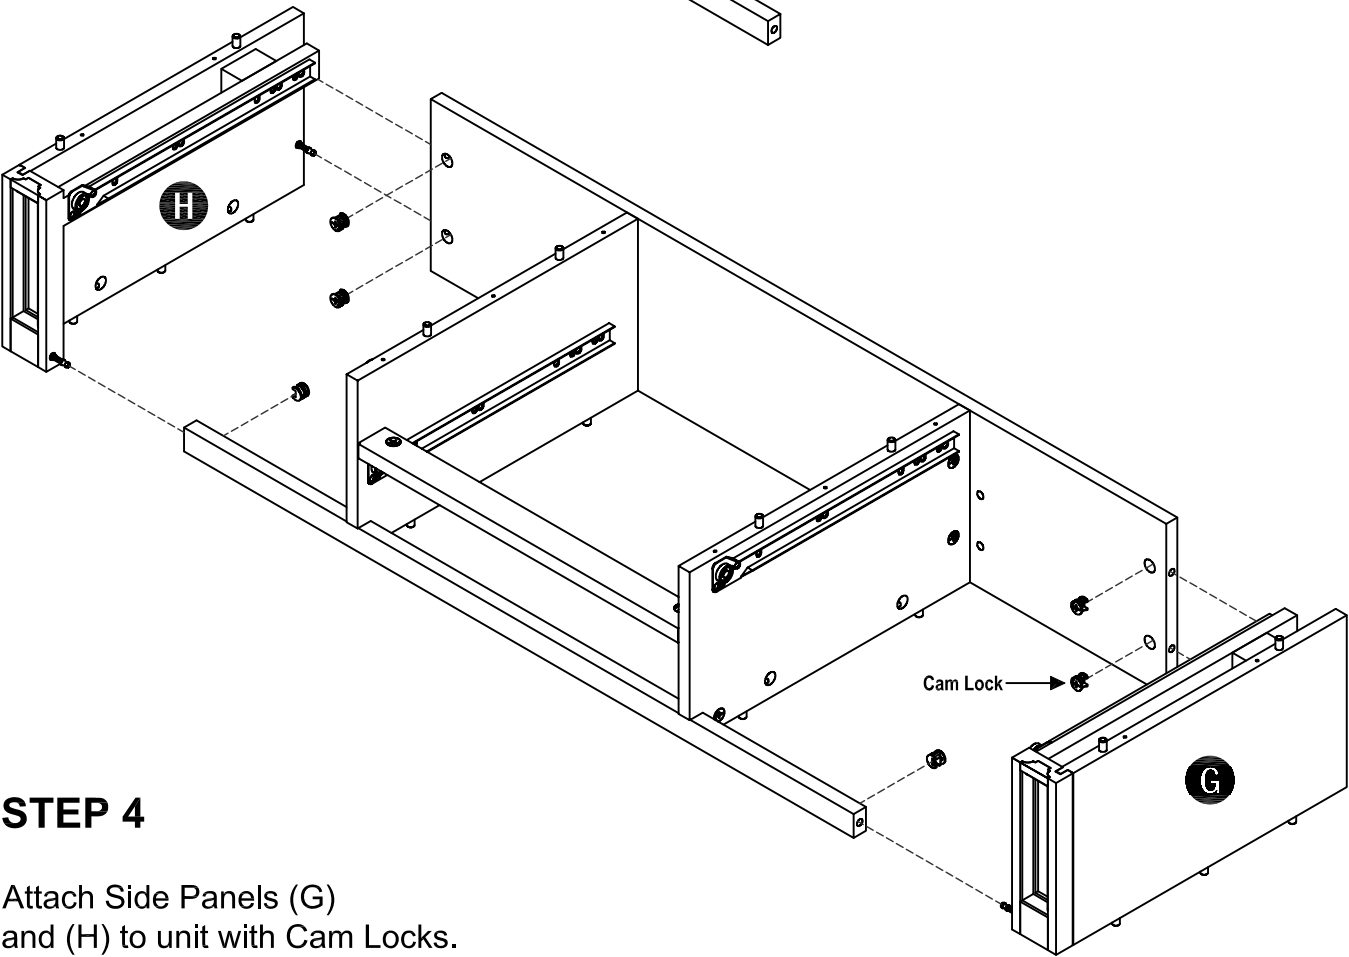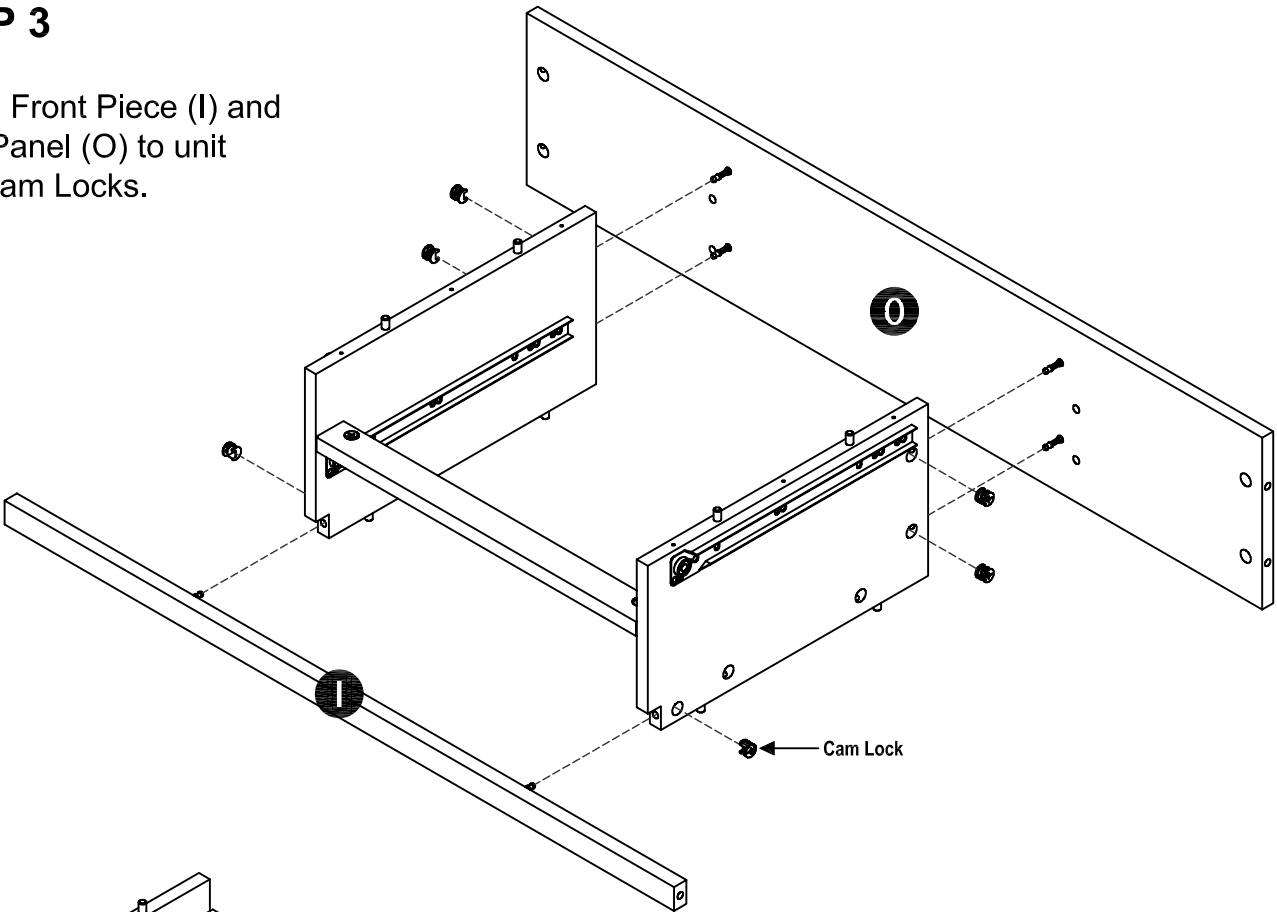



STEP 4

Attach Side Panels (G) and (H) to unit with Cam Locks.

STEP 5

Place Top (F) upside down on a soft cloth.

Attach unit to Top (F) with Cam Locks.

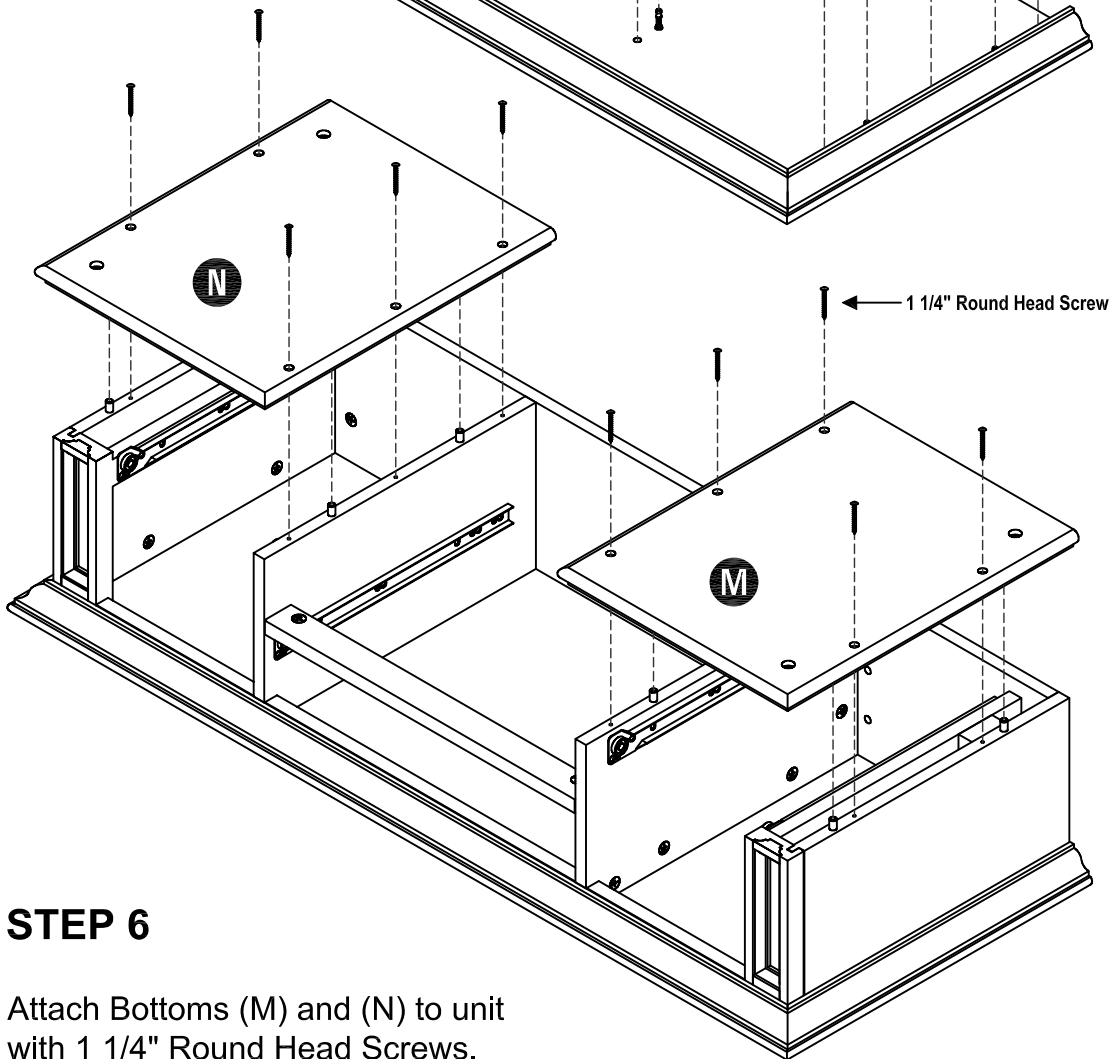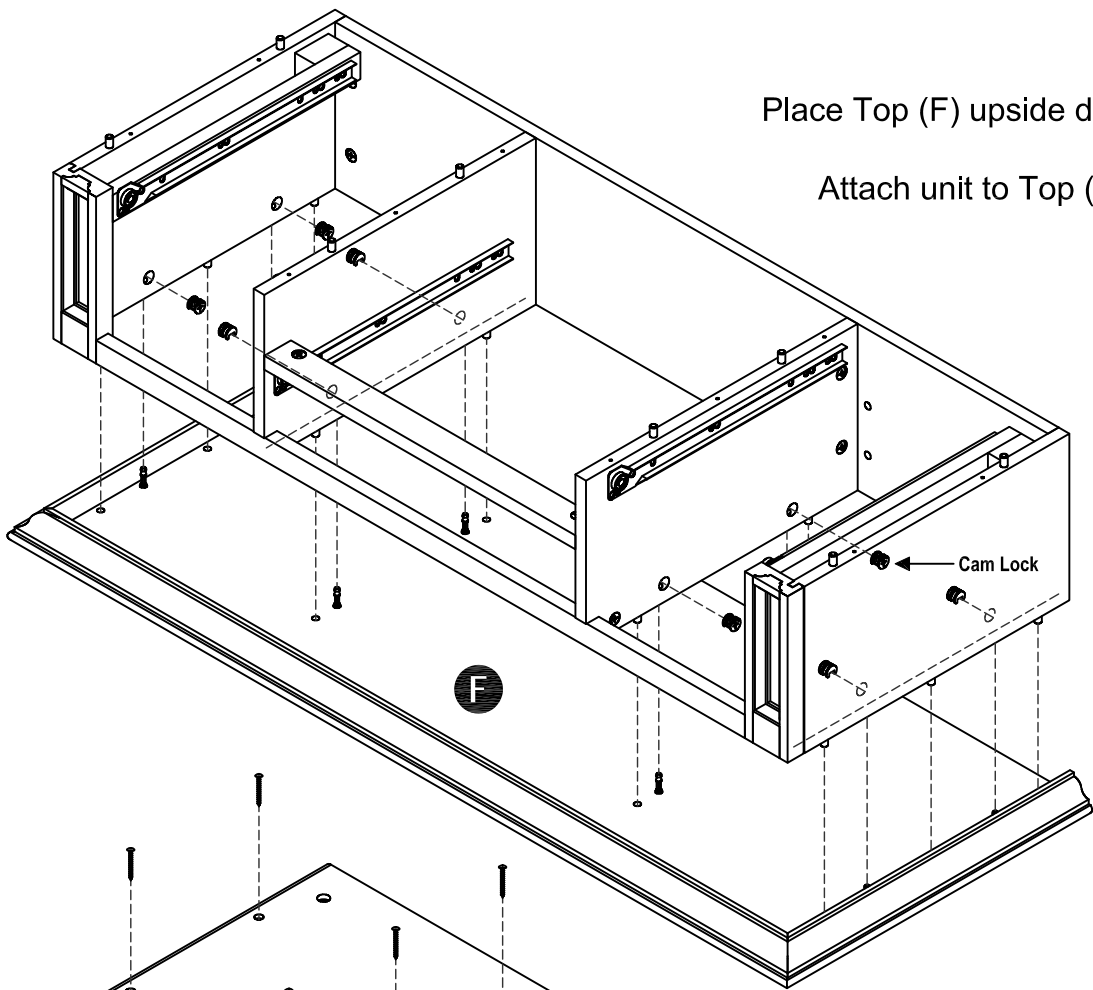


STEP 6

Attach Bottoms (M) and (N) to unit with 1 1/4" Round Head Screws.

STEP 7

Insert Bolts into the unit with 2 inches of each Bolt protruding.
(See Figure 2)

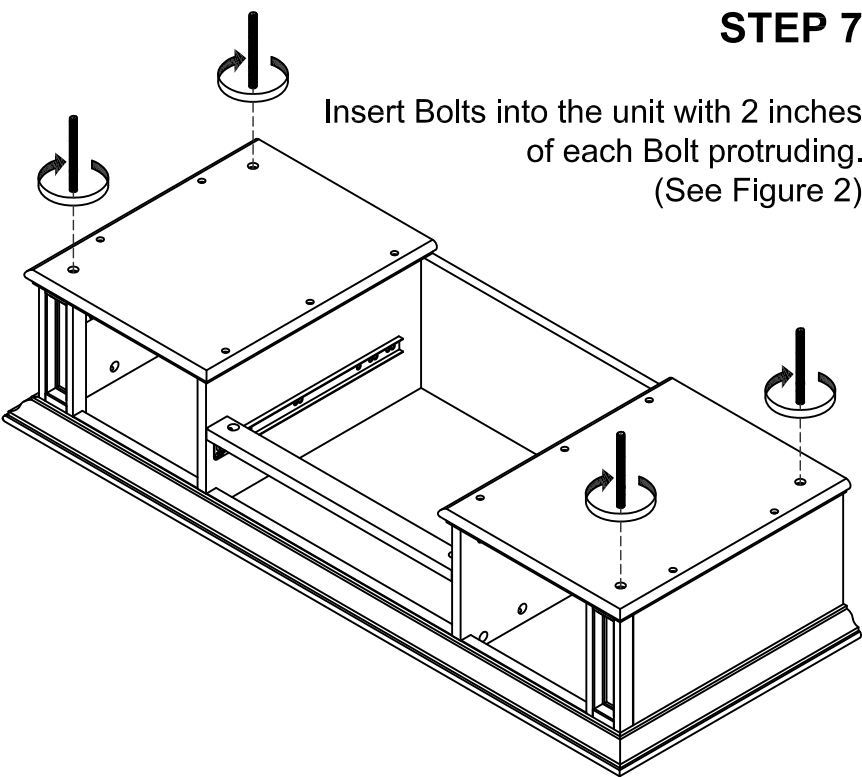

2 inch


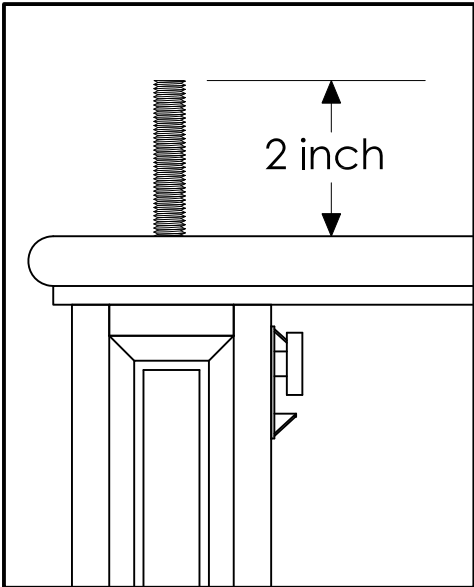


Figure 2

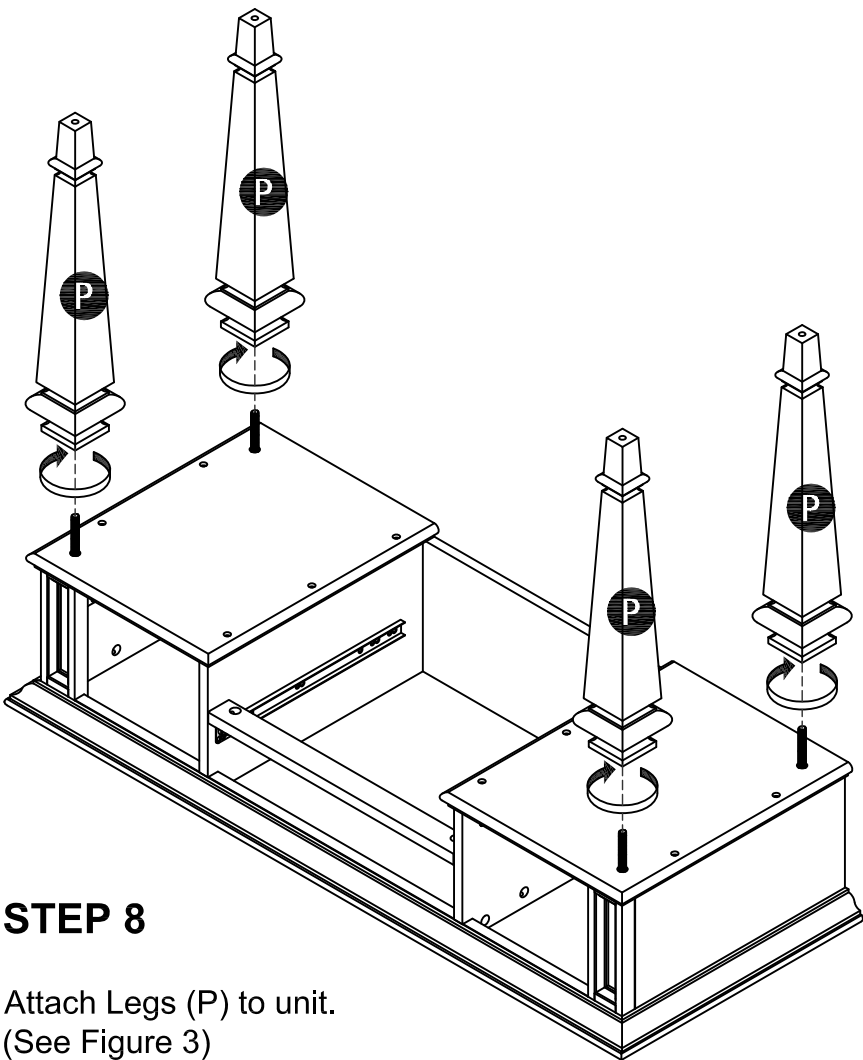

STEP 8

Attach Legs (P) to unit.
(See Figure 3)


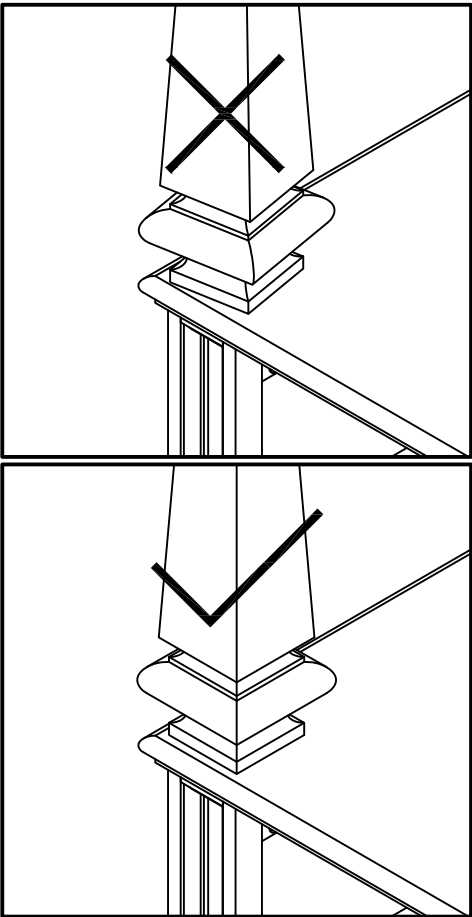


Figure 3


STEP 9

Attach Mirror Support (E) to Mirror Supports (B) and (C) to unit with 1" Round Head Screws.

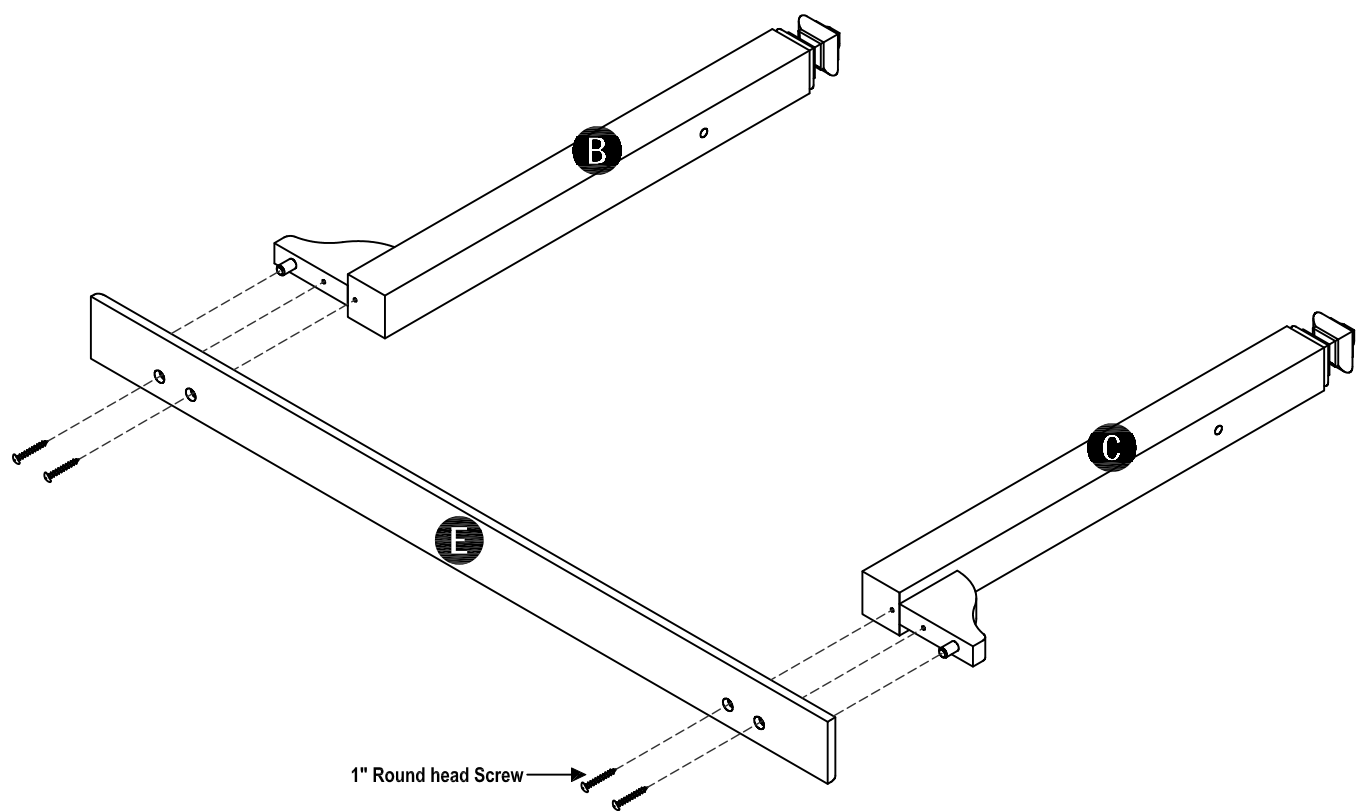

STEP 10

Attach Mirror (A) to unit from Step 9 with Axis Bolts, Mirror Axis and Plastic Washers. (See Figure 4)

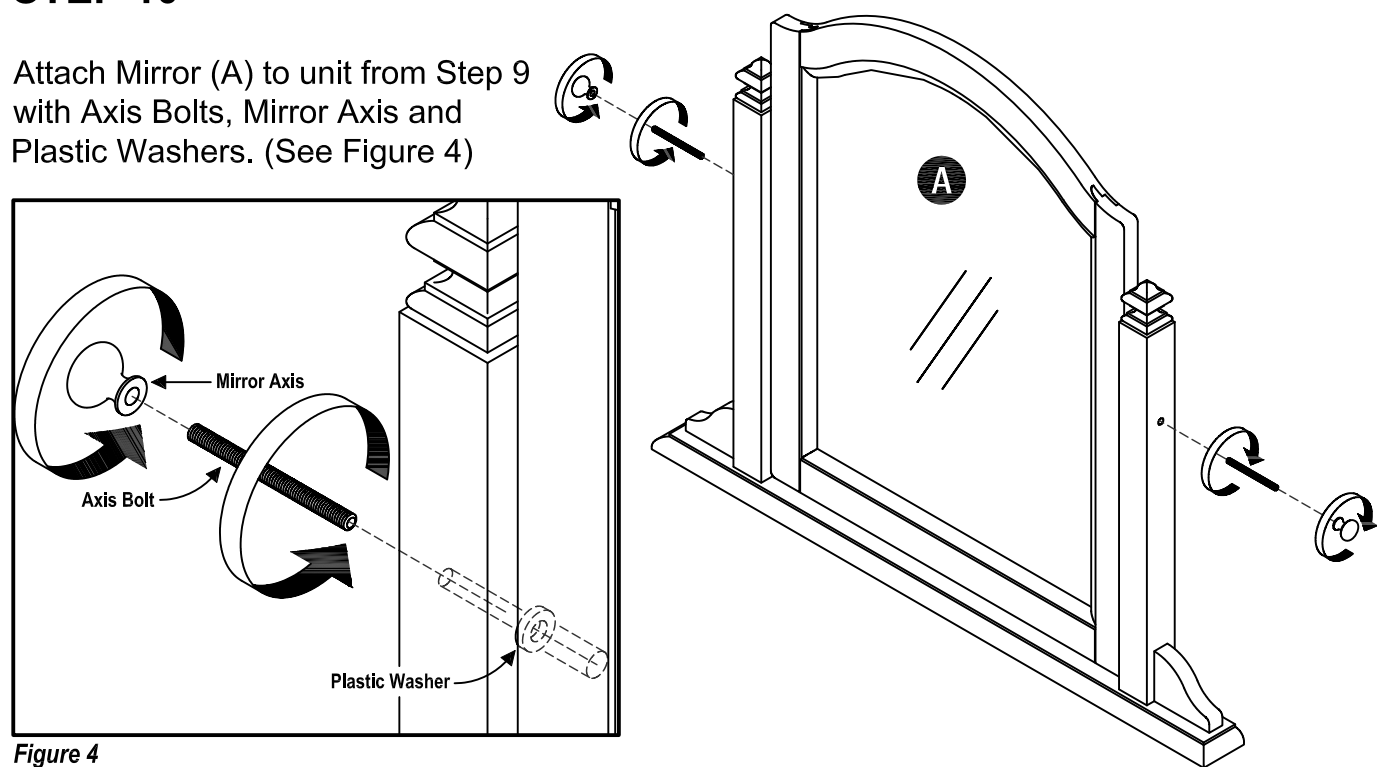

STEP 11

Attach Mirror Supports (B), (C) and (D) to unit with Head Cap Bolts, Flat Washers and Spring Washers.

Tighten it with Allen Key.
(See Figure 5)

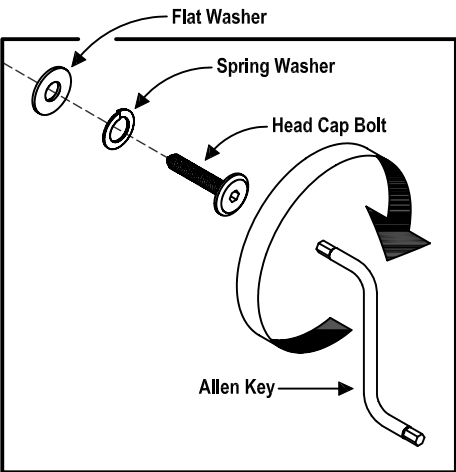


Figure 5

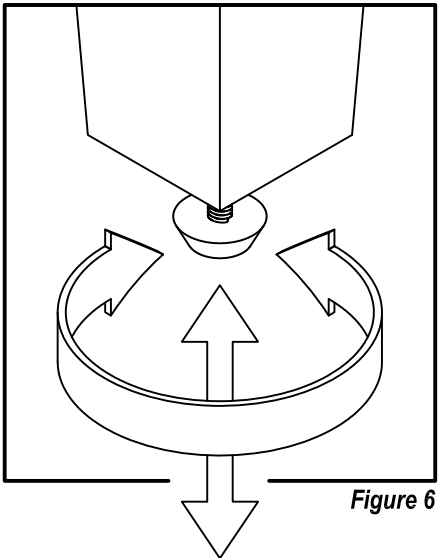
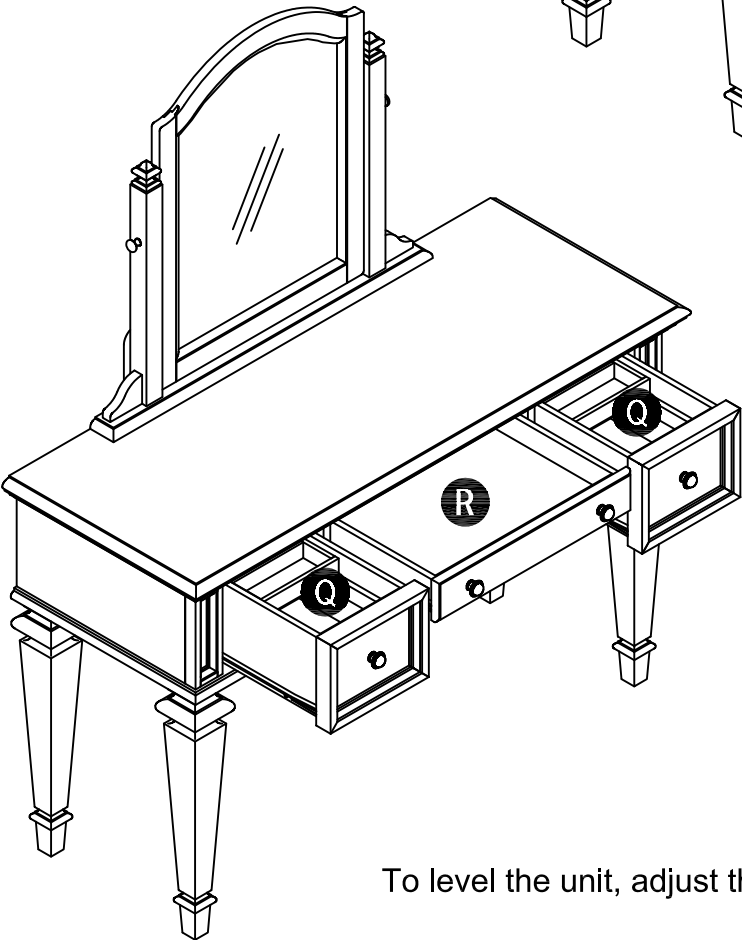
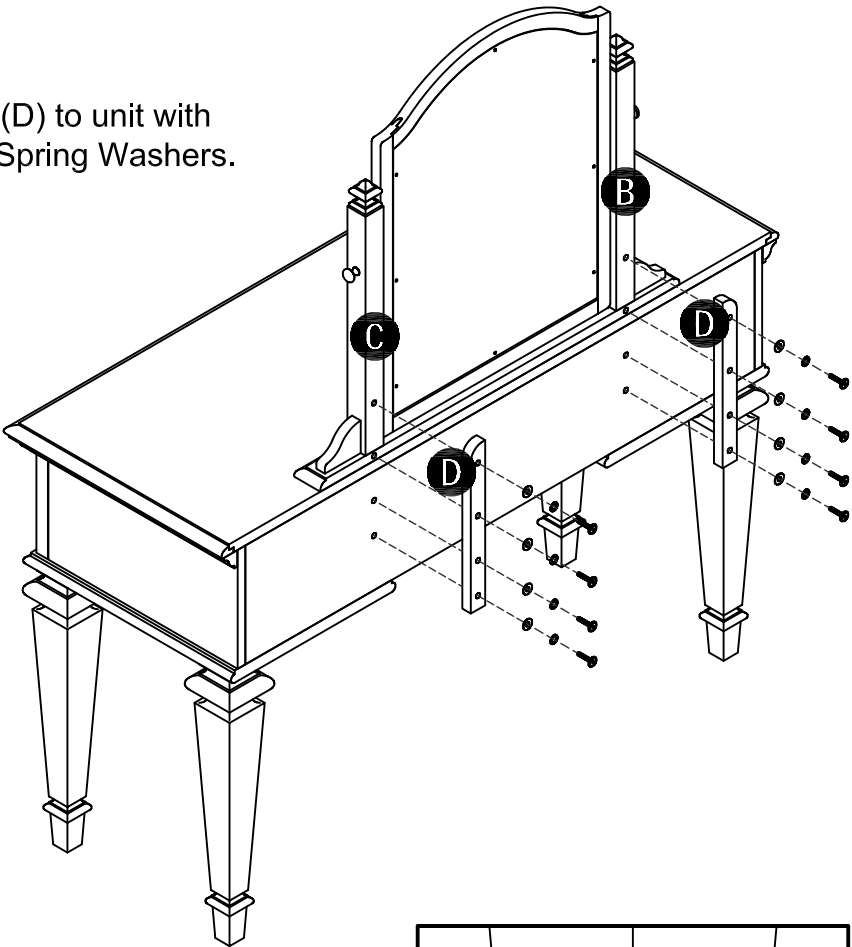


Figure 6

STEP 12



Slide Drawers (Q) and (R) into position.

To level the unit, adjust the adjustable levelers on the bottom of unit.
(See Figure 6)

Note: Follow the steps on the next page to use 3/4" Flat Head Screws to complete drawer assembly.

STEP 13

For Drawers (Q) uninstall the upper center screw and loosen slightly the lower center screw.
For Drawer (R) loosen slightly the two screws pre-installed on the back of the drawer fronts.

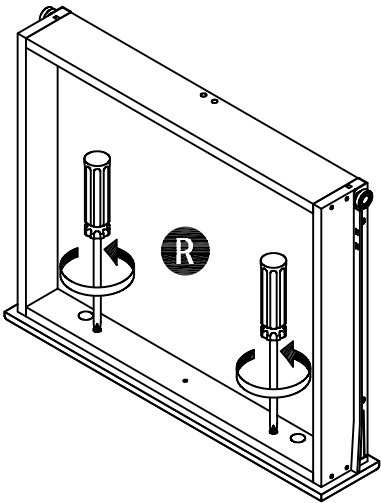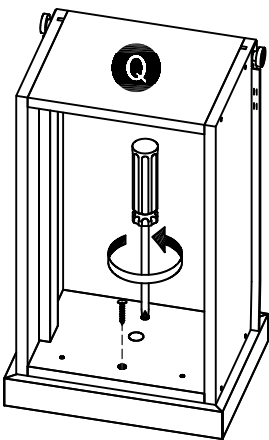


STEP 14

Insert the drawers into the main body, then adjust the drawer front panels left or right and up or down until the drawer gaps look proportional.


STEP 15

Pull the drawers open slowly and re-tighten the screws from Step 13. Make sure the front panels do not move and lock the drawer front panels into position with 3/4" Flat Head Screws.

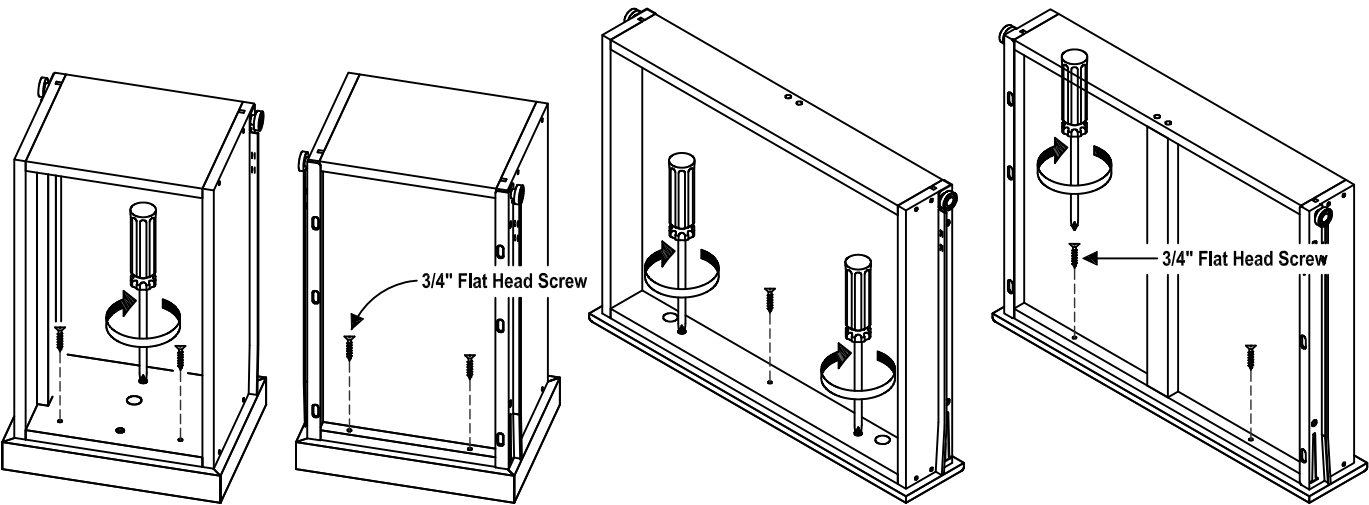

Note: These 3/4" Flat Head Screws on this page must be installed to complete the drawer assembly.

Drawer (Q)

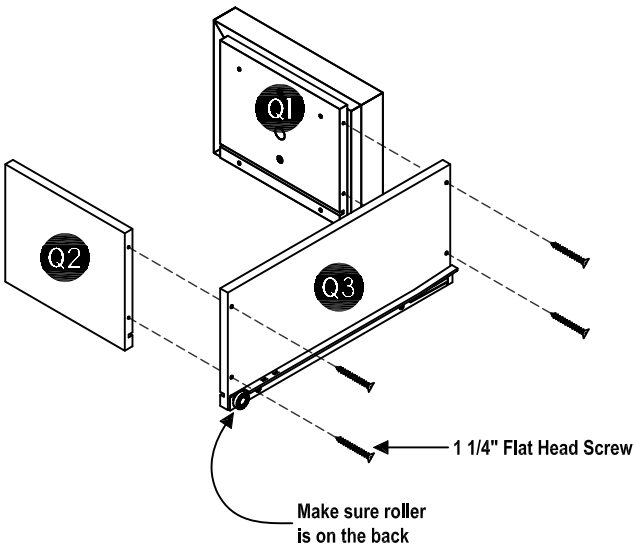


STEP 1

Attach Side Part (Q3) to Front Part (Q1) and Back Part (Q2) with 1 1/4" Flat Head Screws.

STEP 2


Insert Base Part (Q5) into the groove.

Attach Side Part (Q4) to unit with 1 1/4" Flat Head Screws.

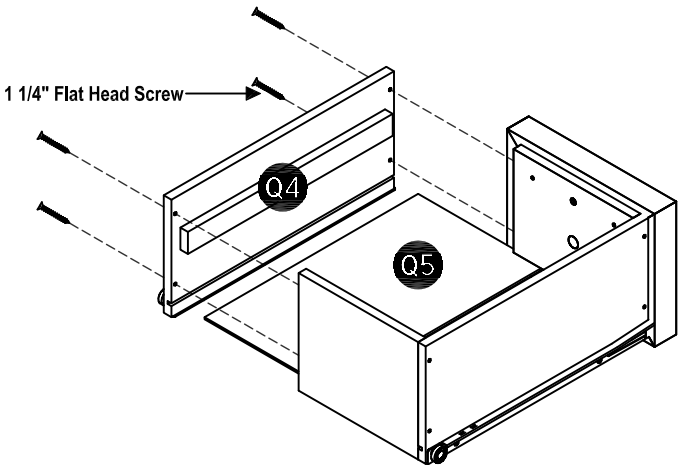


STEP 3

Attach Handle with Machine Screw.

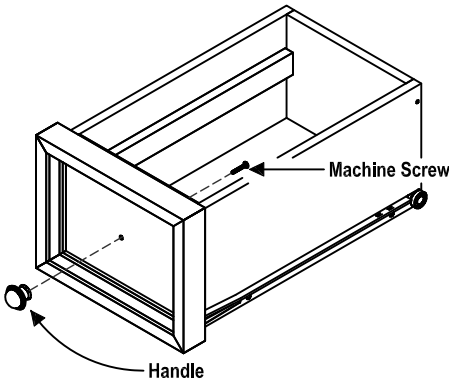







STEP 4

Place Jewel Box (Q6) into position.

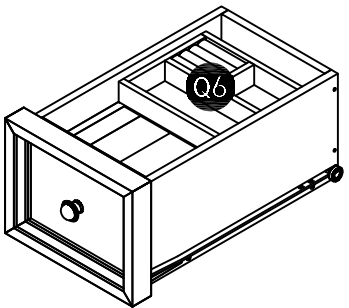


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

Part List

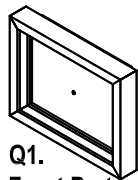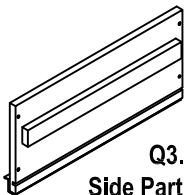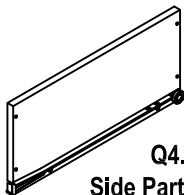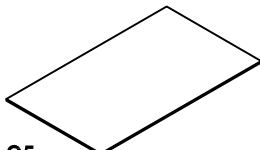					
Q1. Front Part 2 pcs.	Q2. Back Part 2 pcs.	Q3. Side Part 2 pcs.	Q4. Side Part 2 pcs.	Q5. Base Part 2 pcs.	Q6. Jewel Box 2 pcs.

Drawer (R)

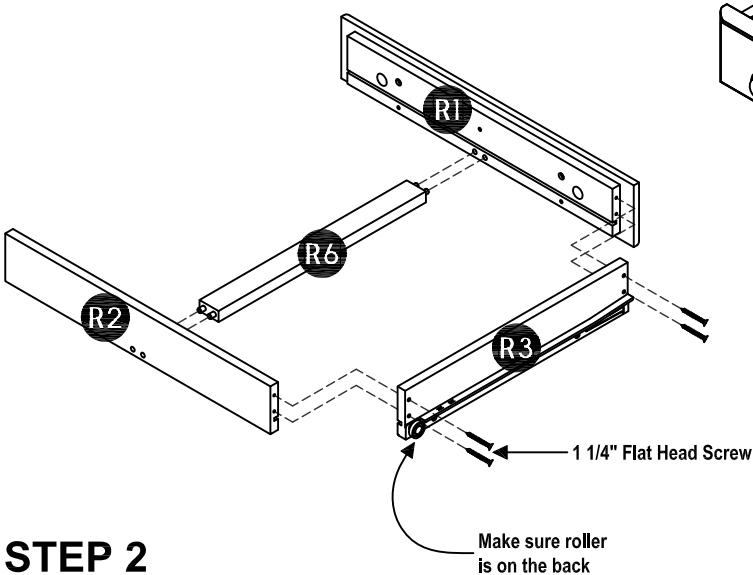

STEP 1


Attach Base Part (R6) to Front Part (R1) and Back Part (R2).

Attach Side Part (R3) to Front Part (R1) and Back Part (R2) with 1 1/4\" Flat Head Screws.

STEP 2

Insert Base Part (R5) into the groove.

Attach Side Part (R4) to unit with 1 1/4\" Flat Head Screws.

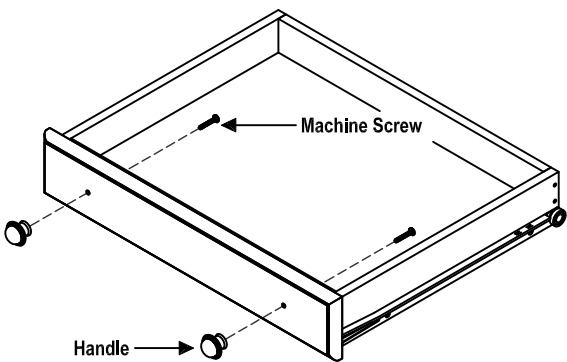

STEP 3

Attach Handles with Machine Screws.

Note: Drawer assembly is not complete until 3/4\" Flat Head Screws are used in a later step.

Part List

R1.
Front Part
1 pc.

R2.
Back Part
1 pc.

R3.
Side Part
1 pc.

R4.
Side Part
1 pc.

R5.
Base Part
1 pc.

R6.
Base Part
1 pc.

VERY IMPORTANT !!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES PART TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT WRITE DIRECTLY ON SURFACE.



PREVENT MARKING

DO NOT PLACE IN DIRECT SUNLIGHT.



PREVENT FADING

DO NOT USE COMMERCIAL WAXES AND POLISHES.



PREVENT YELLOWING

DO NOT PLACE HOT OBJECTS ON SURFACE.



PREVENT FINISH DAMAGE

DO NOT USE RUBBER BASED PLACE MATS.



PREVENT DISCOLORING

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer_service

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319