88 5050 48 Hall Tree Stand


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.





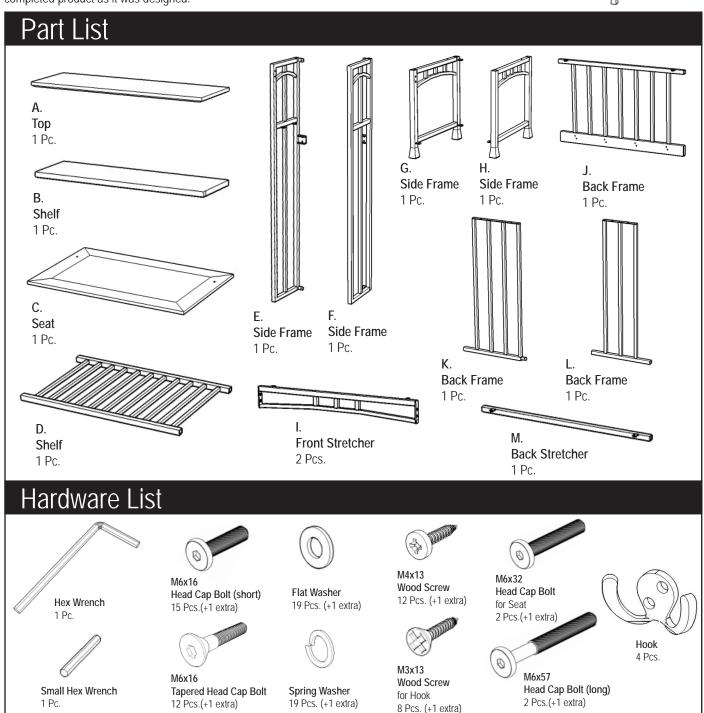

Tools required for assembly: Phillips screwdriver

Tools recommended for assembly : Level

Assembly Instructions 2/4

IMPORTANT


- * Please keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Do not tighten up all the head cap bolts until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.


* After assembly item must be level to work properly. Use the included adjustable levelers to level. STEP 1 Tapered Head Cap Bolt Attach Shelf (D) and Back Stretcher (M) to Side Frame (G) with Flat Washers, Spring Washers and Head Cap Bolts (short). (See Figure 1) Attach Front Stretcher (I) to Side Frame (G) with Tapered Head Cap Bolts. (See Figure 2) Attach Side Frame (H) to unit with Flat Washers, Spring Washers, Spring Washer Head Cap Bolts (short) and Head Cap Bolt (short) Tapered Head Cap Bolts. STEP 2 Figure 1 Figure 2 Place Seat (C) on a soft cloth. Attach Seat (C) to unit with Flat Washers, Spring Washers, Head Cap Bolts for Seat and Wood Screws. Wood Screw Head Cap Bolt for Seat Spring Washer Flat Washer

Assembly Instructions 3/4

STEP 3

Attach Back Frame (K) to Back Frame (L) with Flat Washer, Spring Washer and Head Cap Bolt (short).

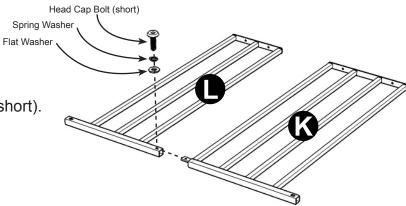

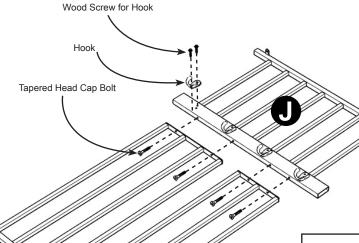

Attach Hooks to Back Frame (J) with Wood Screws for Hook into the pre-drilled holes.

(See Figure 3)

STEP 4


Attach Back Frame (J) to unit from Step 3 with Tapered Head Cap Bolts.

STEP 5


Attach Side Frame (E) to unit with Flat Washers, Spring Washers and Head Cap Bolts (short).

Attach Front Stretcher (I) to Side Frame (E) with Tapered Head Cap Bolts.

Attach Side Frame (F) to unit with Flat Washers, Spring Washers, Head Cap Bolts (short) and Tapered Head Cap Bolts.

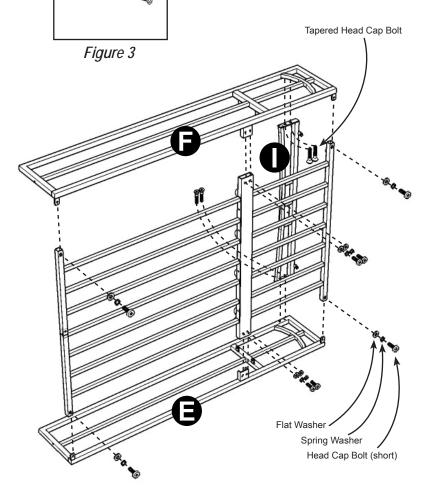

Assembly Instructions 4/4

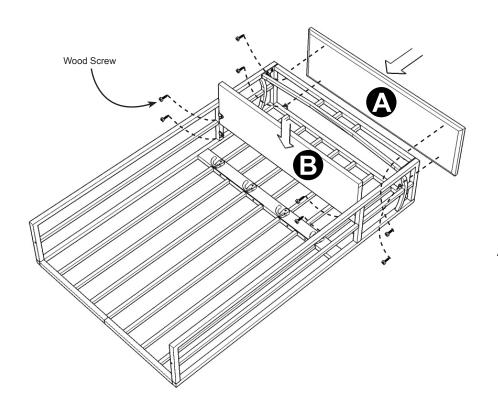

STEP 6

Attach Top (A) and Shelf (B) to unit with Wood Screws.

STEP 7

