


88 5403 60SBC

Cabana Banana II

Center Seat and Back

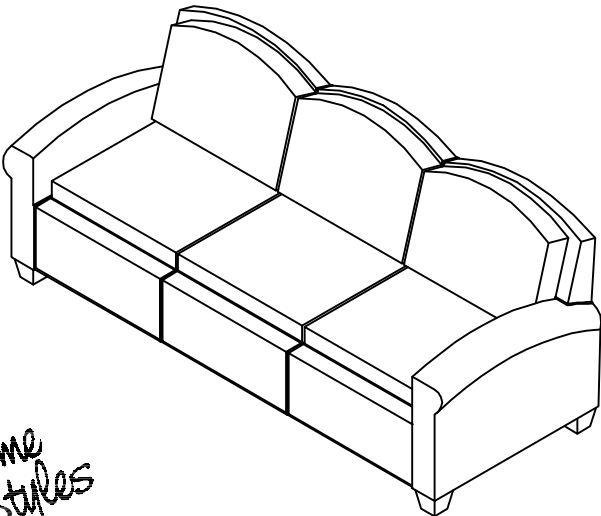


Home
Styles

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Part List

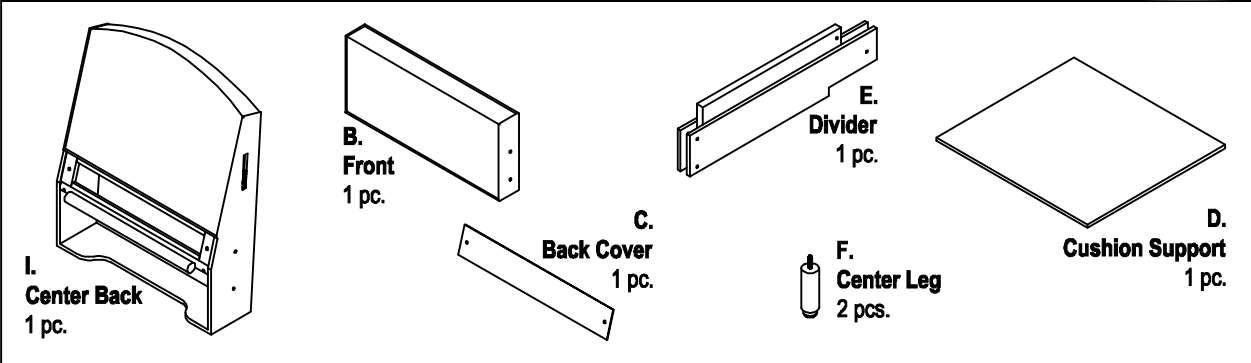

Hardware List



For assembly also need the following :


88 5403 ARM Arm Carton Carton quantity: 1		88 5403 60LSB Left Side carton Carton quantity: 1	
 Left Arm 1 pc. Right Arm 1 pc.		 B. Front 1 pc. C. Back Cover 1 pc. D. Cushion Support 1 pc. G. Left Back 1 pc.	
88 5403 CUS Cushion Carton Carton quantity: 3		88 5403 60RSB Right Side carton Carton quantity: 1	
 Back Cushion 2 pcs. Seat Cushion 2 pcs.		 B. Front 1 pc. C. Back Cover 1 pc. E. Divider 1 pc. D. Cushion Support 1 pc. F. Center Leg 2 pcs. H. Right Back 1 pc.	

Assembly Instructions 2/6

IMPORTANT

- * Do not tighten up all the bolts until each part is properly assembled.
- * You should keep Allen Key and Wrench in a safe place as you may need to tighten up the bolts in the future.


STEP 1

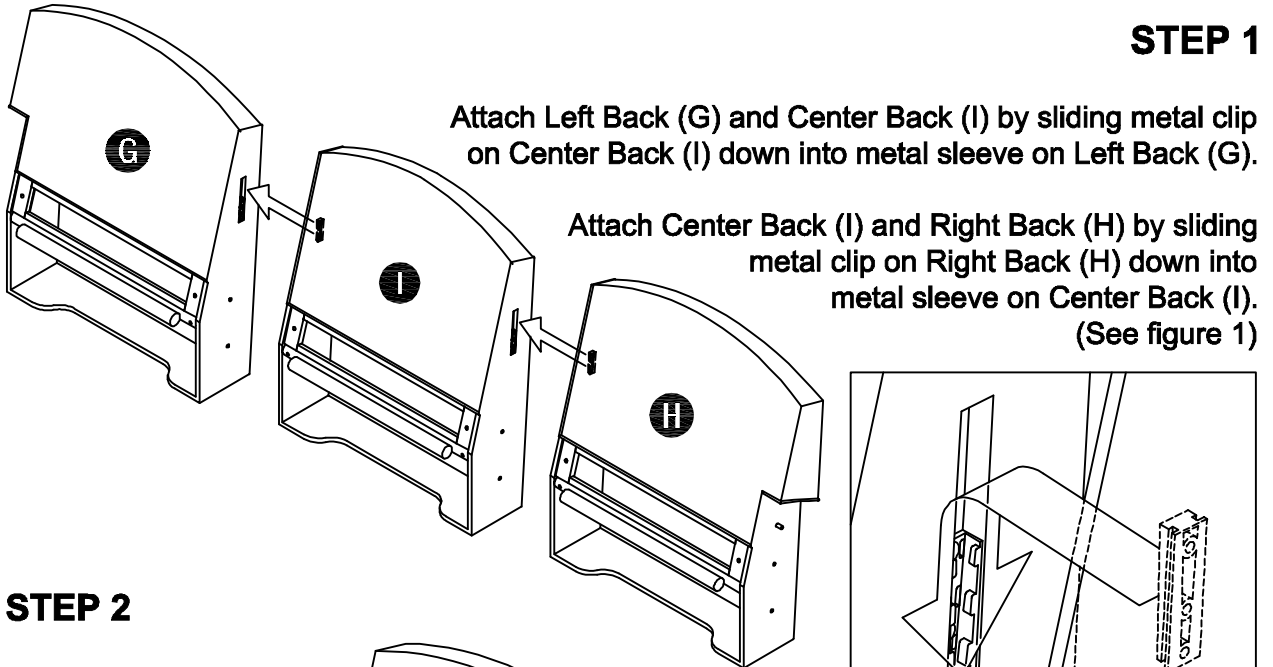

STEP 2

Attach Bolt (Short) through Spring Washer, Flat Washer and Right Back (H) to Center Back (I). Tighten Bolt.
(See figure 2)

Attach Bolt (Short) through Spring Washer, Flat Washer and Center Back (I) to Left Back (G). Tighten Bolt.
(See figure 2)

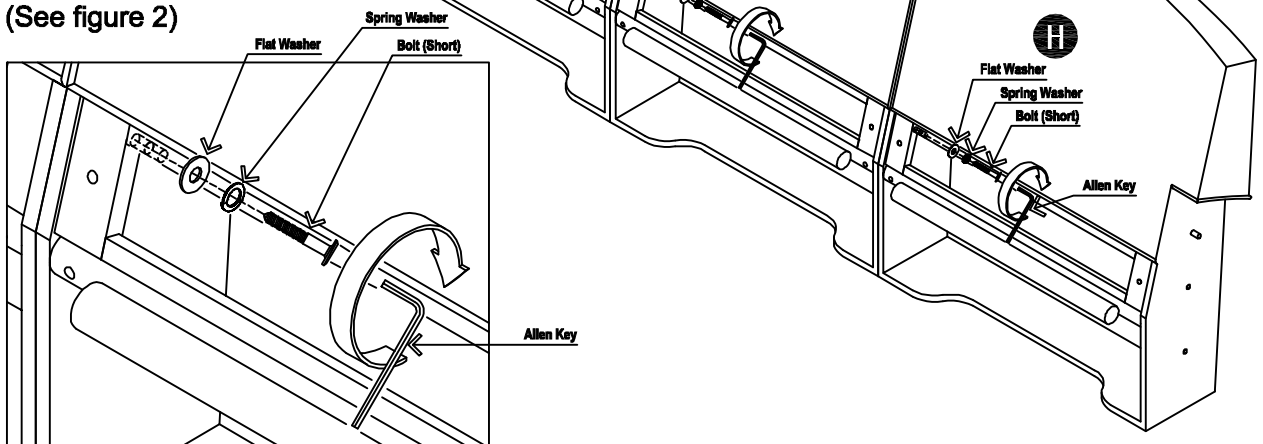


(Figure 2)

STEP 3

Attach Angle Plates to Dividers (E) using Bolt (Middle), Spring Washer, Flat Washers and Nut.


Turn Bolt clockwise using Allen Key and turn Nut clockwise using Wrench.
(See figure 3)

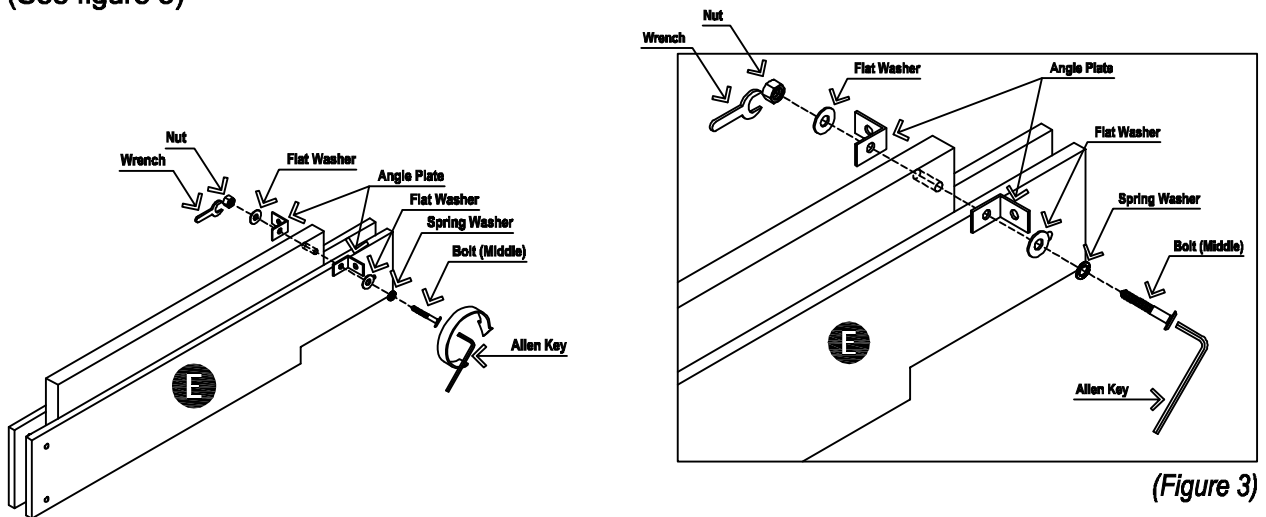

STEP 4

Attach Dividers (E) to unit using Bolt (Long), Spring Washer and Flat Washer.

Tighten Bolt.
(See figure 4)

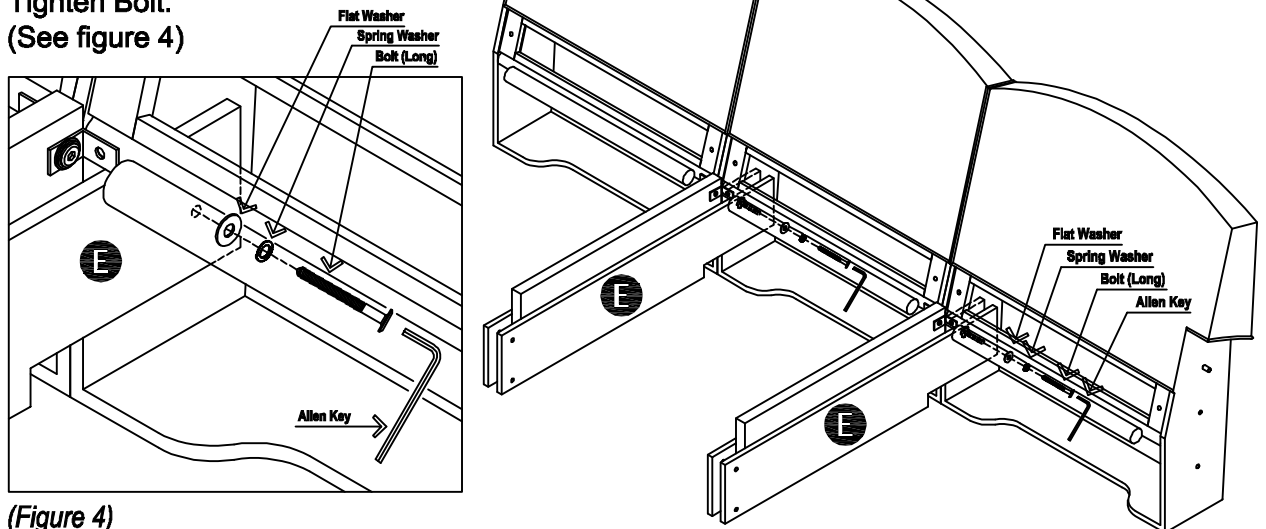


STEP 5

Attach Angle Plates to Left Back (G) and Right Back (H) using Bolts (Short), Spring Washers and Flat Washers.


Tighten Bolts.

Important: Please make sure these bolts are attached very tightly.

(See figure 5)

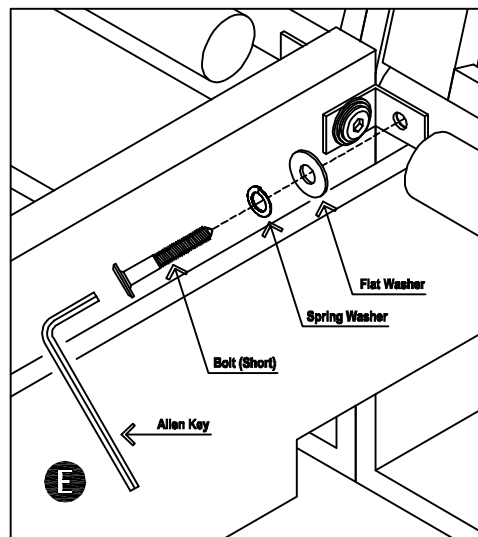

(Figure 5)

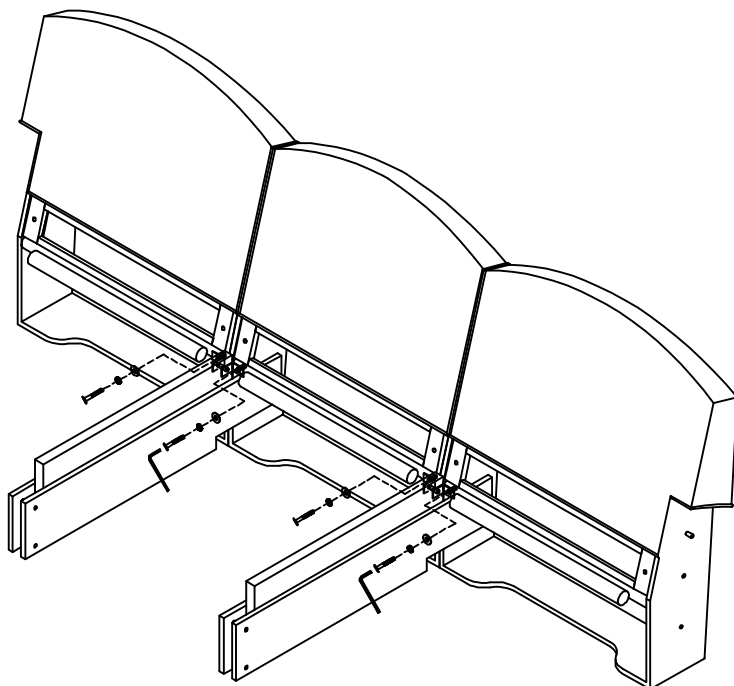


STEP 6


Attach Fronts (B) to Divider (E) using Bolts (Long), Spring Washers and Flat Washers.

Tighten Bolts.

(See figure 6)

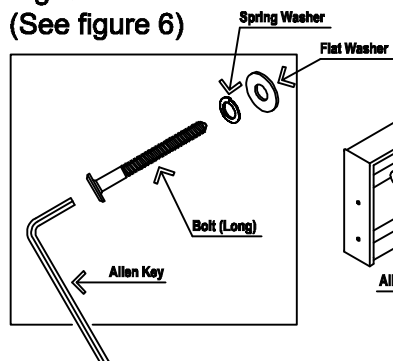

(Figure 6)



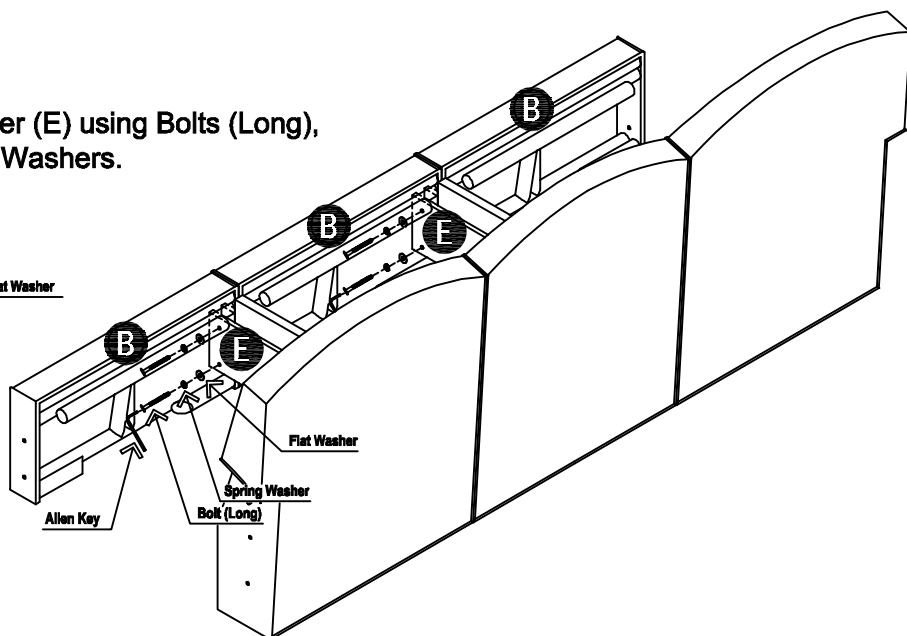


STEP 7

Place Left Arm on a soft cloth.

Attach Left Arm to unit using Bolts (Short), Spring Washers and Flat Washers.

Tighten Bolts.
(See figure 7)

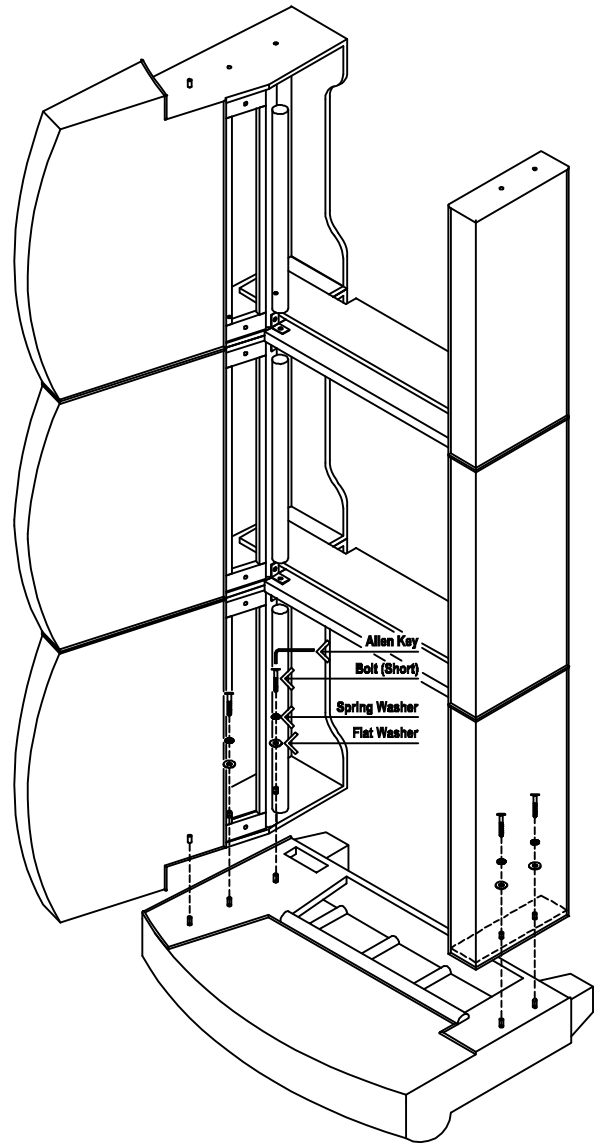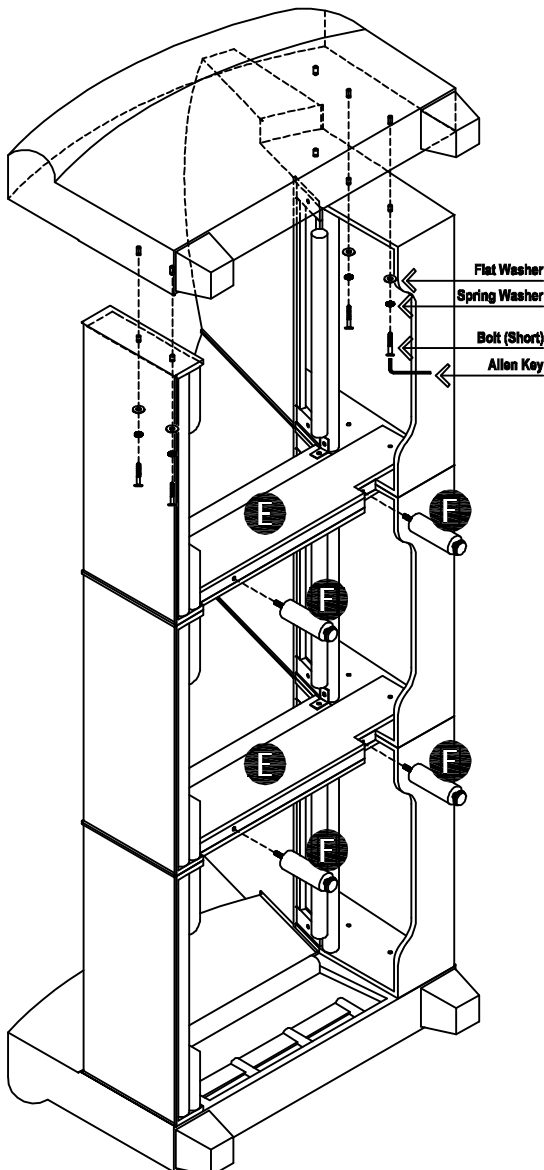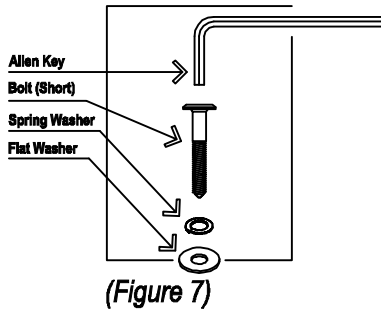

STEP 8

Attach Right Arm to unit using Bolts (Short), Spring Washers and Flat Washers.

Tighten Bolts.
(See figure 7)

Attach Center Legs (F) to bottom of Divider (E) and tighten completely.

STEP 9


Place unit in desired location in room.

Lower the adjustable levelers on the bottom of Center Leg (F) until the leveler is on the floor.

Important: Each Leveler must rest firmly on the floor.
(See figure 8)



Attach Back Cover (C) to unit using Bolts (Short), Spring Washers and Flat Washers.

Tighten Bolts.

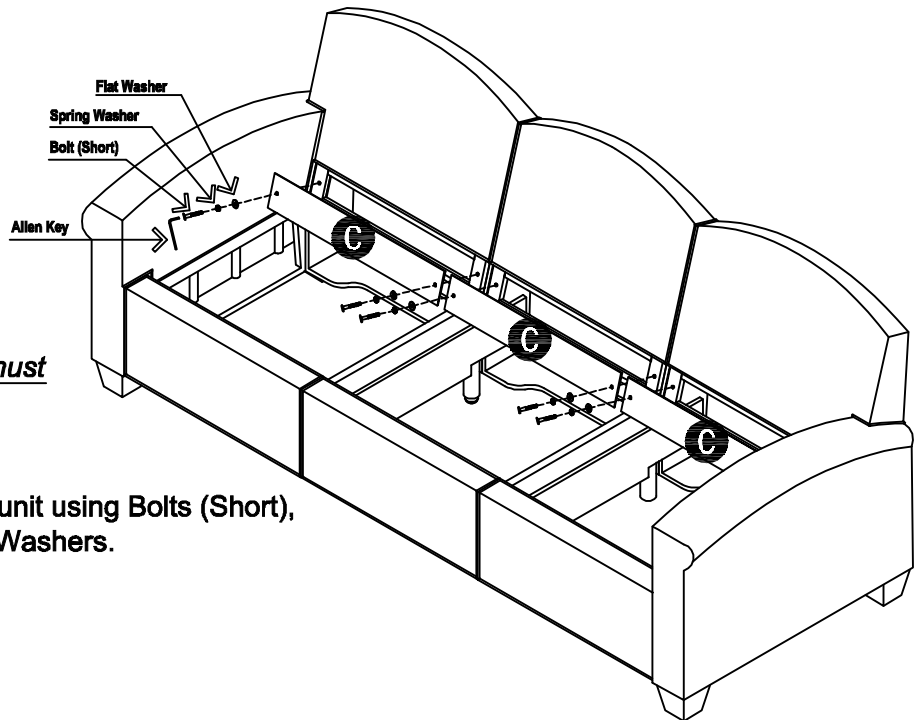

STEP 10

Place Cushion Support (D) onto unit.

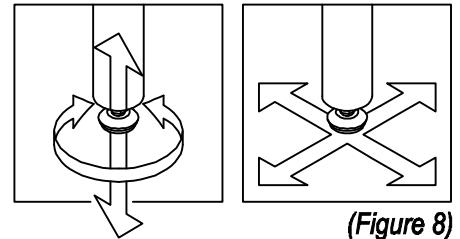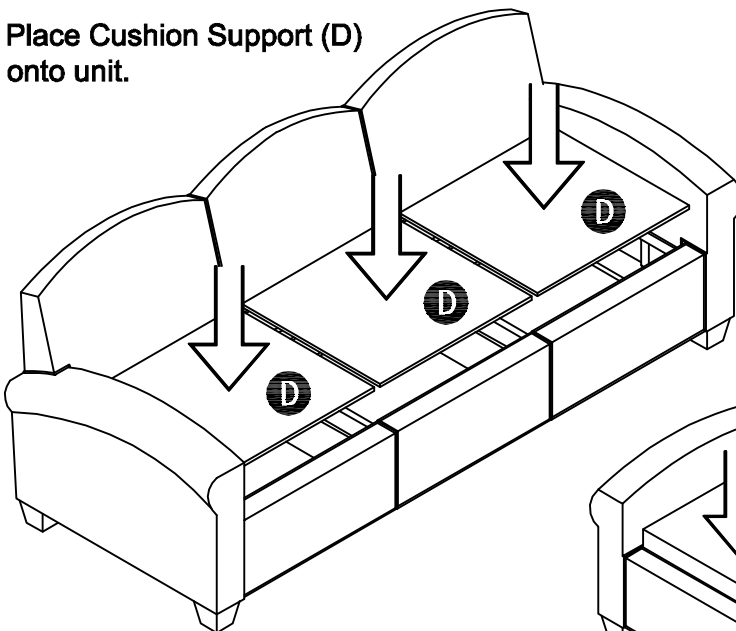

(Figure 8)

STEP 11

Place Seat Cushion onto seat of unit.
Place Back Cushion onto back of unit.

