


88 5404 60CRN

Cabana Banana II

Corner Seat and Back

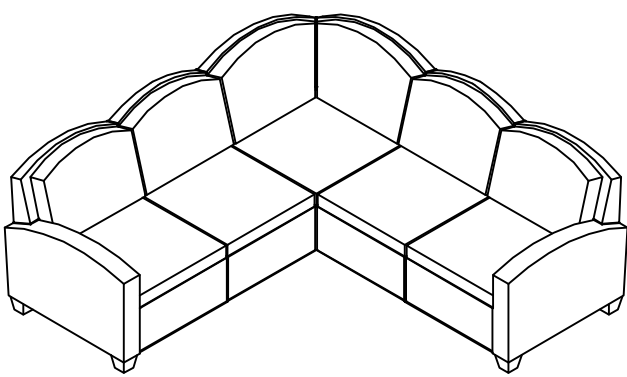

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home Styles

Part List

C.
Back Cover
2 pcs.

E.
Divider
1 pc.

F.
Center Leg
2 pcs.

J.
Corner Left
1 pc.

K.
Corner Right
1 pc.

L.
Cushion Support
1 pc.

M.
Corner Support
1 pc.

N.
Corner Bunfoot
1 pc.

Hardware List

Small Hex Wrench
1 pc.

Allen Key
1 pc.

Wrench
1 pc.

Bolt (Extra Long)
1 pc. (+1 extra)

Bolt (Long)
3 pcs. (+1 extra)

Bolt (Middle)
1 pc. (+1 extra)

Bolt (Short)
8 pcs. (+1 extra)










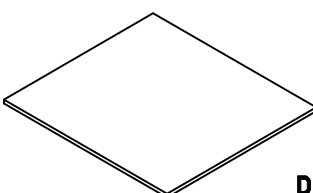
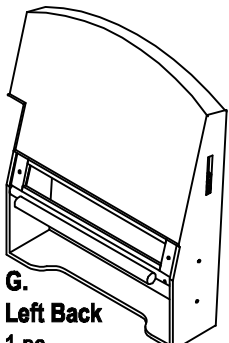
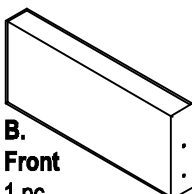

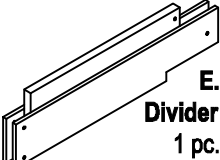
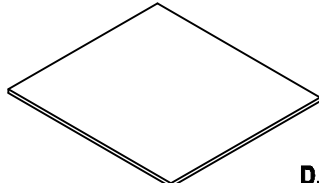

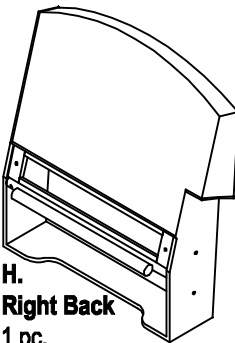
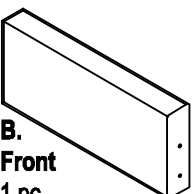

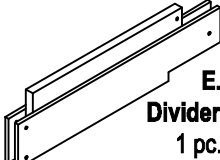
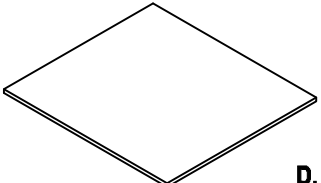

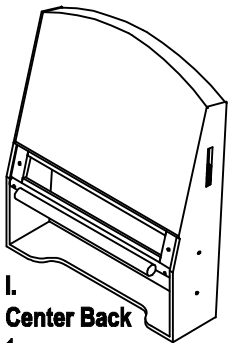
Flat Washer
14 pcs. (+2 extra)

Spring Washer
13 pcs. (+2 extra)

Nut
1 pc. (+1 extra)


Angle Plate
2 pcs.

For assembly also need the following:
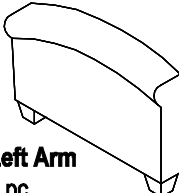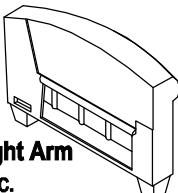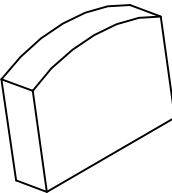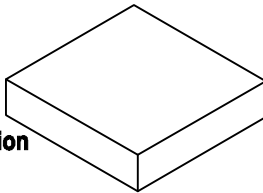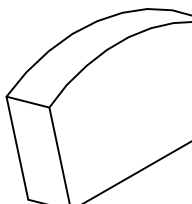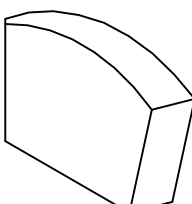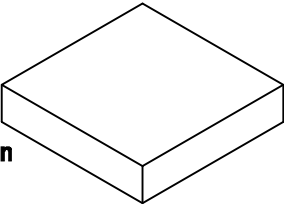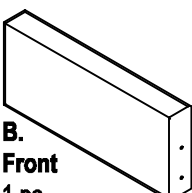
<p>88 5404 ARM Arm Carton</p> <p>Carton quantity: 1</p> <div><p>Left Arm 1 pc.</p><p>Right Arm 1 pc.</p></div>	<p>88 5400 CUS Cushion Carton</p> <p>Carton quantity: 4</p> <div><p>Back Cushion 1 pc.</p><p>Seat Cushion 1 pc.</p></div>
<p>88 5400 CUS2 Corner Seat Cushions</p> <p>Carton quantity: 1</p> <div><p>Left Back Cushion 1 pc.</p><p>Right Back Cushion 1 pc.</p><p>Seat Cushion 1 pc.</p></div>	<p>88 5404 60LSB Left Side carton</p> <p>Carton quantity: 1</p> <div><p>B. Front 1 pc.</p><p>C. Back Cover 1 pc.</p><p>D. Cushion Support 1 pc.</p><p>G. Left Back 1 pc.</p></div>
<p>88 5404 60RSB Right Side carton</p> <p>Carton quantity: 1</p> <div><p>B. Front 1 pc.</p><p>C. Back Cover 1 pc.</p><p>E. Divider 1 pc.</p><p>D. Cushion Support 1 pc.</p><p>F. Center Leg 2 pcs.</p><p>H. Right Back 1 pc.</p></div>	<p>88 5404 60SBC Center seat Carton</p> <p>Carton quantity: 2</p> <div><p>B. Front 1 pc.</p><p>C. Back Cover 1 pc.</p><p>E. Divider 1 pc.</p><p>D. Cushion Support 1 pc.</p><p>F. Center Leg 2 pcs.</p><p>I. Center Back 1 pc.</p></div>

IMPORTANT

- * Do not tighten up all the bolts until each part is properly assembled.
- * You should keep Allen Key and Wrench in a safe place as you may need to tighten up the bolts in the future.
- * Use a soft cloth between these parts and the floor.

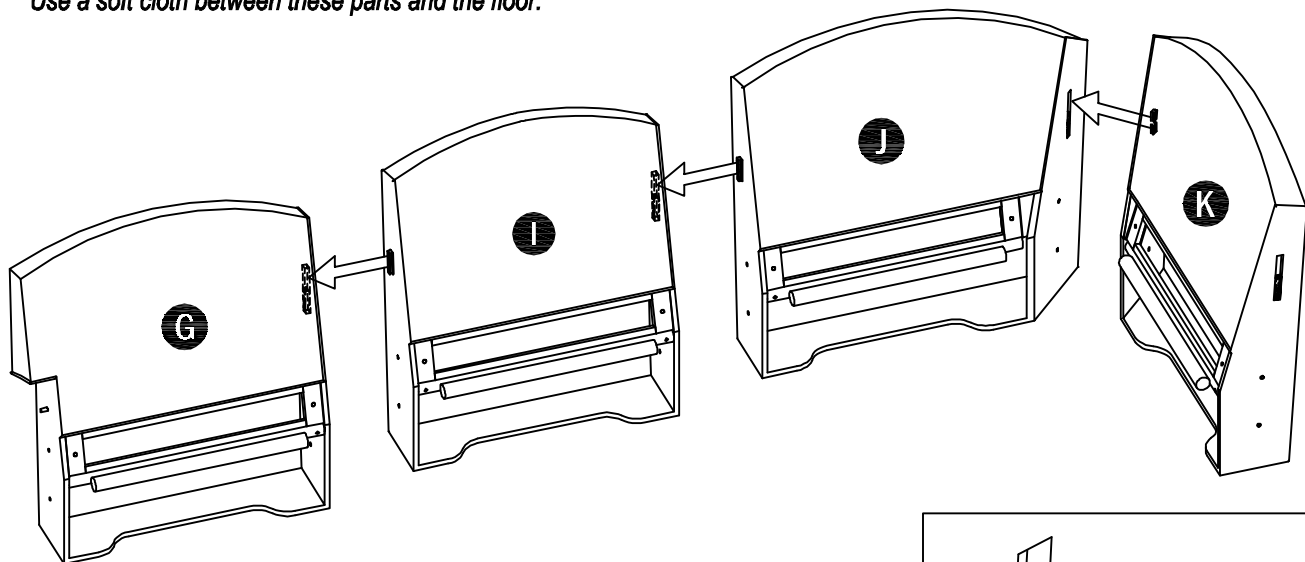


STEP 1


Attach Left Back (G) and Center Back (I) by sliding metal clip on Center Back (I) down into metal sleeve on Left Back (G).

Attach Center Back (I) and Corner Left (J) by sliding metal clip on Corner Left (J) down into metal sleeve on Center Back (I).

Attach Corner Left (J) and Corner Right (K) by sliding metal clip on Corner Right (K) down into metal sleeve on Corner Left (J).
(See figure 1)

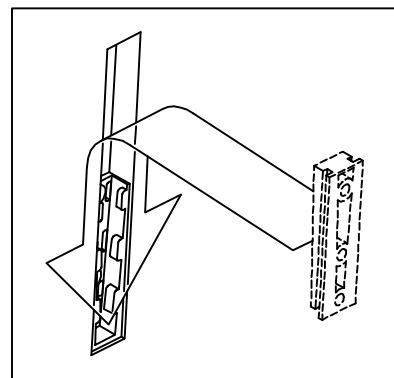

(Figure 1)

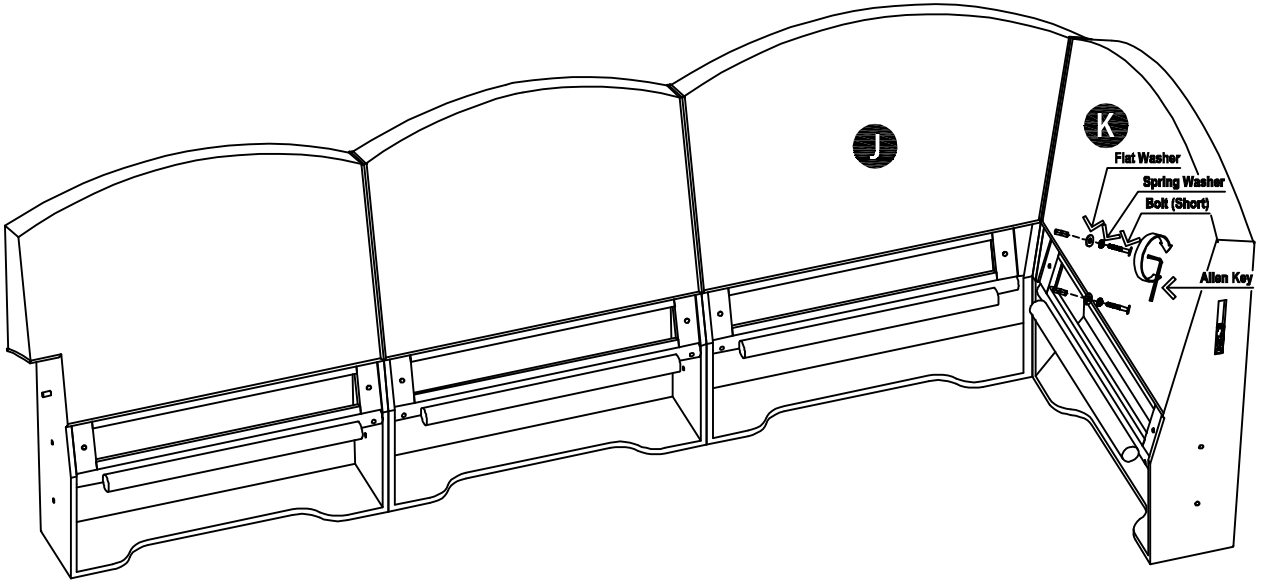


STEP 2

Attach Bolts (Short) through Spring Washers, Flat Washers and Corner Right (K) to Corner Left (J). (See figure 2)


STEP 3

Attach Corner Right (K) and Center Back (I) by sliding metal clip on Center Back (I) down into metal sleeve on Corner Right (K).

Attach Center Back (I) and Right Back (H) by sliding metal clip on Right Back (H) down into metal sleeve on Center Back (I).

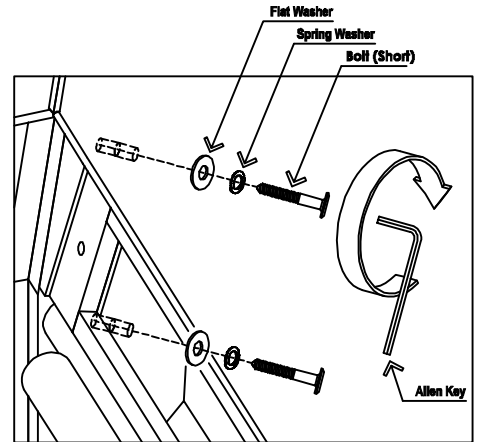

(Figure 2)

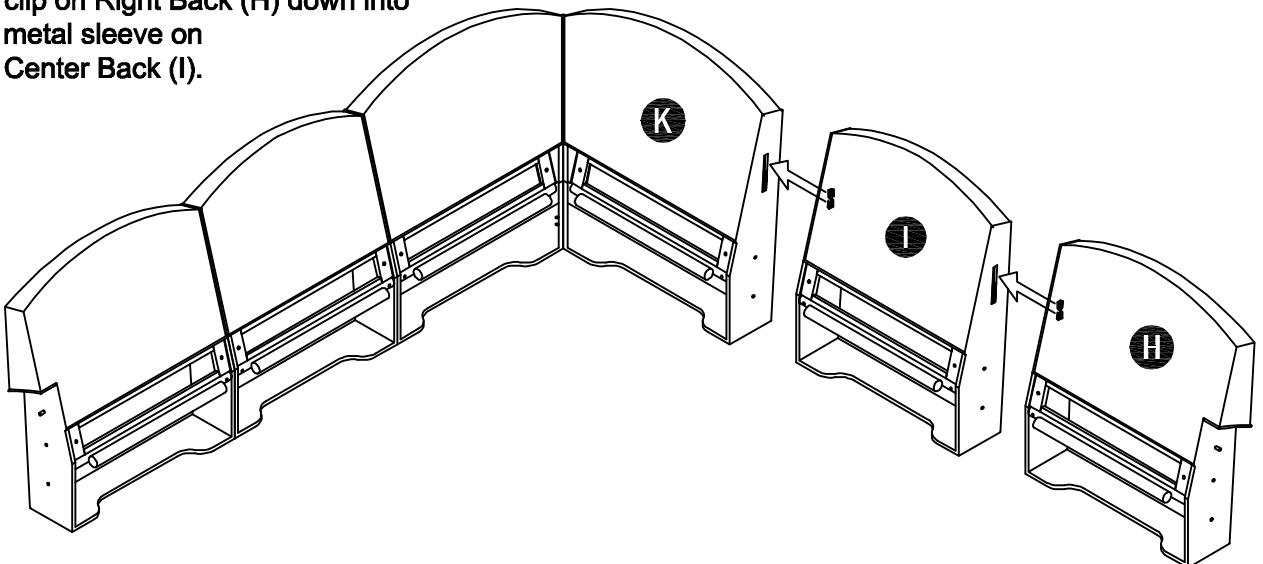


STEP 4



Attach Angle Plates to Dividers (E) using Bolt (Middle), Spring Washer, Flat Washers and Nut.

Turn Bolt clockwise using Allen Key and turn Nut clockwise using Wrench.

(See figure 4)

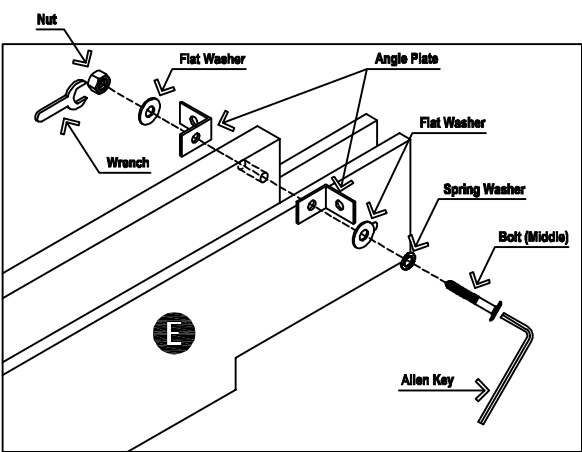

(Figure 4)

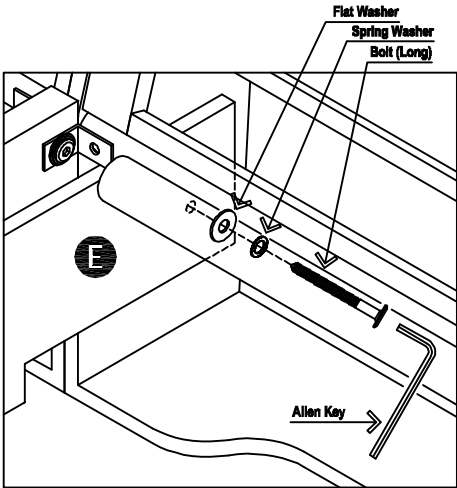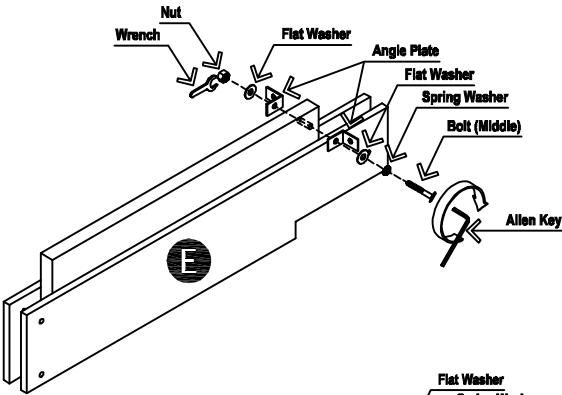


(Figure 5)


STEP 5

Attach Dividers (E) to unit using Bolt (Long), Spring Washer and Flat Washer.

Tighten Bolt.

(See figure 5)

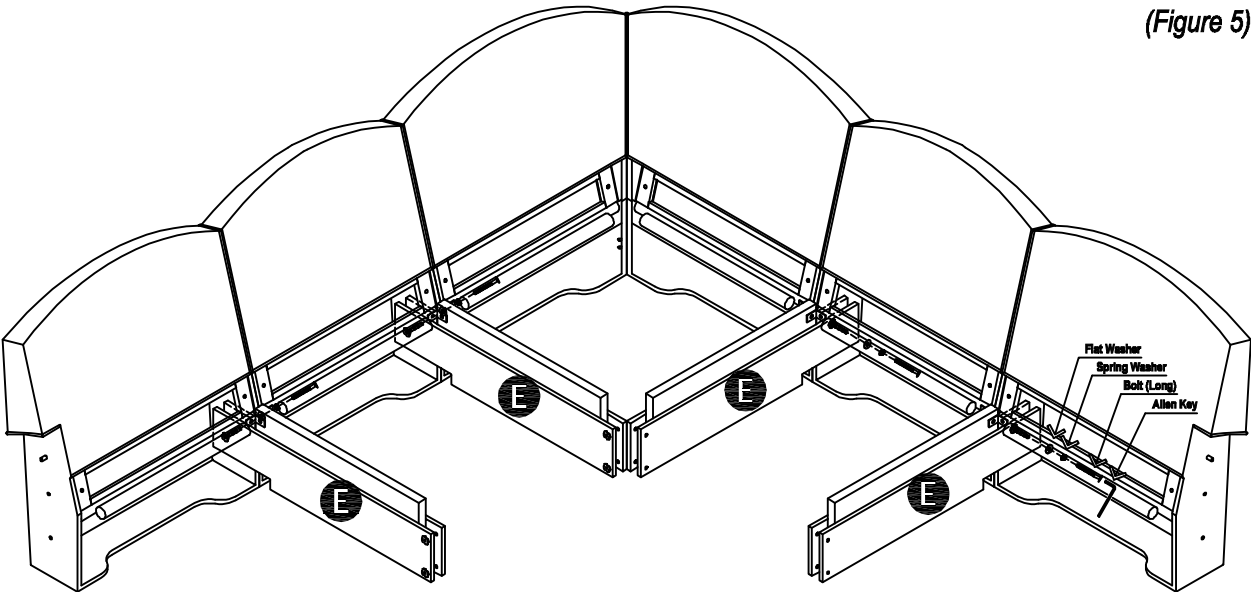

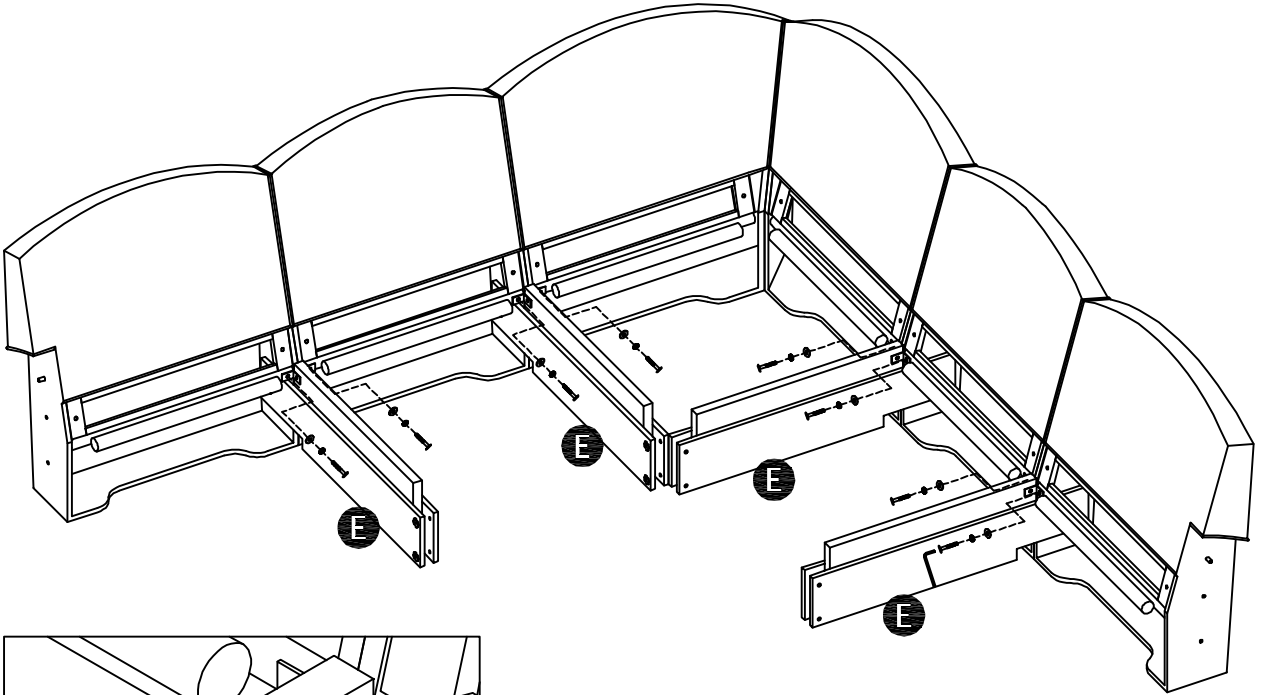


STEP 6

Attach Angle Plates to unit using Bolts (Short), Spring Washers and Flat Washers.

Tighten Bolts.


Important: Please make sure these bolts are attached very tightly.
(See figure 6)

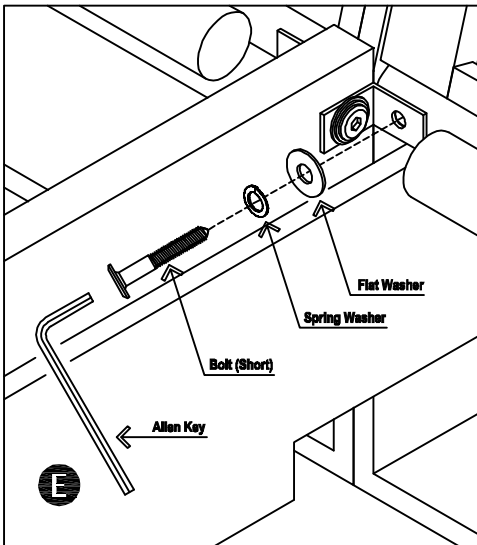

(Figure 6)

STEP 7


Insert Corner Support (M) between two Dividers (E) at front corner.

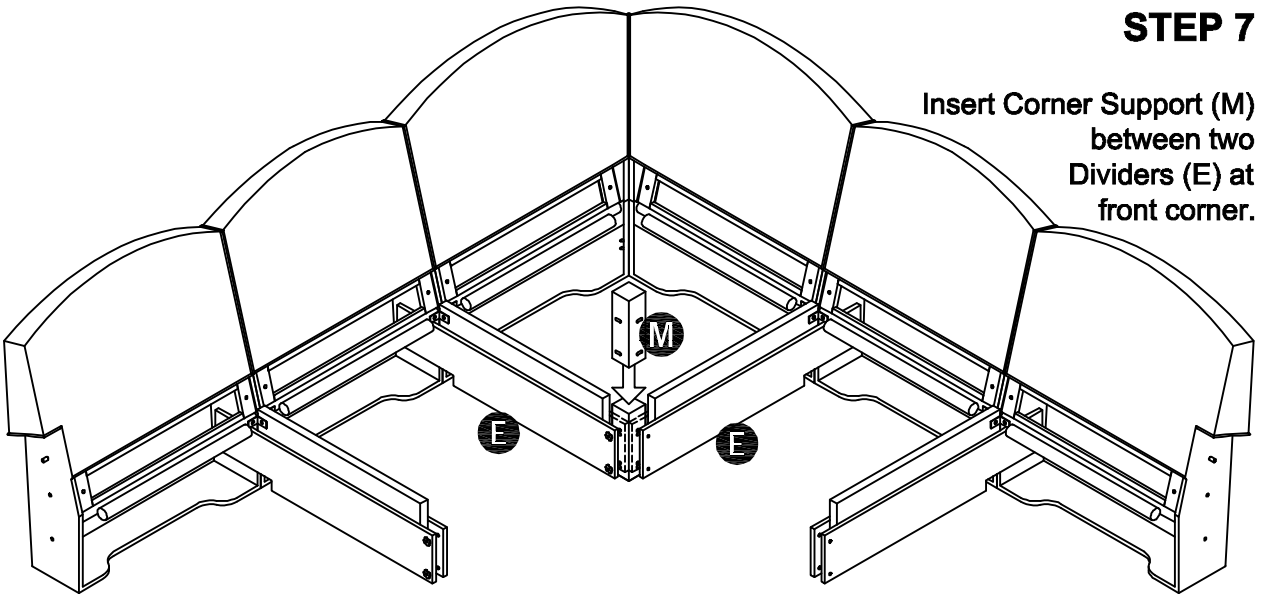

STEP 8

Attach Fronts (B) to Dividers (E) using Bolts (Long), Spring Washers and Flat Washers.

Tighten Bolts.
(See figure 7)



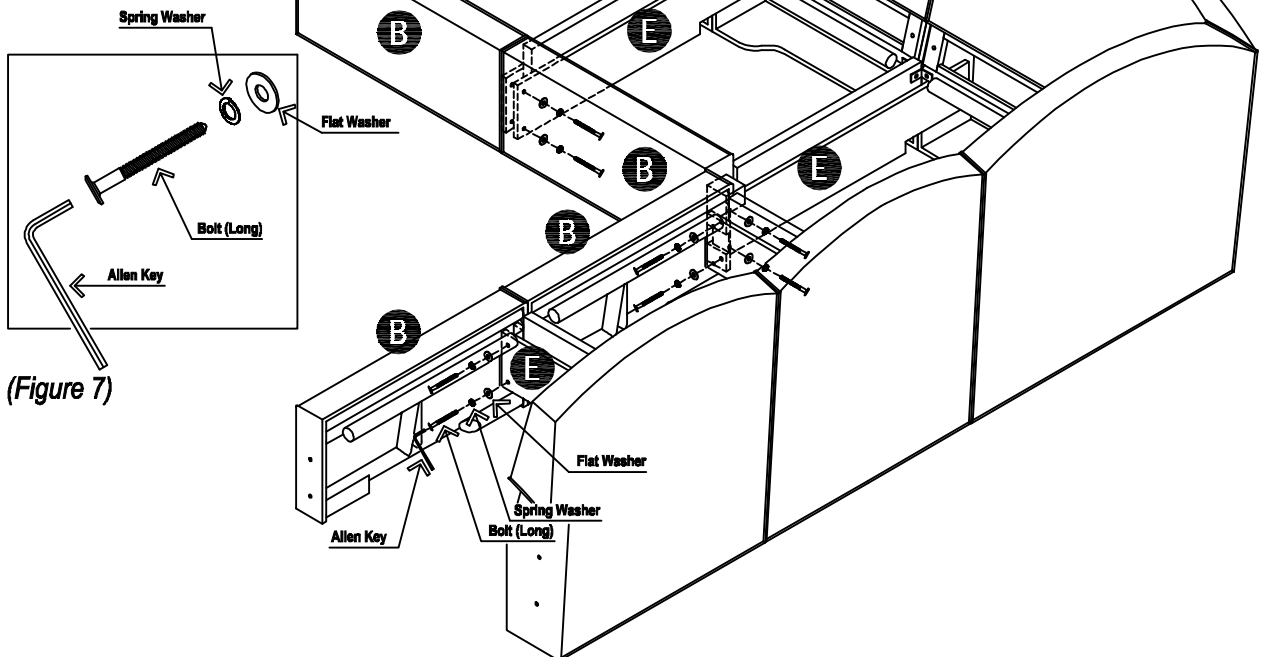


STEP 9

Place unit on a soft cloth.

Attach Left Arm to unit using Bolts (Short), Spring Washers and Flat Washers.

**Tighten Bolts.
(See figure 8)**

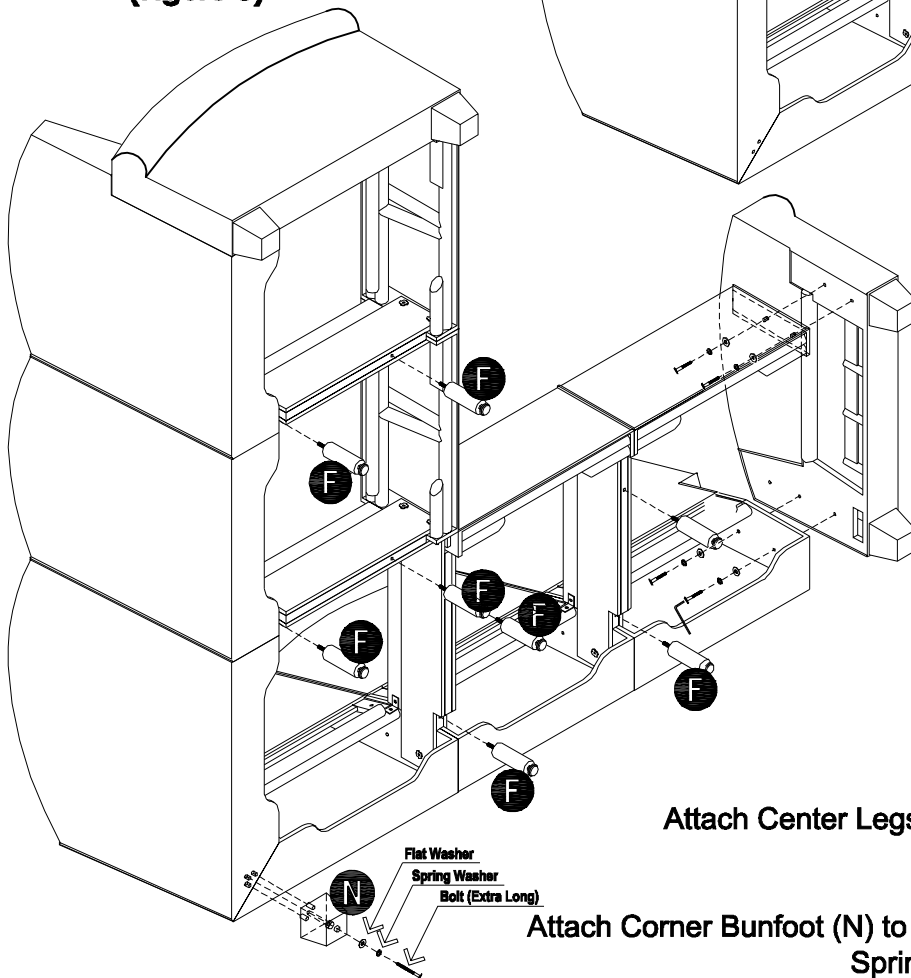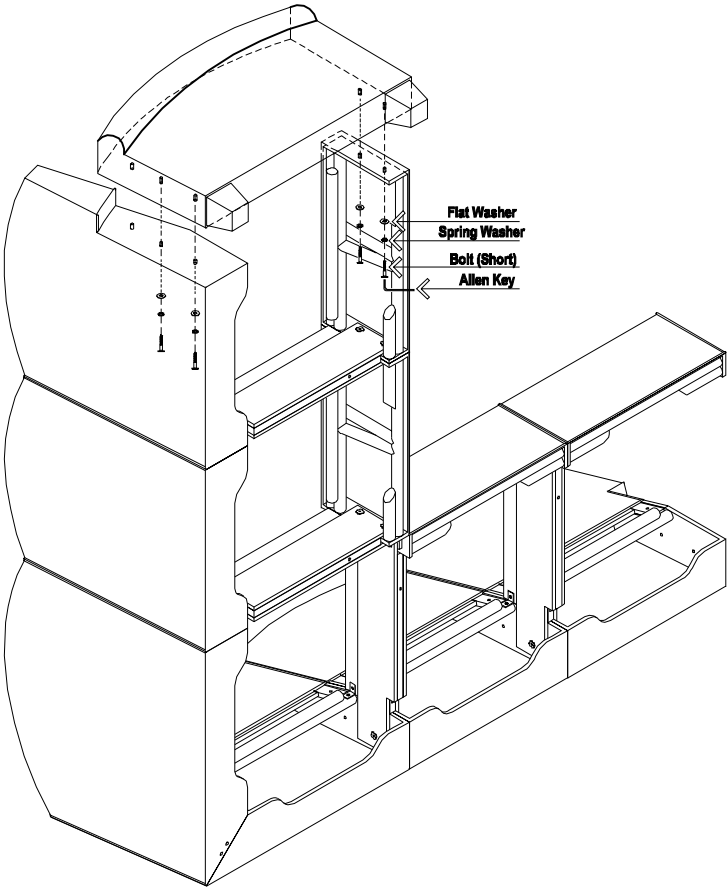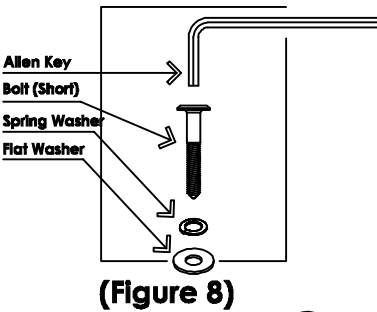


STEP 10

Attach Right Arm to unit using Bolts (Short), Spring Washers and Flat Washers.

**Tighten Bolts.
(See figure 8)**

Attach Center Legs (F) to bottom of Divider (E) and tighten completely.

Attach Corner Bunfoot (N) to unit using Bolt (Extra Long), Spring Washer and Flat Washer.

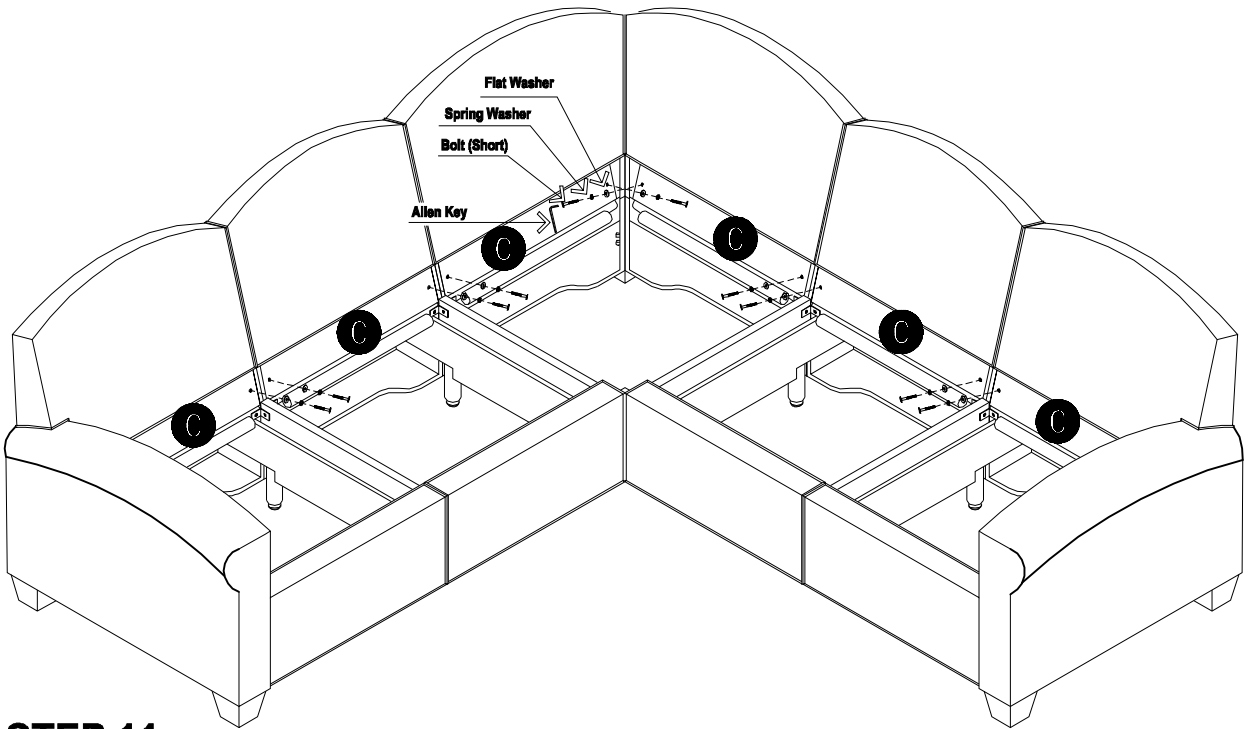


STEP 11

Place unit in desired location in room.

Lower the adjustable levelers on the bottom of Center Leg (F) until the leveler is on the floor.

Important: Each Leveler must rest firmly on the floor.
(See figure 9)

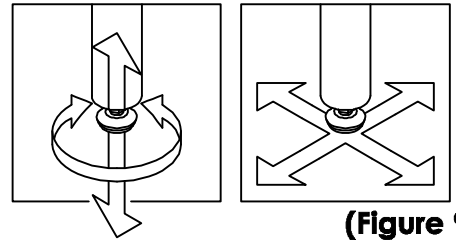


(Figure 9)

Attach Back Cover (C) to unit using Bolts (Short), Spring Washers and Flat Washers.

Tighten Bolts.

STEP 12

Place Cushion Support (D & L)
onto unit.

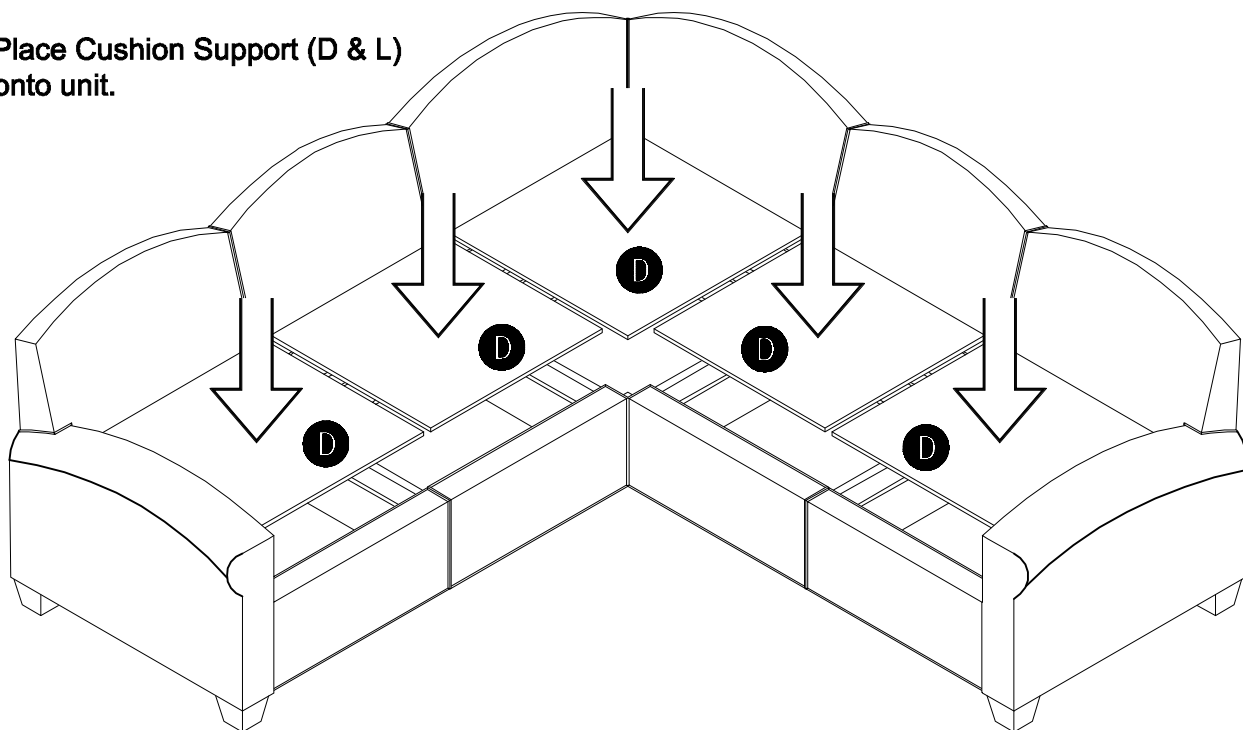

STEP 13

Place Seat Cushion onto seat of unit.
Place Back Cushion onto
back of unit.

