


88 5516 90

Barnside Ottoman Base

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

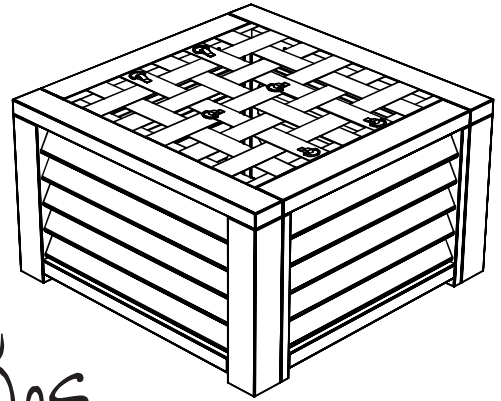


Home
Styles

Part List


A.
Seat
1 Pc

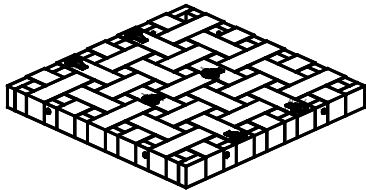

B.
Front Frame
2 Pcs

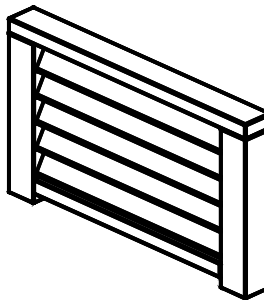


C.
Side Frame
2 Pcs

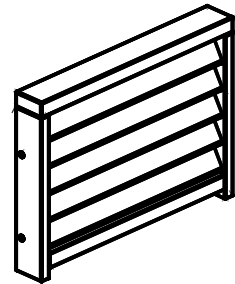


Hardware List


M4
Small Hex Wrench
1 Pc




M4
Hex Wrench
1 Pc

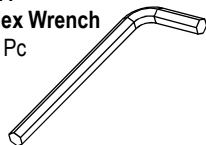


M5
Small Hex Wrench
1 Pc




M5
Hex Wrench
1 Pc

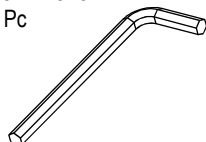

M6x35
Head Cap Bolt (Short)
8 Pcs (+1 extra)

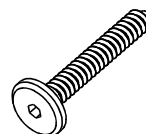

M6x36
Head Cap Bolt (Middle)
8 Pcs (+1 extra)

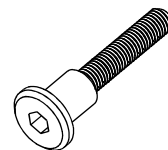

Tools recommended for assembly : Level

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319



Assembly Instructions 2/2

IMPORTANT

- * Do not tighten up all the bolts until each part is properly assembled.
- * You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * After assembly, item must be level to work properly. Use the included adjustable levelers to level.
- * Use a soft cloth between these parts and the floor.

STEP 1

Attach Side Frames (C) to Seat (A), with Head Cap Bolts (Short).

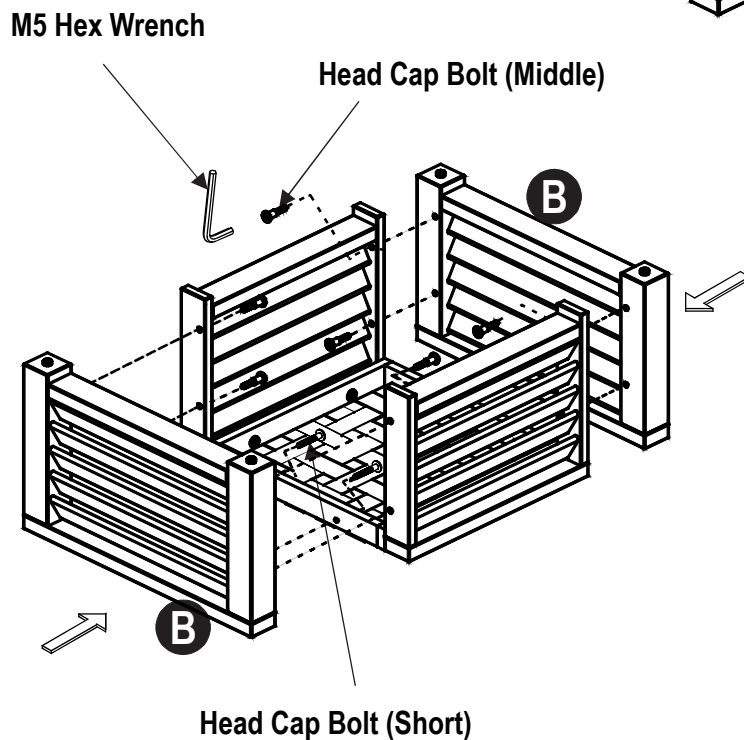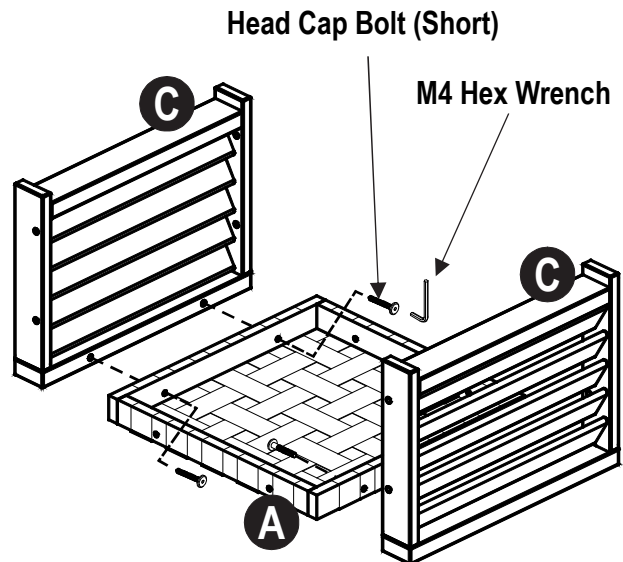

STEP 2

Attach Front Frames (B) to unit with Head Cap Bolts (Middle) and Head Cap Bolts (Short).

STEP 3

Turn the unit to its' upright position.

To level the unit, adjust the adjustable levelers on the bottom of unit. (See figure 1)

Note : Unit must be level to work properly.

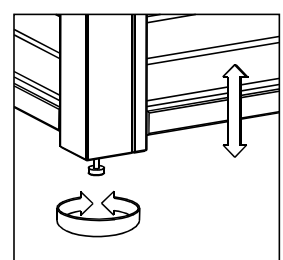
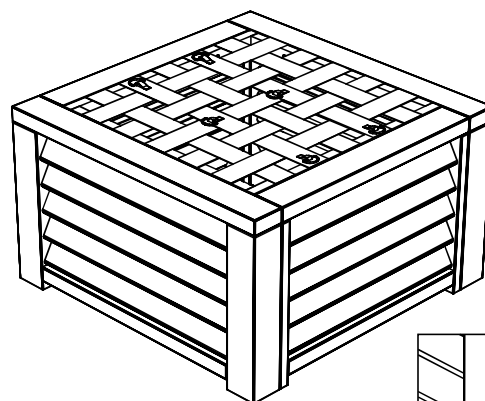


Figure 1