

88 5053 164


Student Desk Hutch

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home
Styles

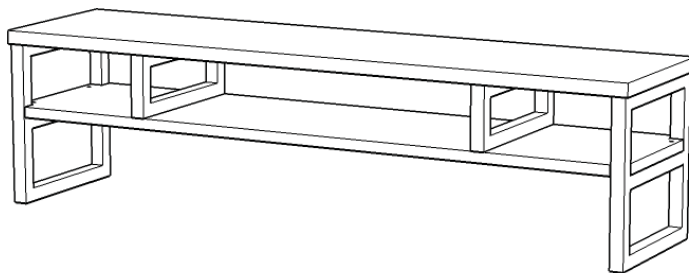


Part List




A.
Top
1 Pc.



B.
Shelf
1 Pc.

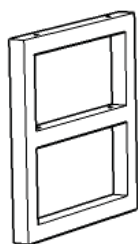

C.
Side Frame
2 Pcs.

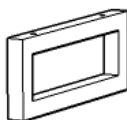


D.
Frame
2 Pcs.



E.
Stretcher
1 Pc.


Hardware List

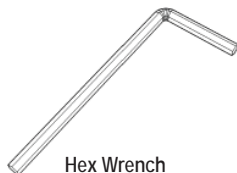


Hex Wrench
1 Pc.



Small Hex Wrench
1 Pc.



M6x35
Tapered
Head Cap Bolt (long)
16 Pcs. (+1 extra)




M6x13
Tapered
Head Cap Bolt (short)
4 Pcs. (+1 extra)




M4x38
Wood Screw (long)
4 Pcs. (+1 extra)



M4x13
Wood Screw (short)
4 Pcs. (+1 extra)



Connector A
1 Pc.



Connector B
1 Pc.

Tools required for assembly : Phillips screwdriver

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/3

IMPORTANT

- * Please keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Do not tighten up all the bolts until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.
- * After assembly item must be level to work properly. Use the included adjustable levelers to level.

STEP 1

Place Top (A) upside down on a soft cloth.

Attach Frames (D) to Top (A) with Tapered Head Cap Bolts (long).
(See Figure 1)



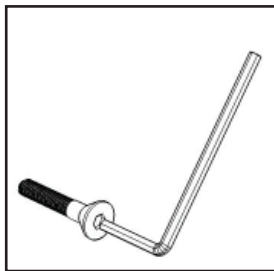


Figure 1

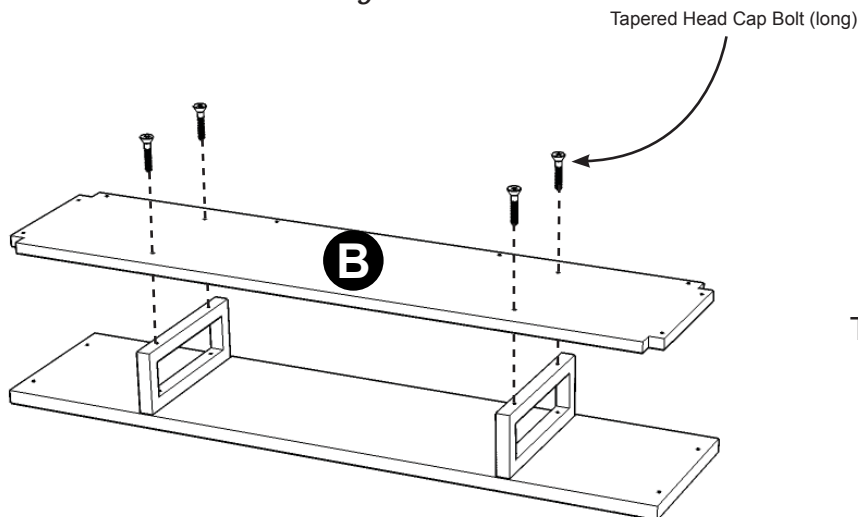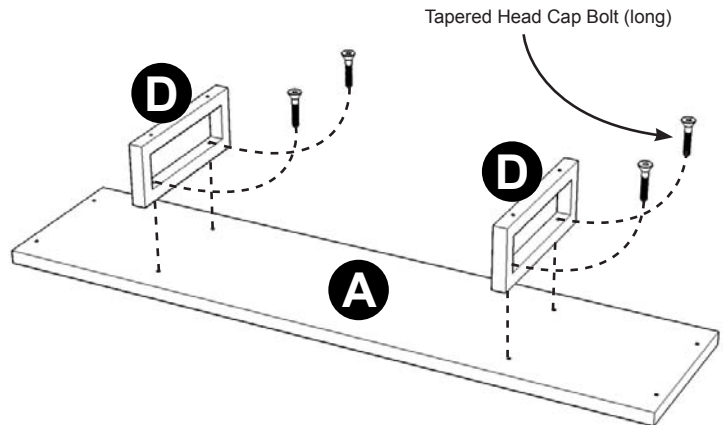

STEP 2

Attach Shelf (B) to unit with Tapered Head Cap Bolts (long).

STEP 3

Attach Stretcher (E) to unit with Wood Screws (long).
(See Figure 2)



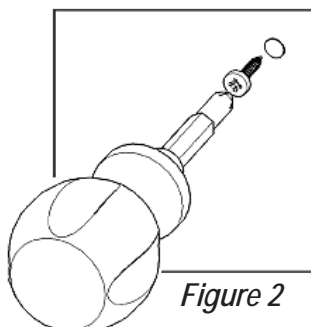


Figure 2

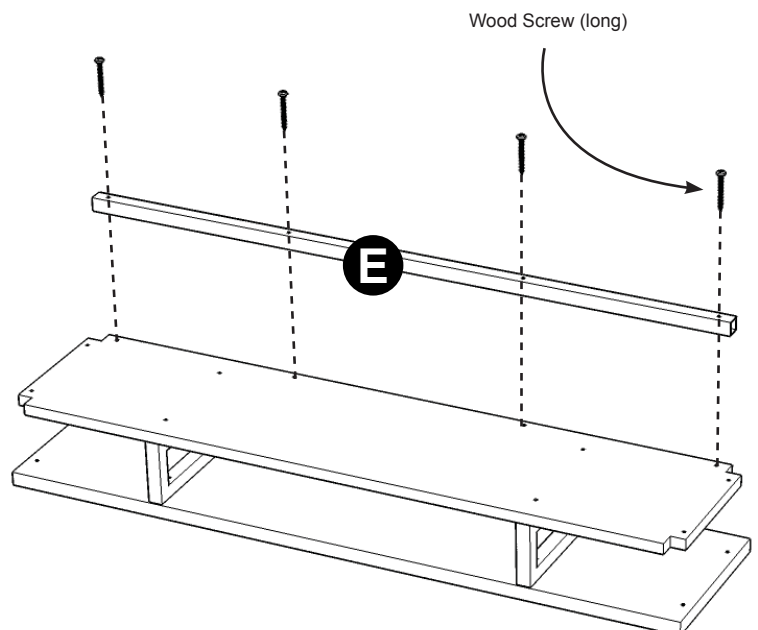

STEP 4

Attach Side Frames (C) to unit with Tapered Head Cap Bolts (long).

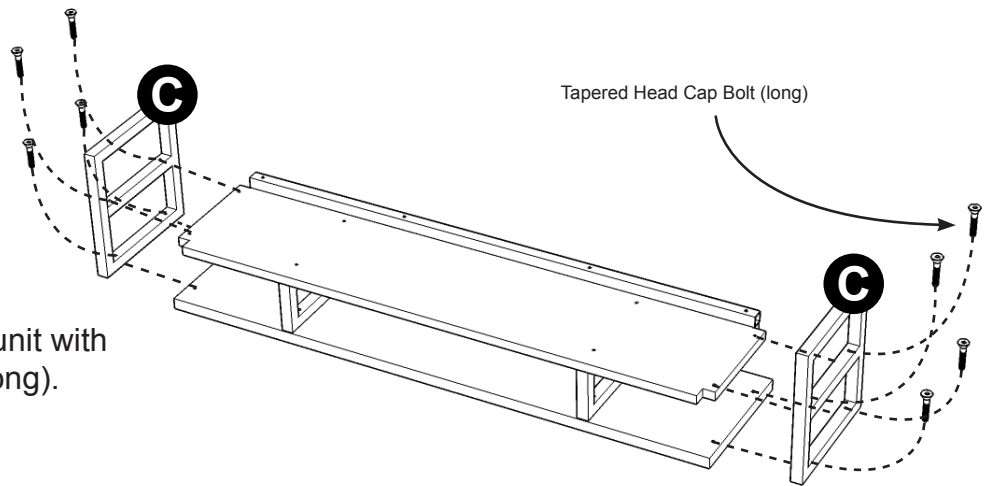

STEP 5

Attach Connectors (A) and (B) to unit with Tapered Head Cap Bolts (short). (See Figure 3)

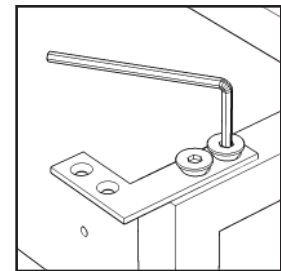
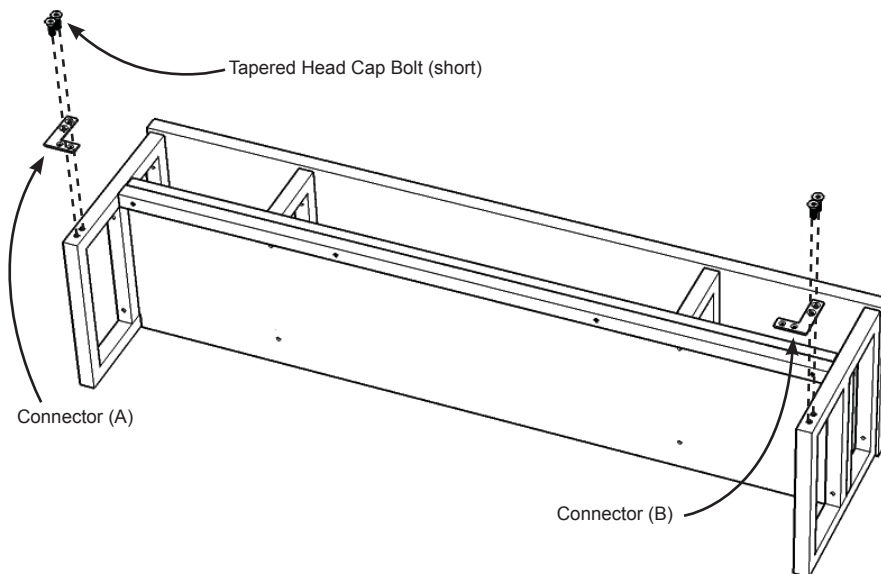


Figure 3

STEP 6

Attach Hutch to Student Desk with Wood Screws (short). (See Figure 4)

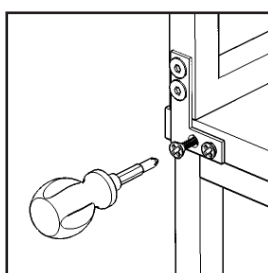


Figure 4

