

88 5410 42


Cabin Creek Night Stand

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home
Styles

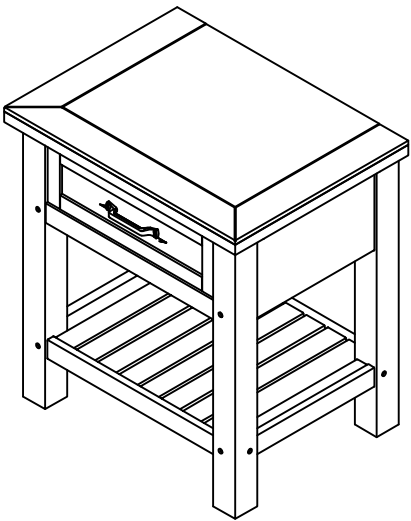


Part List


A.
Top
1 pc.

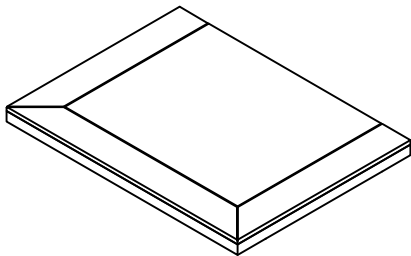


E.
Shelf
1 pc.

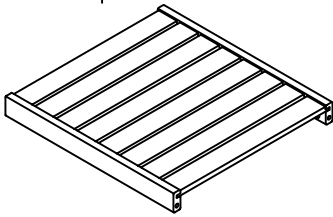


F.
Back Panel
1 pc.

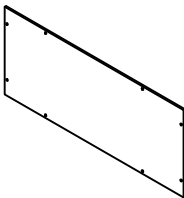



B.
Side Panel
1 pc.

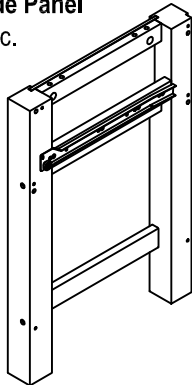

C.
Side Panel
1 pc.

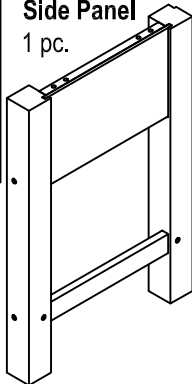

D.
Rail
4 pcs.

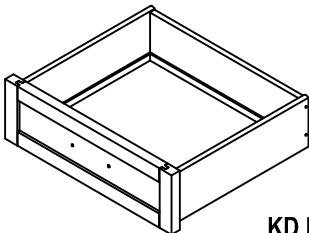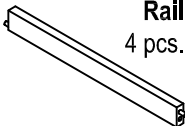

G.
KD Drawer
1 pc.

(Knock-Down Construction, please refer to the last page of instructions for steps to complete drawer assembly)

Hardware List



Cam Lock Screw
16 pcs. (+1 extra)



Cam Lock
16 pcs. (+1 extra)



1 1/4" Flat Head Screw
8 pcs. (+1 extra)



3/4" Flat Head Screw
4 pc. (+1 extra)



1/2" Round Head Screw
8 pcs. (+1 extra)



Machine Screw
2 pcs.



Handle
1 pc.



Wooden Dowel
4 pcs. (+1 extra)

Tools Required For Assembly : Phillips screwdriver

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319


Assembly Instructions 2/5

IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.

STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Top (A), Side Panel (B) and (C).

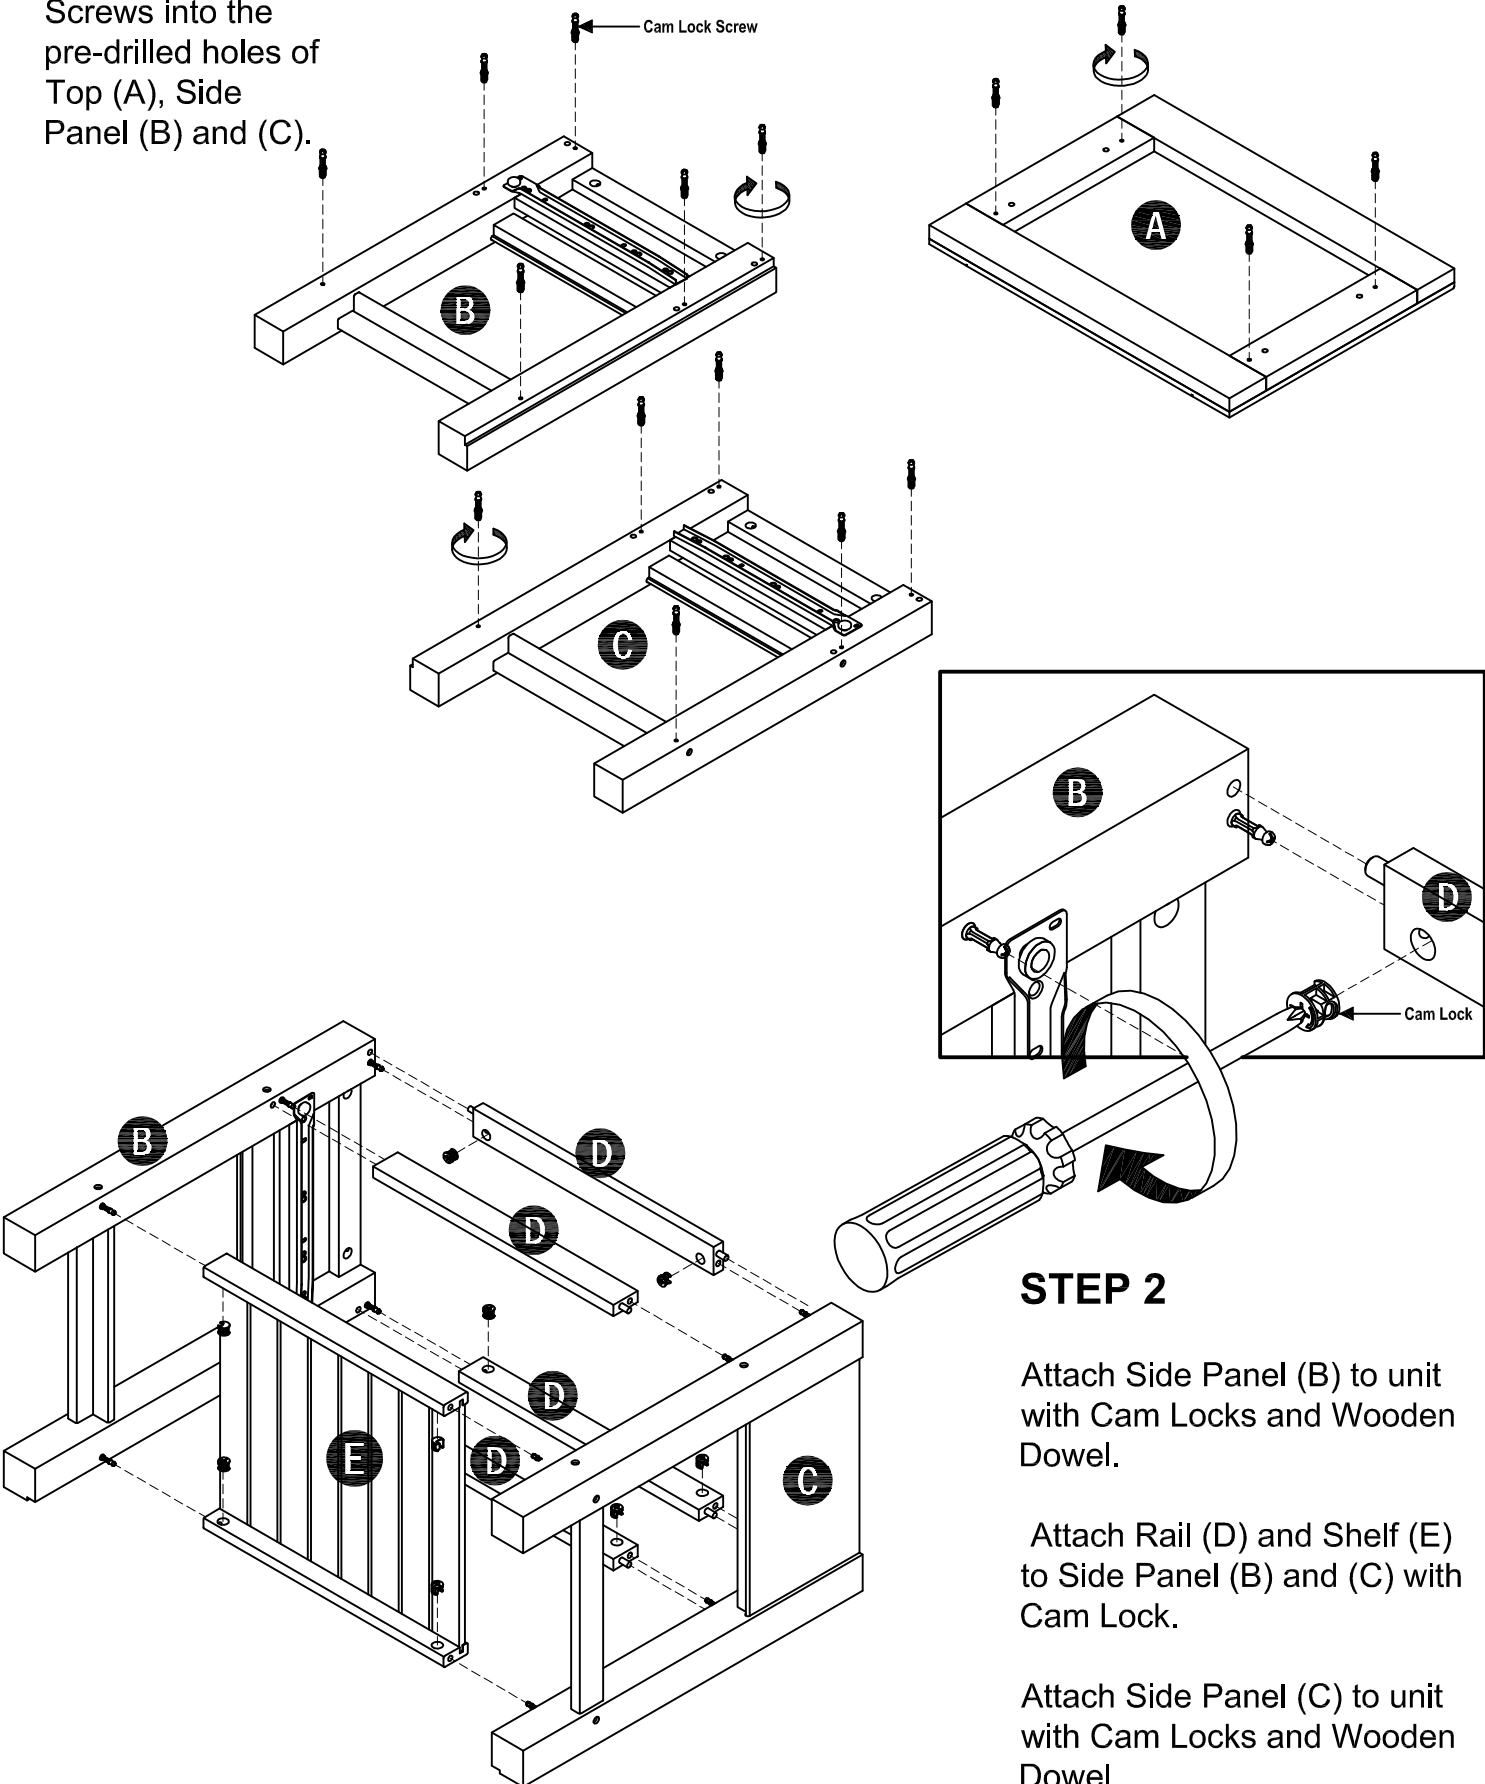

STEP 2

Attach Side Panel (B) to unit with Cam Locks and Wooden Dowel.


Attach Rail (D) and Shelf (E) to Side Panel (B) and (C) with Cam Lock.

Attach Side Panel (C) to unit with Cam Locks and Wooden Dowel.

Assembly Instructions 3/5


STEP 3

Attach Top (A) to unit using
Cam Locks and Wooden Dowels.

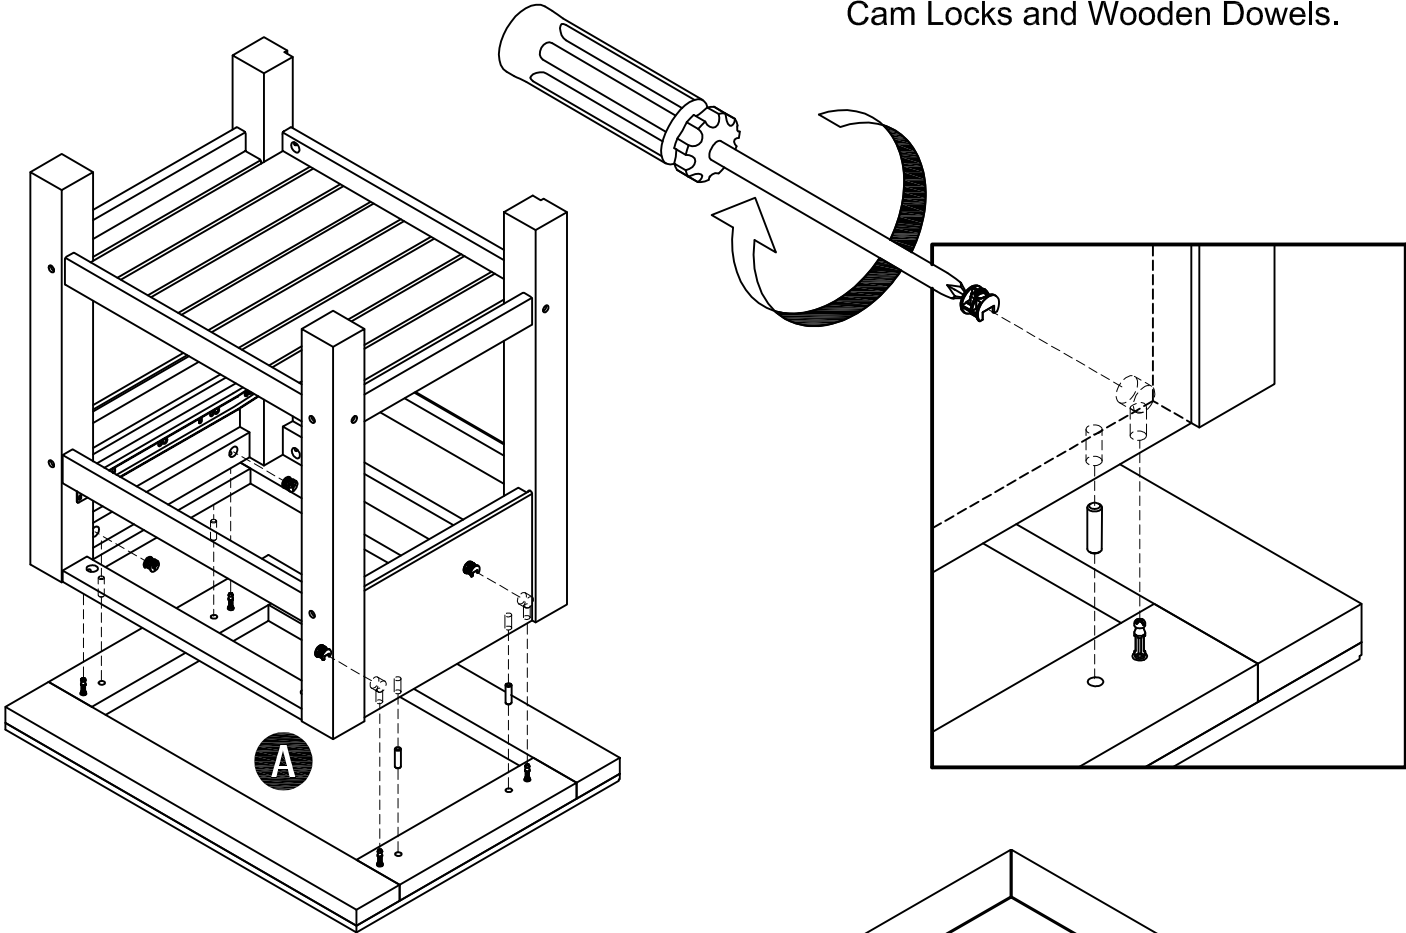


STEP 4

Attach Back Panel (F) to unit using
1/2" Round Head Screws.

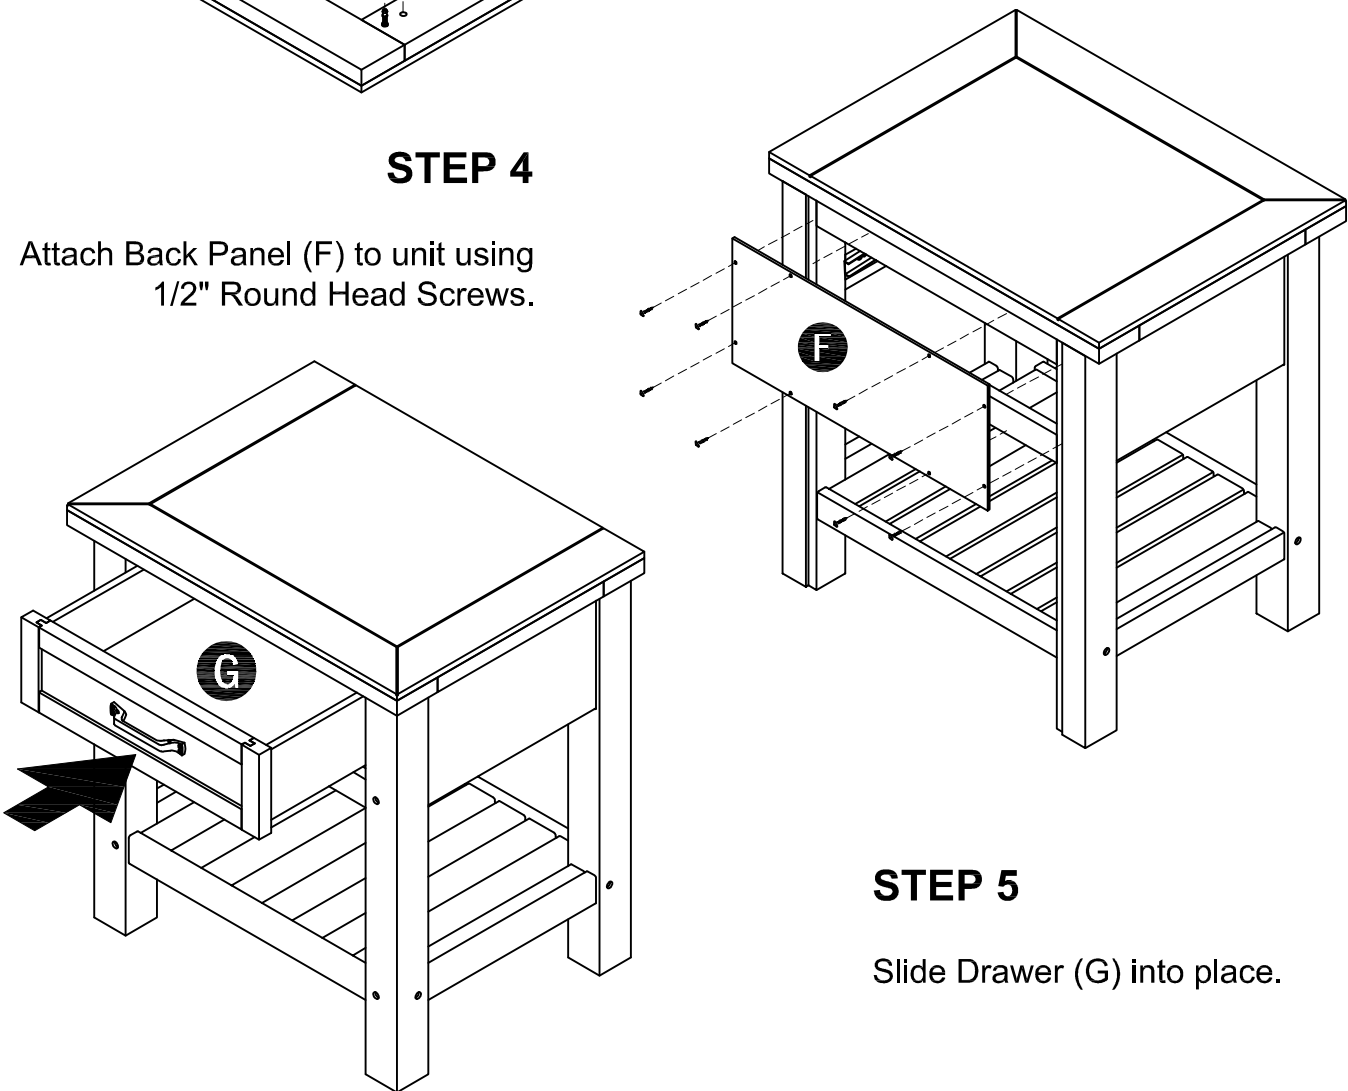


STEP 5

Slide Drawer (G) into place.

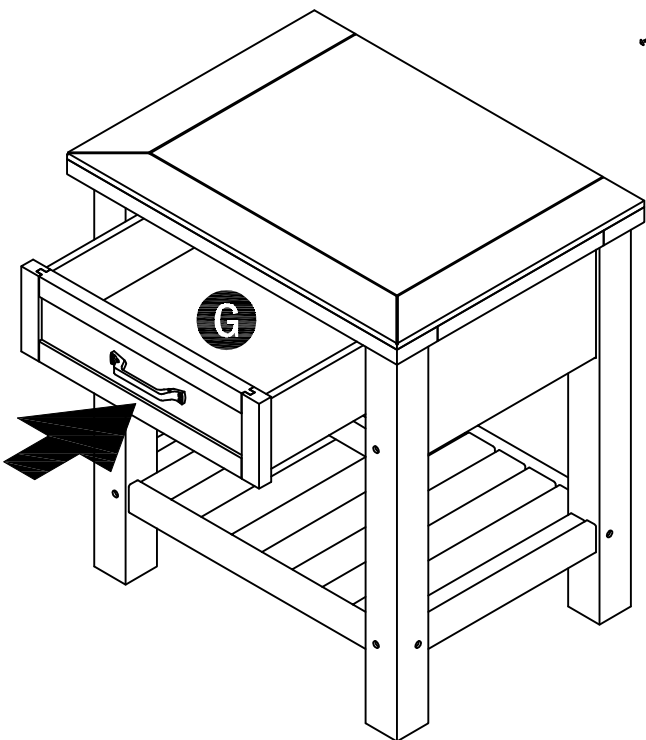

Drawer (G)

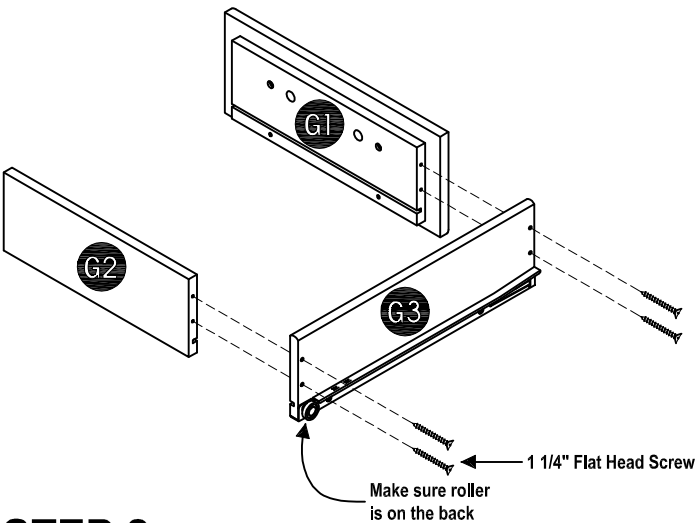



STEP 1

Attach Side Part (G3) to Front Part (G1) and Back Part (G2) using 1 1/4" Flat Head Screws.

STEP 2

Insert Base Part (G5) into the groove.






Attach Side Part (G4) to unit using 1 1/4" Flat Head Screws.

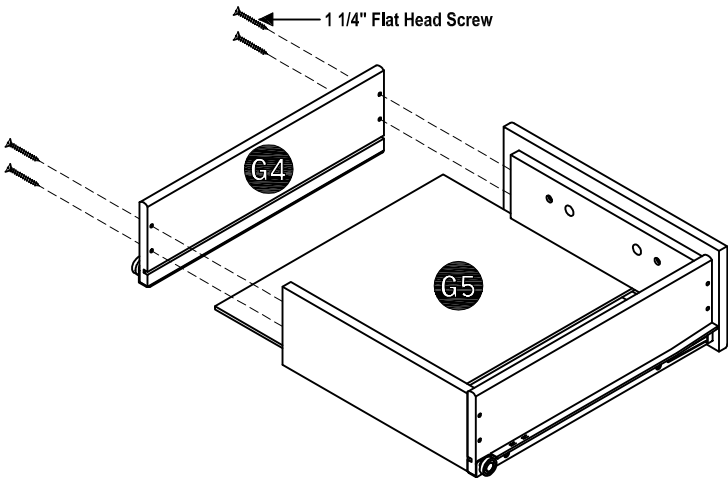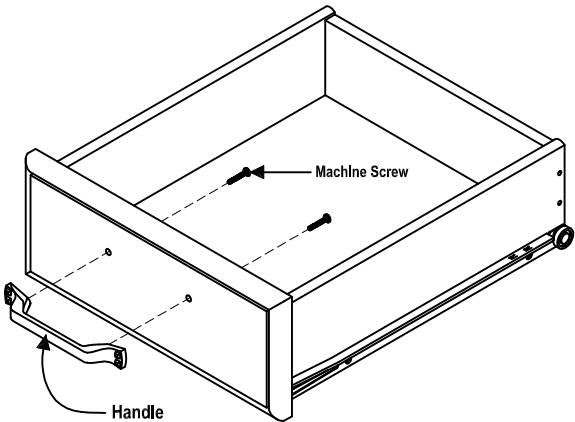


STEP 3

Attach Handle with Machine Screws.

Part List

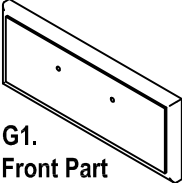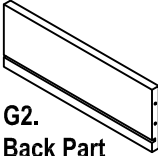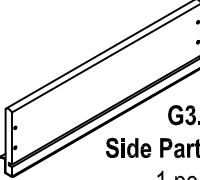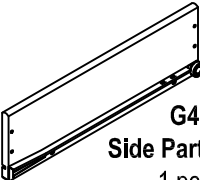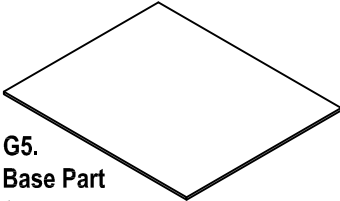				
G1. Front Part 1 pc.	G2. Back Part 1 pc.	G3. Side Part 1 pc.	G4. Side Part 1 pc.	G5. Base Part 1 pc.


Assembly Instructions 5/5

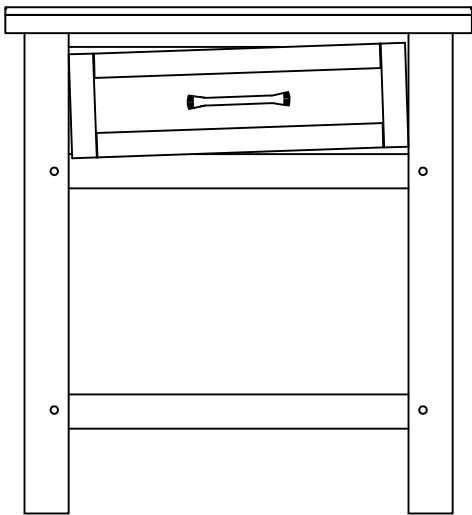

I. IF DRAWER DOES NOT ALIGN


STEP 1

Loosen slightly the upper screws.

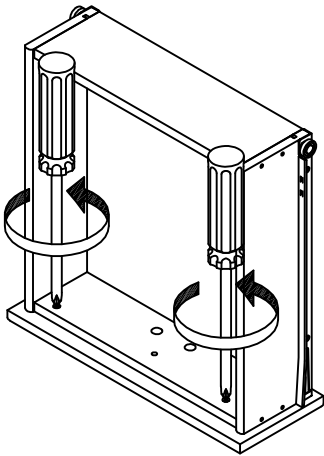


STEP 2


Insert the drawer into the main body, then adjust the drawer front panel left or right and up or down, until the drawer gaps look proportional.

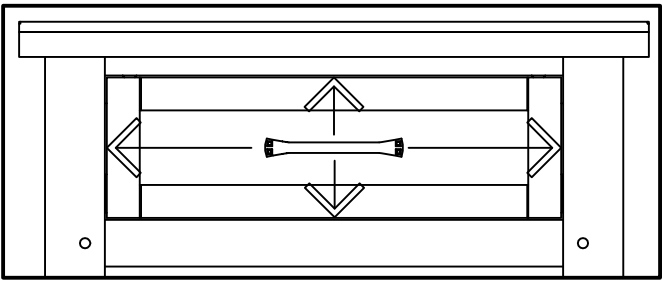

II. IF DRAWER ALREADY ALIGNS

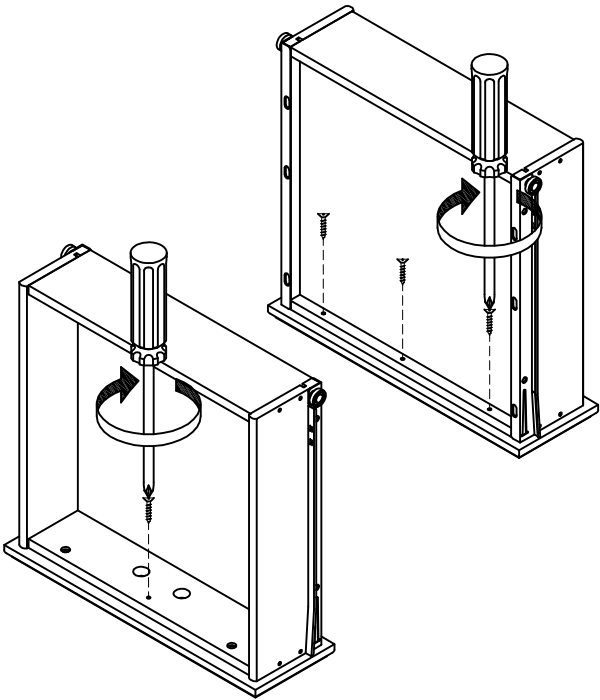

Pull out drawer slowly. Lock the drawer front panel into position with 3/4" Flat Head Screws.

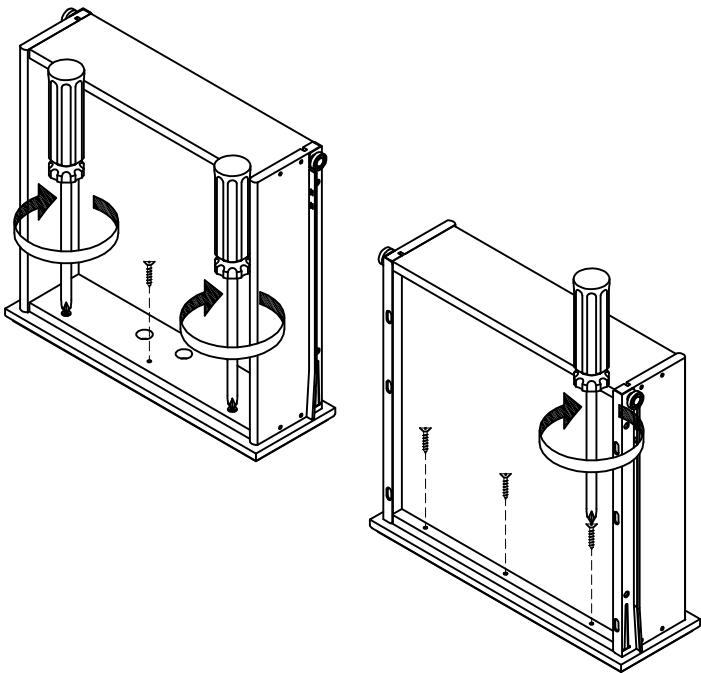

STEP 3

Pull the drawer open slowly and tighten the upper screws. Make sure the front panel does not move and lock the drawer front panel into position with 3/4" Flat Head Screws.