


88 5531 852

Bedford Daybed

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

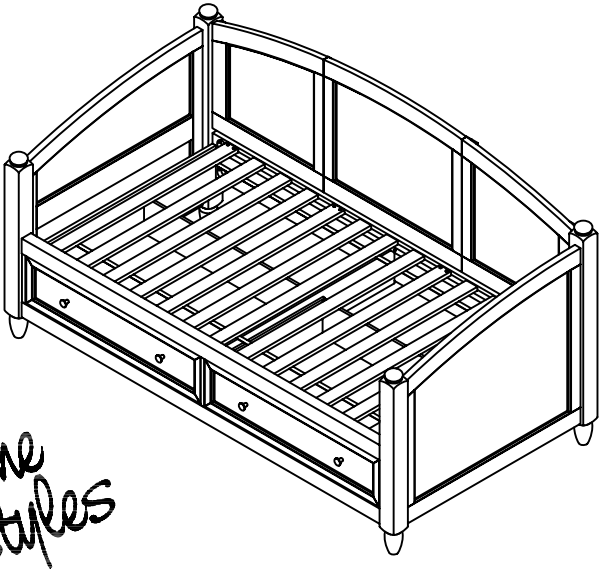

Part List

K.
Back Post
1 pc.

L.
Back Post
1 pc.

O.
Front Post
1 pc.

P.
Front Post
1 pc.

T.
Side Panel
1 pc.

U.
Side Panel
1 pc.

V.
Middle Panel
1 pc.

W.
Foot
4 pcs.

X.
KD Drawer
2 pcs.

(Knock-Down Construction, please refer to the last page of instructions for steps to complete drawer assembly)

Hardware List

Wrench
1 pc.

Key Wrench
1 pc.

Small Key Wrench
1 pc.

Cam Lock
4 pcs. (+1 extra)

Cam Lock Screw
4 pcs. (+1 extra)

1 1/4" Round Head Screw
8 pcs. (+1 extra)

1" Round Head Screw
16 pcs. (+1 extra)

1/2" Round Head Screw
6 pcs. (+1 extra)

1 1/4" Flat Head Screw
28 pcs. (+1 extra)

1" Flat Head Screw
4 pcs. (+1 extra)

Machine Screw
4 pcs.

Head Cap Bolt (long)
16 pcs. (+1 extra)

Head Cap Bolt (short)
38 pcs. (+1 extra)

Bolt
10 pcs. (+1 extra)

Spacer
10 pcs. (+1 extra)

Nut
10 pcs. (+1 extra)

Pull Handle
4 pcs.

For assembly also need the following :			
88 5531 851 Bedford Daybed		Carton quantity: 1	88 5531 853 Bedford Daybed
		Carton quantity: 1	
A. Back Panel	1 pc.	M. Side Panel	1 pc.
B. Back Panel	1 pc.	N. Side Panel	1 pc.
C. Back Panel	1 pc.	X6. Base Part	2 pcs.
D. Corner Cleat	2 pcs.	I. Stretcher	1 pc.
E. Short Cleat	2 pcs.	J. Back Rail	1 pc.
F. Long Cleat	2 pcs.	Q. Front Rail	1 pc.
G. Short Cleat	2 pcs.	R. Front Rail	1 pc.
H. Long Cleat	2 pcs.	S. Slat	1 pc.

Tools Required For Assembly : Phillips screwdriver

Tools Recommended For Assembly : Level

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319

servicedesk@homestyles-furniture.com

DB. 2314 / 11 / 01



Assembly Instructions 2/9

IMPORTANT

- * Please keep Key Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Do not tighten up all the screws until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly. Use the included adjustable levelers.

STEP 1

Attach Foot (W) to Back Post (K) and (L) and Front Post (O) and (P).

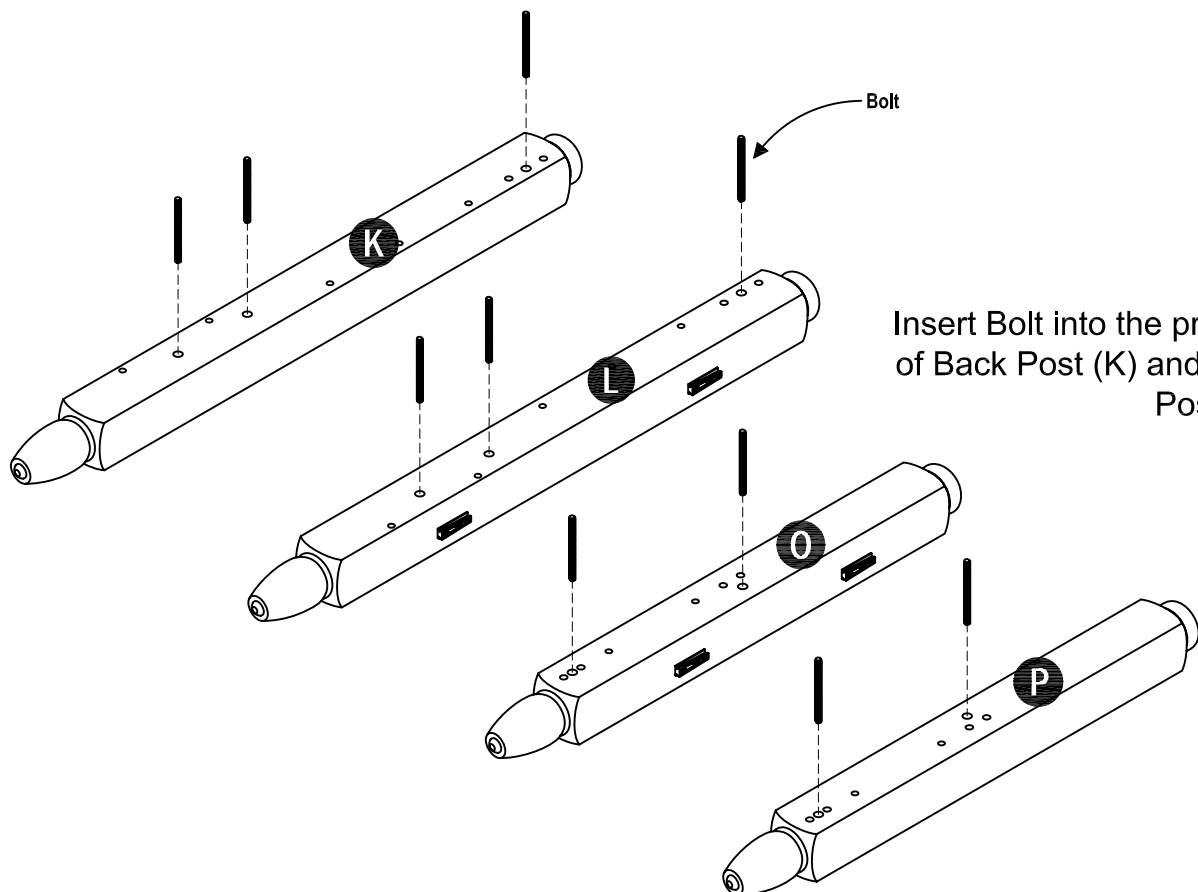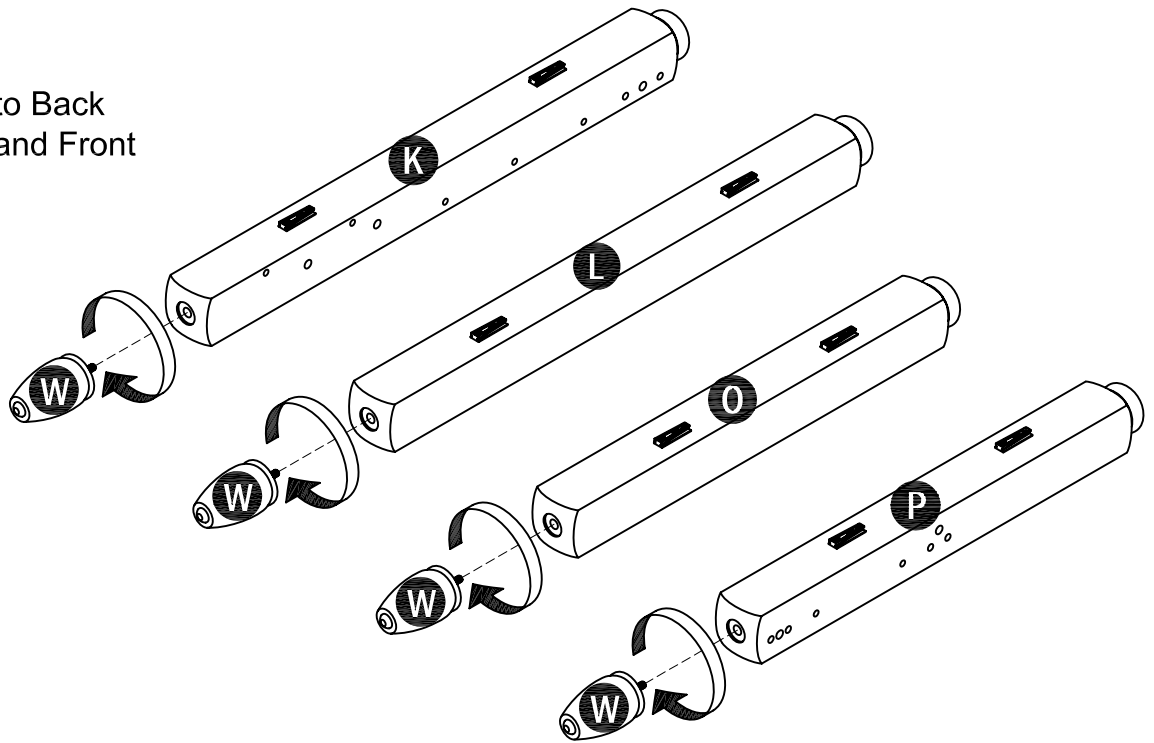

STEP 2

Insert Bolt into the pre-bored holes of Back Post (K) and (L) and Front Post (O) and (P).

Assembly Instructions 3/9

STEP 3


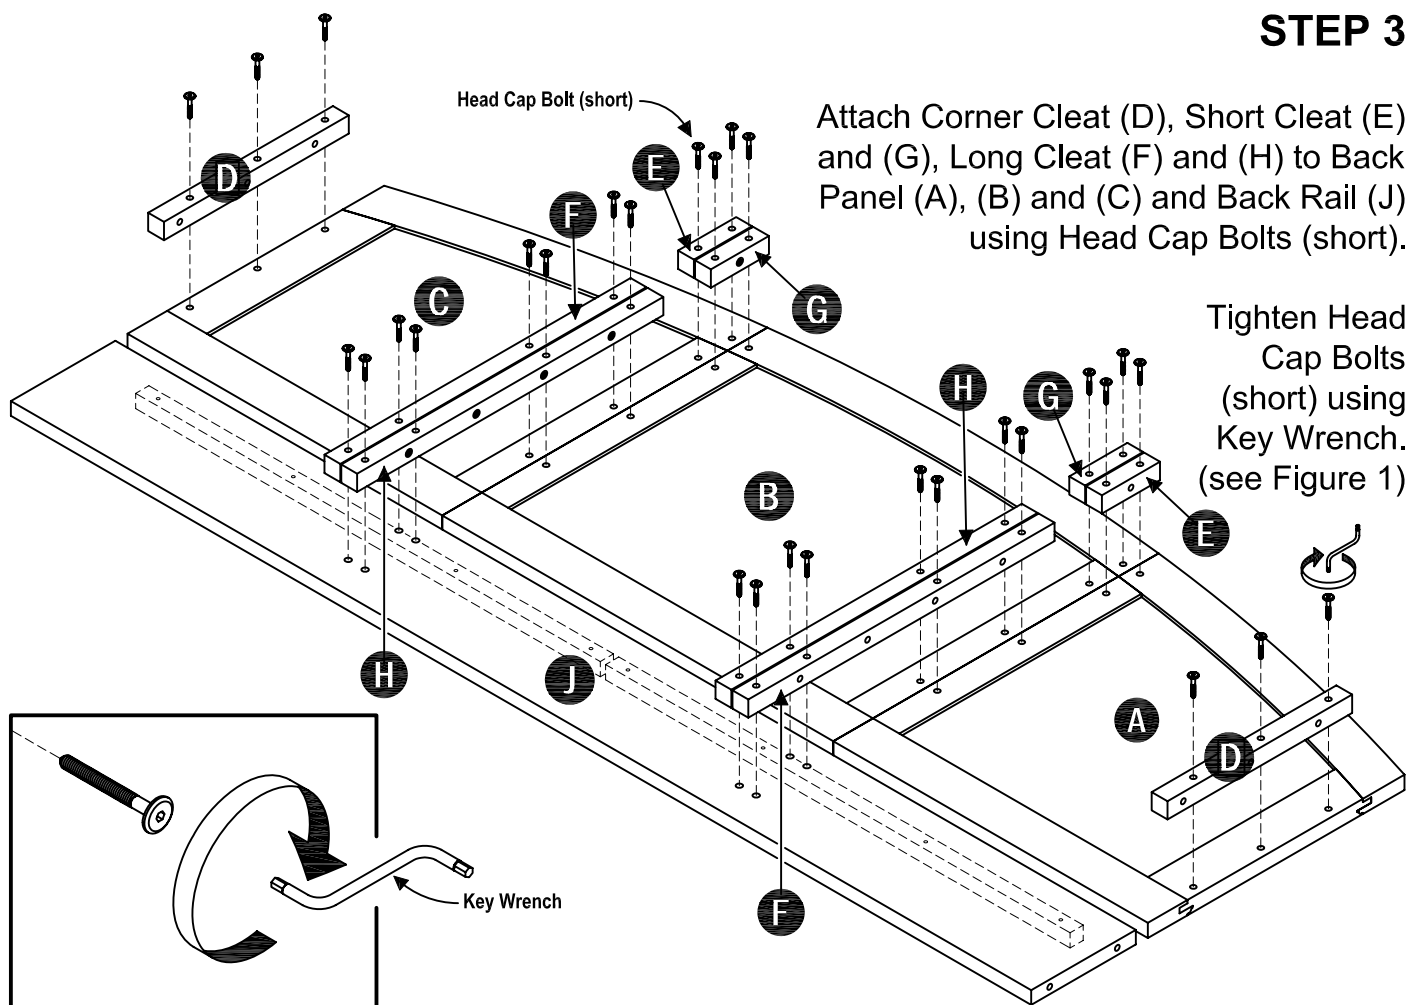


Figure 1

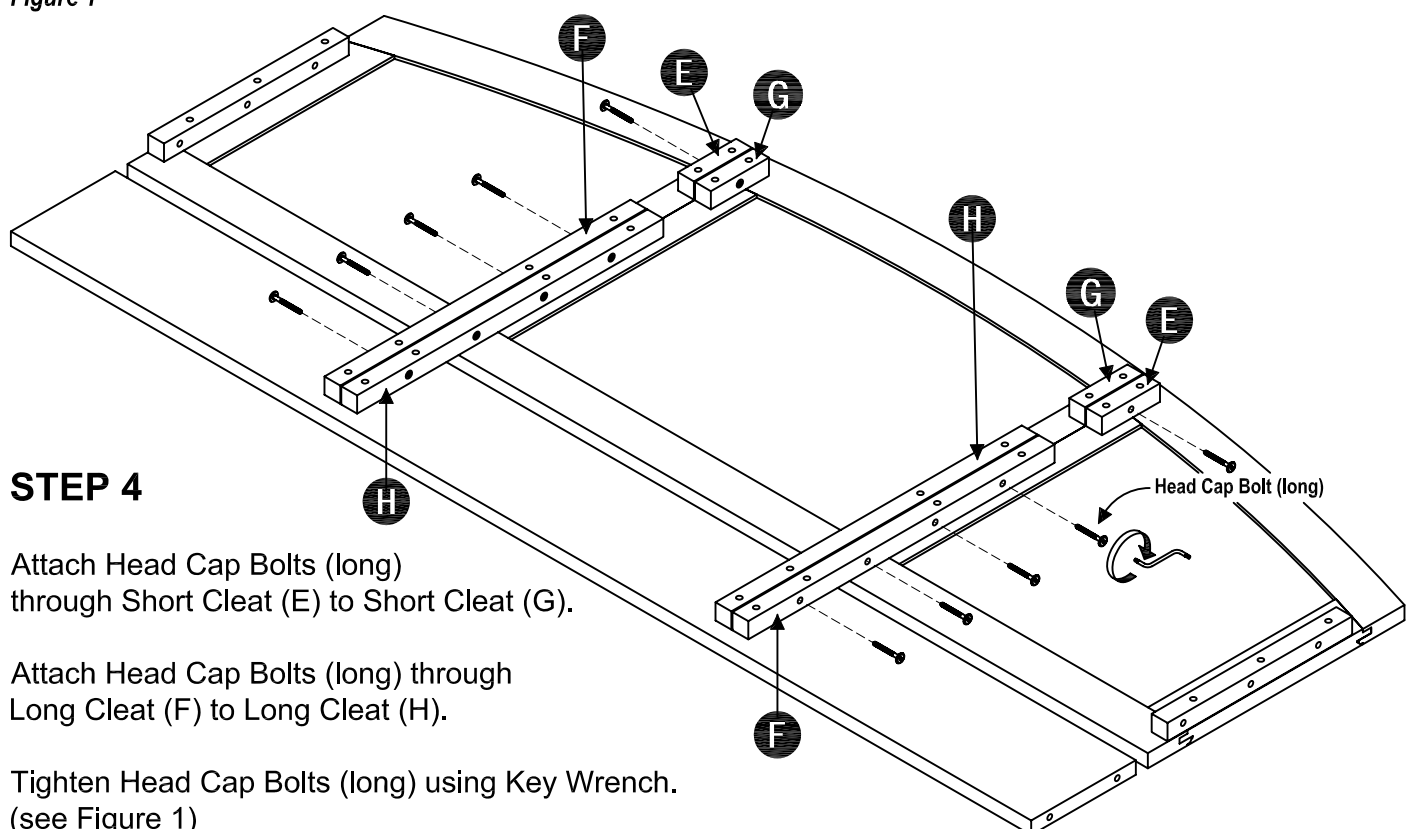

STEP 4

Attach Head Cap Bolts (long) through Short Cleat (E) to Short Cleat (G).

Attach Head Cap Bolts (long) through Long Cleat (F) to Long Cleat (H).

Tighten Head Cap Bolts (long) using Key Wrench. (see Figure 1)

Assembly Instructions 4/9

STEP 5

Attach Back Post (K) to unit and to Stretcher (I) using Head Cap Bolts (long), Spacer and Nut.

Attach Back Post (L) to unit and to Stretcher (I) using Head Cap Bolts (long), Spacer and Nut.

Tighten Head Cap Bolts (long) using Key Wrench. (see Figure 2)

Tighten Nut using Wrench. (see Figure 3)

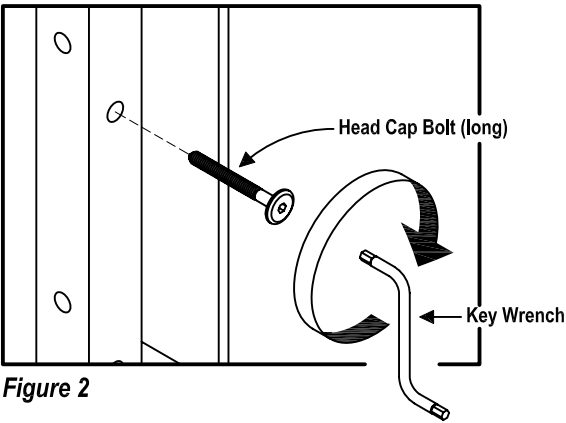
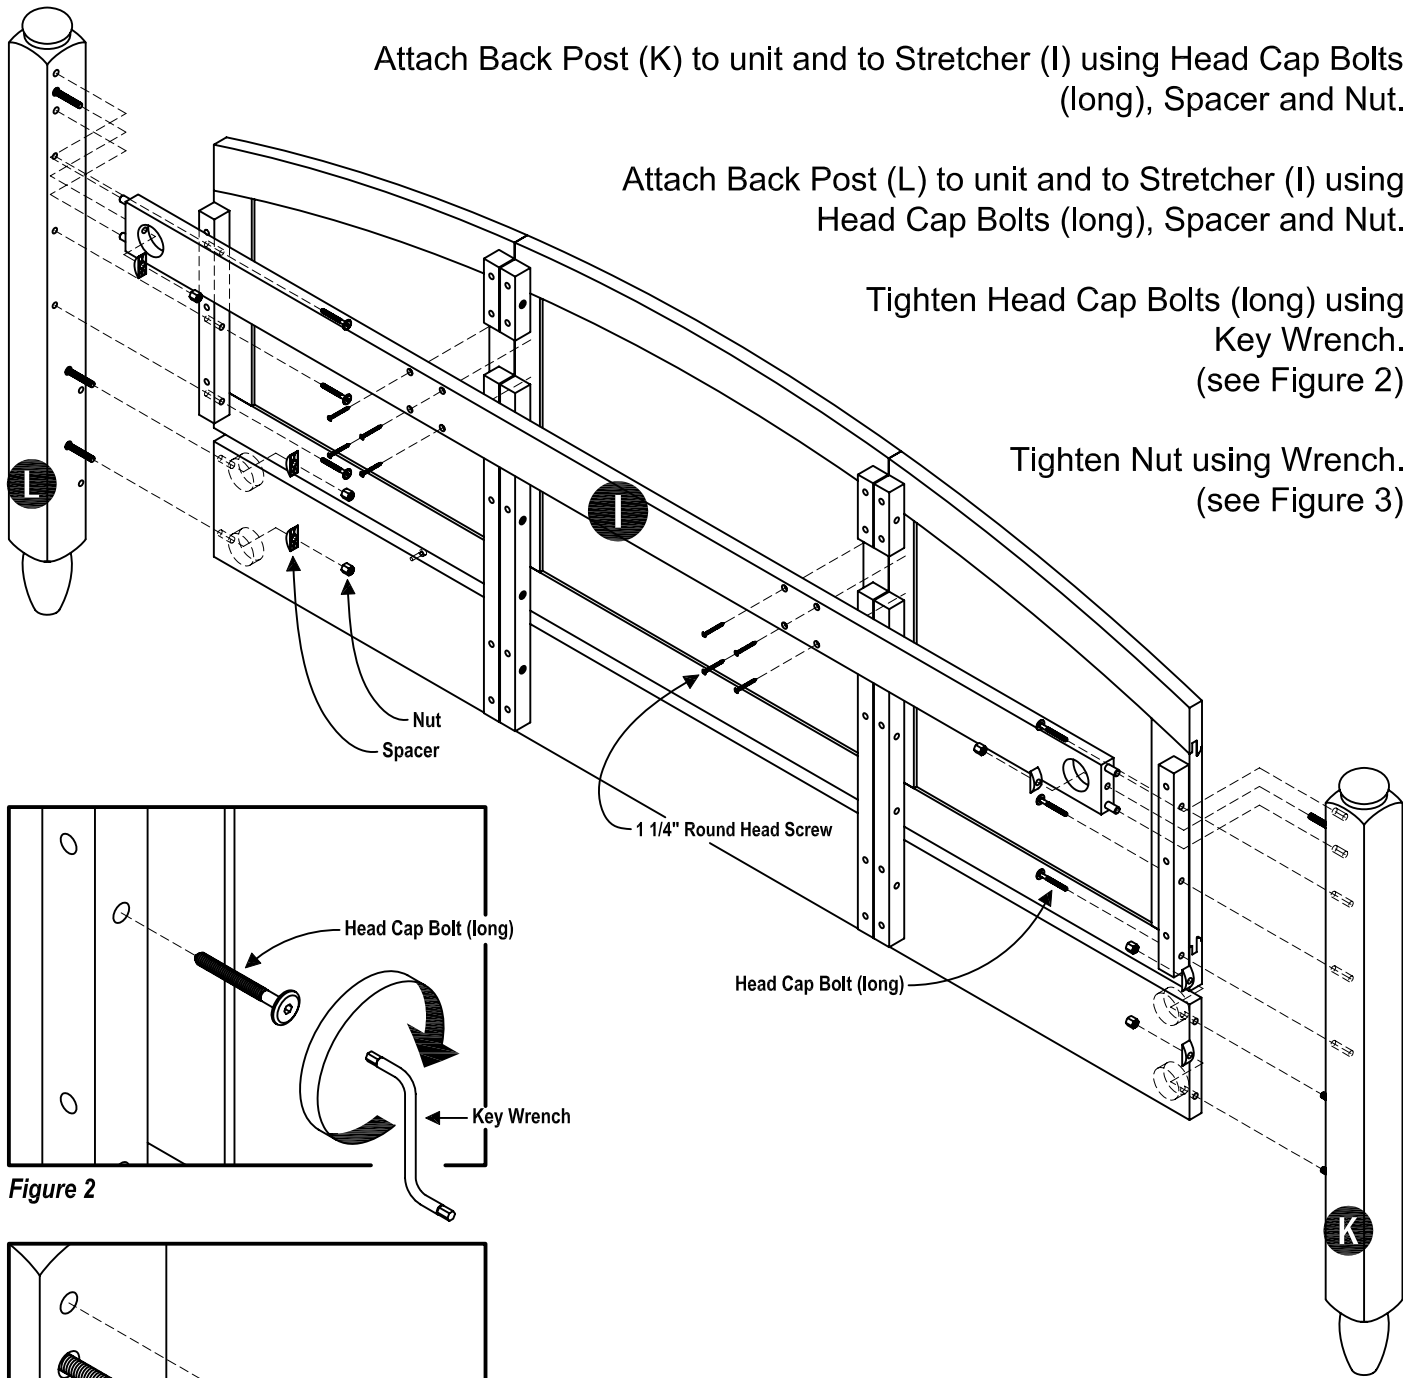


Figure 2

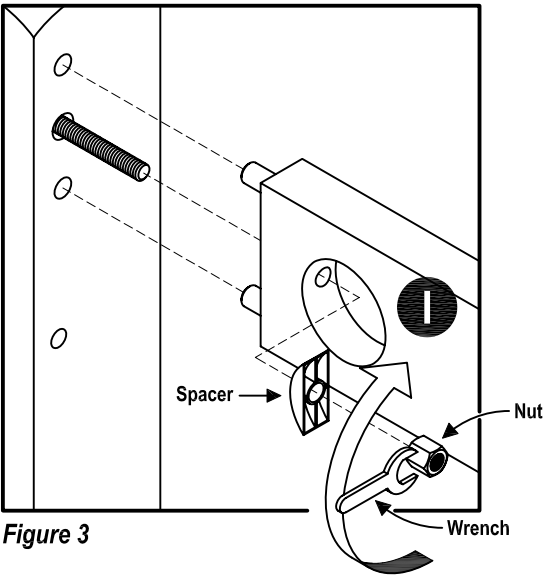


Figure 3

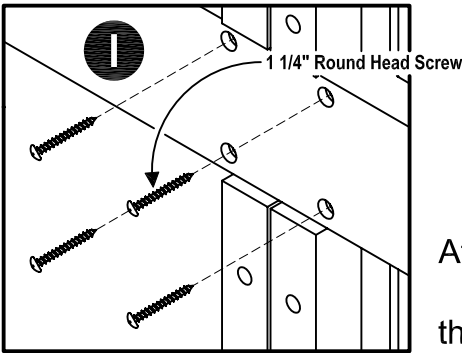



Figure 4

Attach 1 1/4" Round Head Screw to unit through Stretcher (I). (see Figure 4)

Assembly Instructions 5/9

STEP 6

Insert Cam Lock Screws into the pre-drilled holes of unit, Front Rail (Q) and (R).

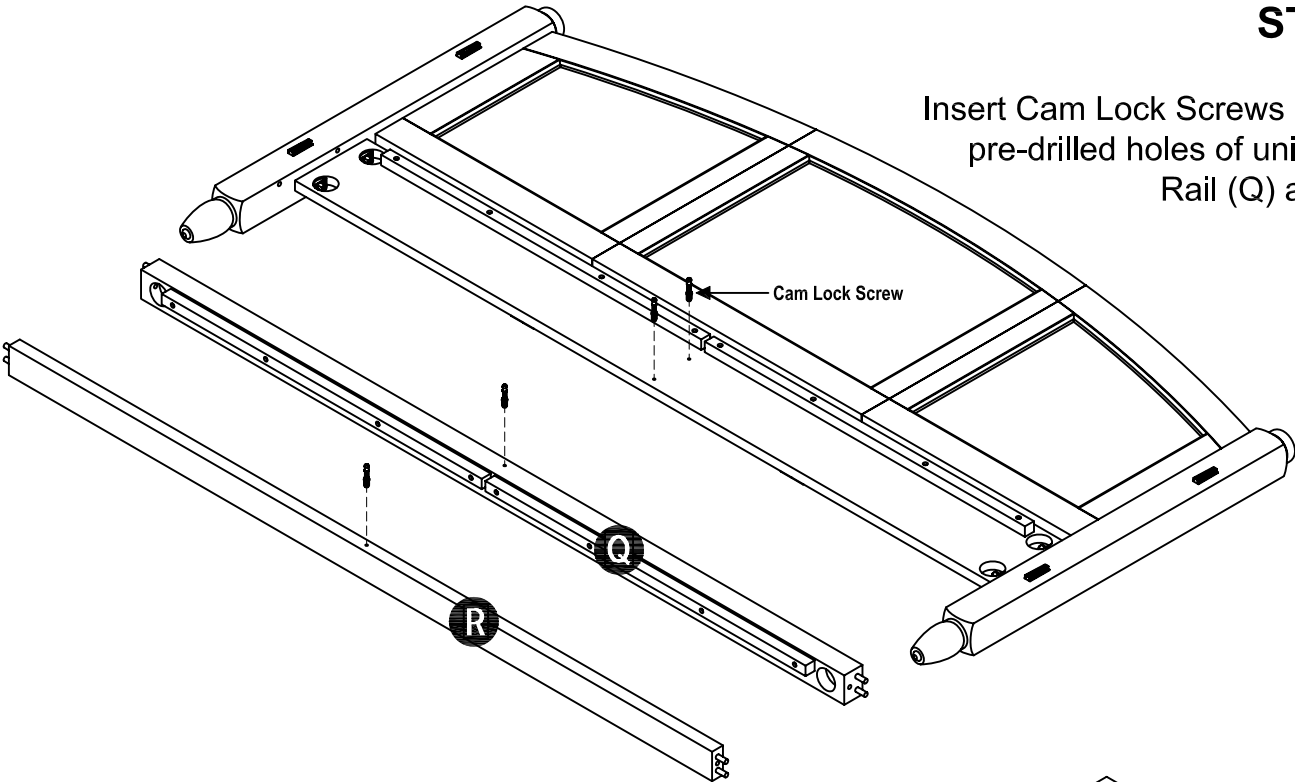

STEP 7

Attach Front Rail (Q) and (R) to Middle Panel (V) using Cam Locks. (see Figure 5)

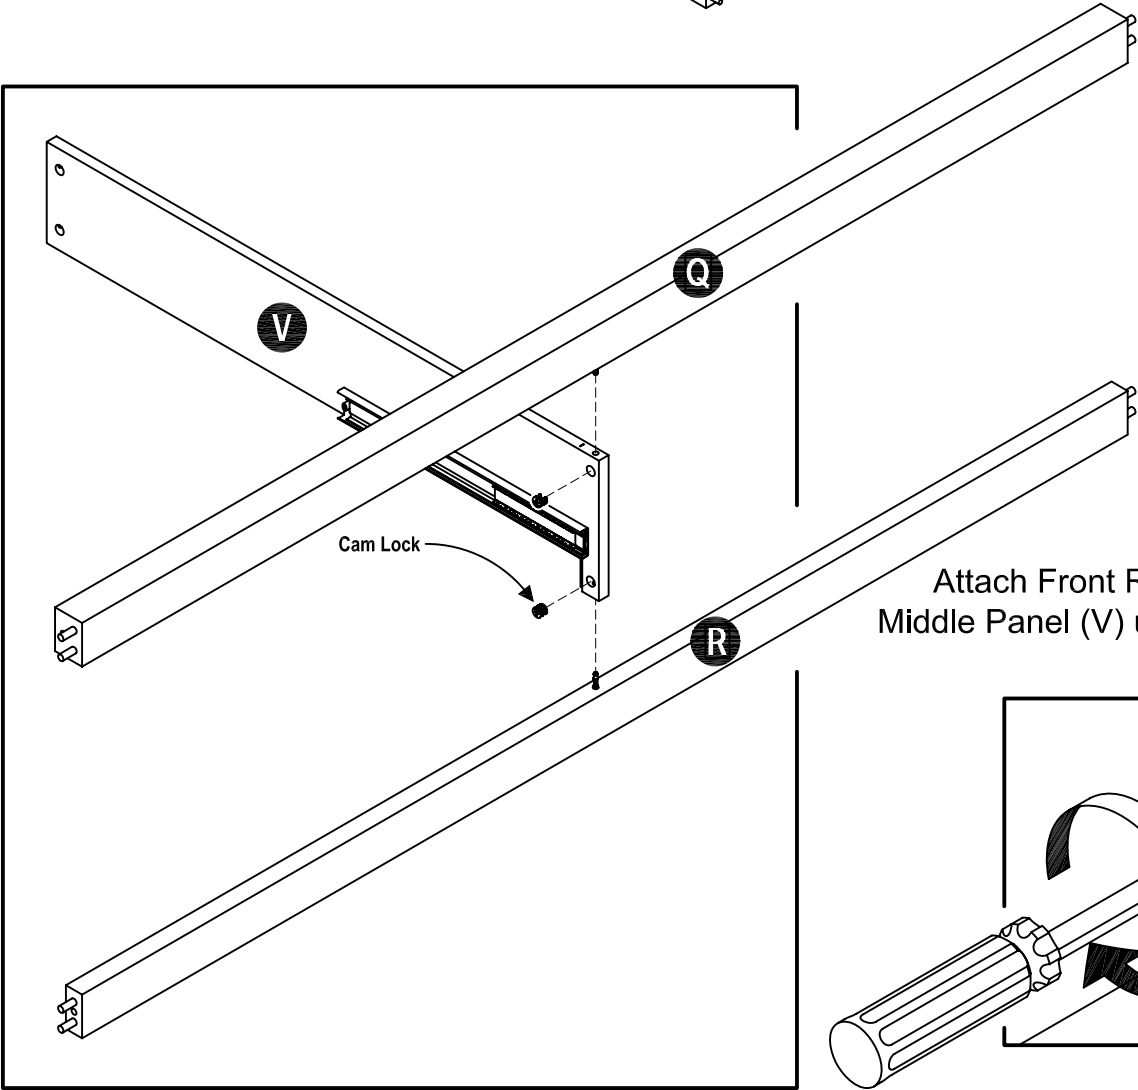


Figure 5

Assembly Instructions 6/9

STEP 8

Attach unit to Front Post (O) and (P) using Spacer and Nut.

Tighten Nut using Wrench.
(see Figure 6)



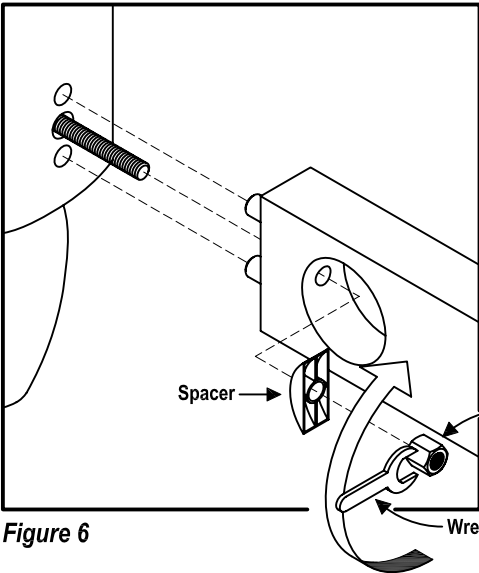


Figure 6

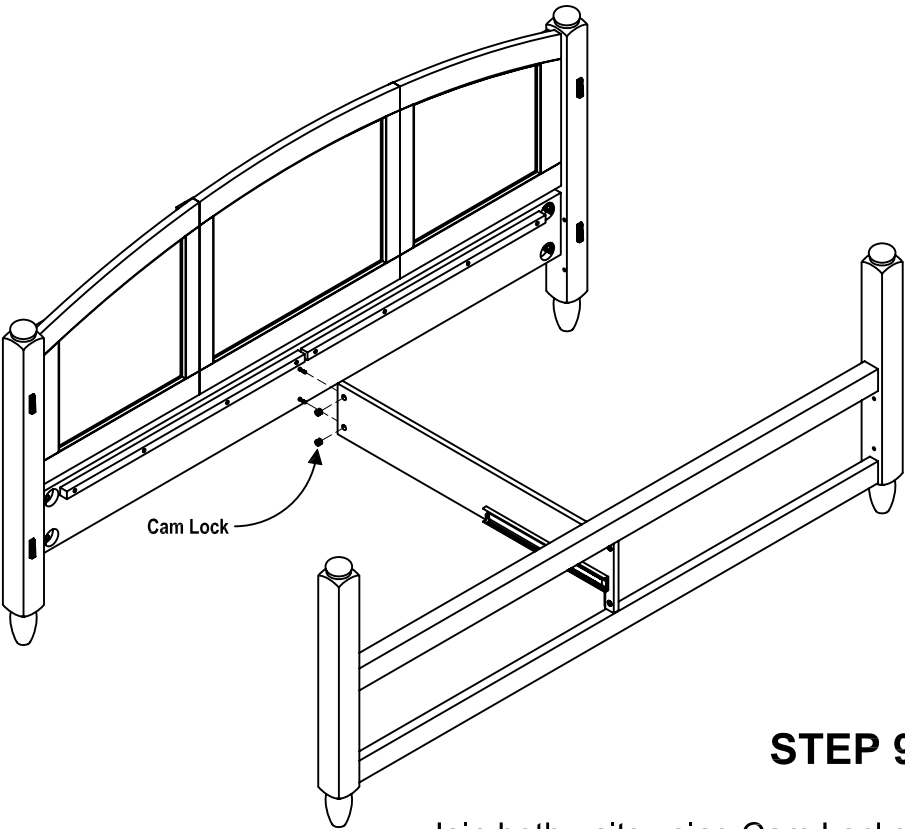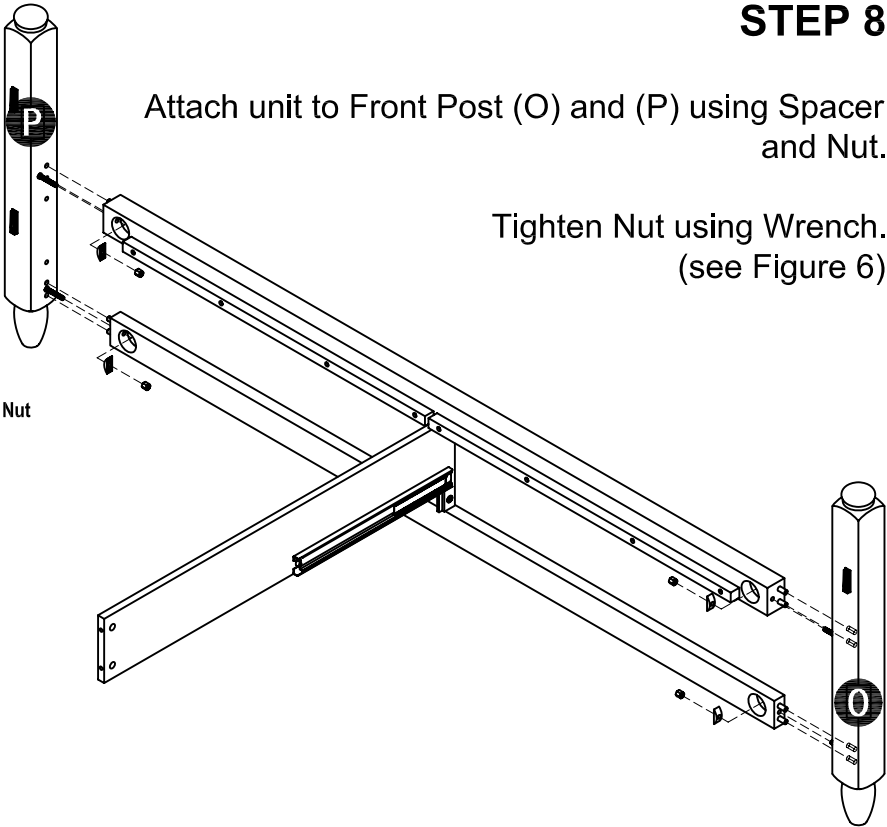

Join both units using Cam Locks.
Note: Do not tighten the Cam Locks at this time
(see Figure 7)

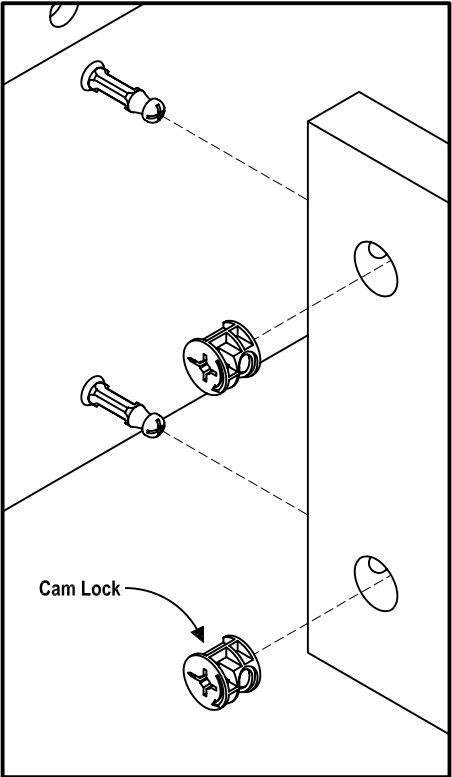


Figure 7

STEP 10

Attach Side Panels (M) and (N) to unit by sliding metal sleeve on Side Panels (M) and (N) down to metal clip on unit. (see Figure 8)



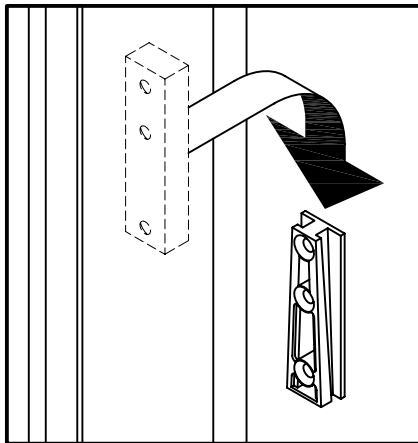


Figure 8

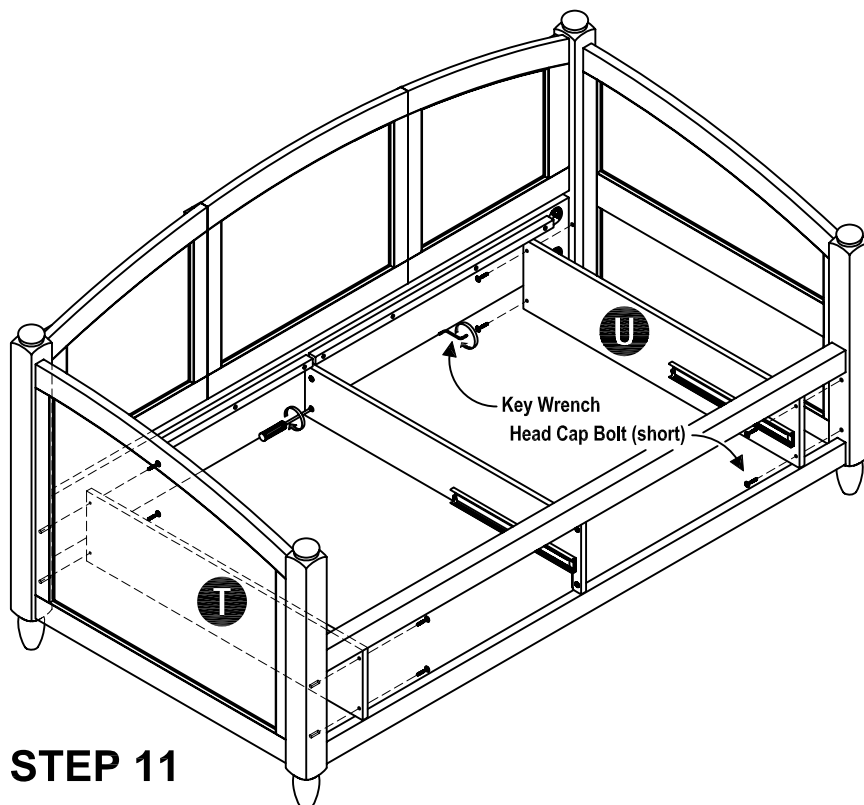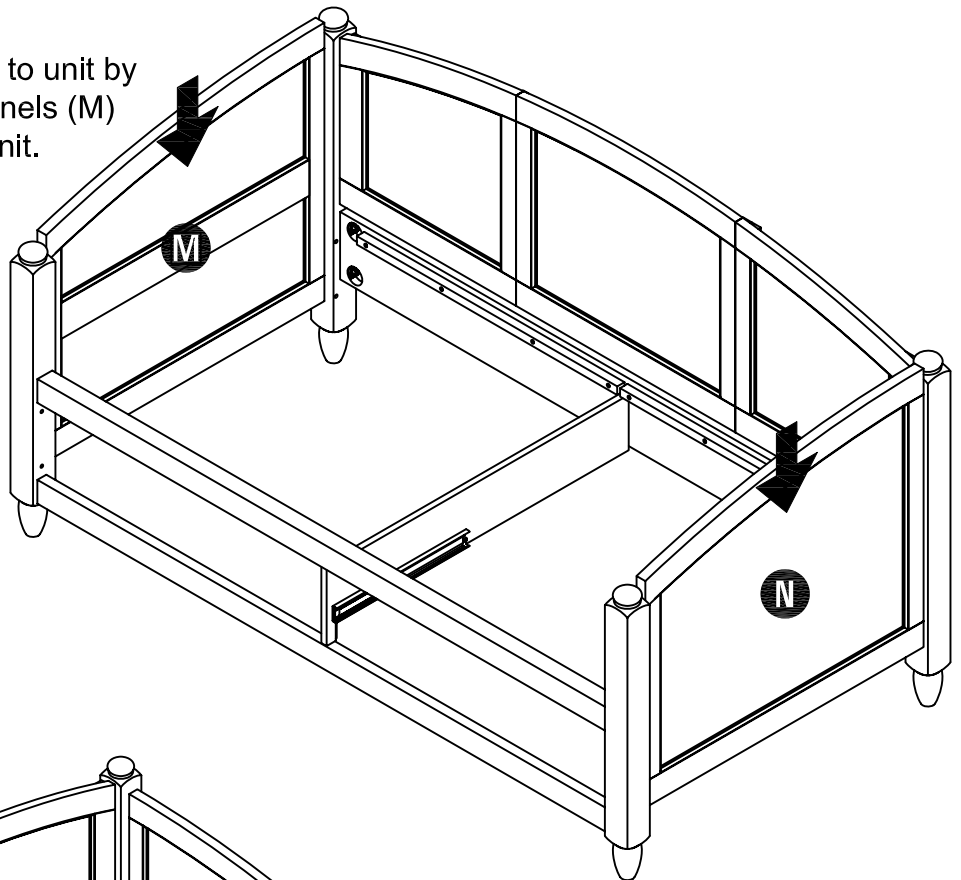

STEP 11

Attach Side Panels (T) and (U) to unit using Head Cap Bolts (short).

Tighten Head Cap Bolts (short) using Key Wrench.

Tighten Cam Locks as shown. (see Figure 9)


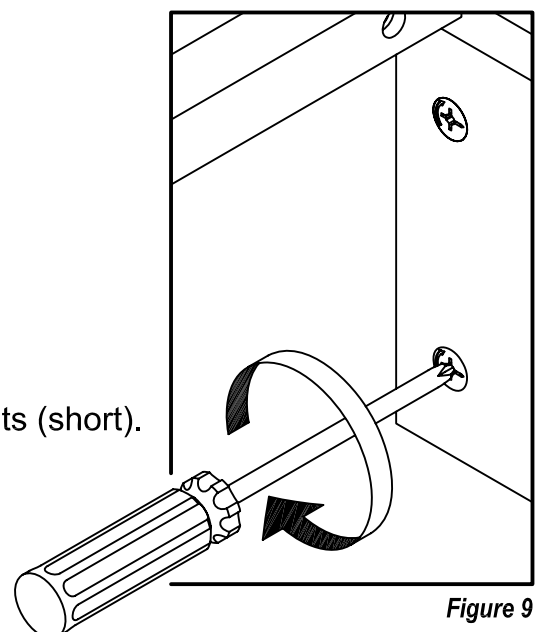


Figure 9

Assembly Instructions 8/9


STEP 12

Attach Slat (S) using 1" Round Head Screws into the pre-drilled holes of unit.

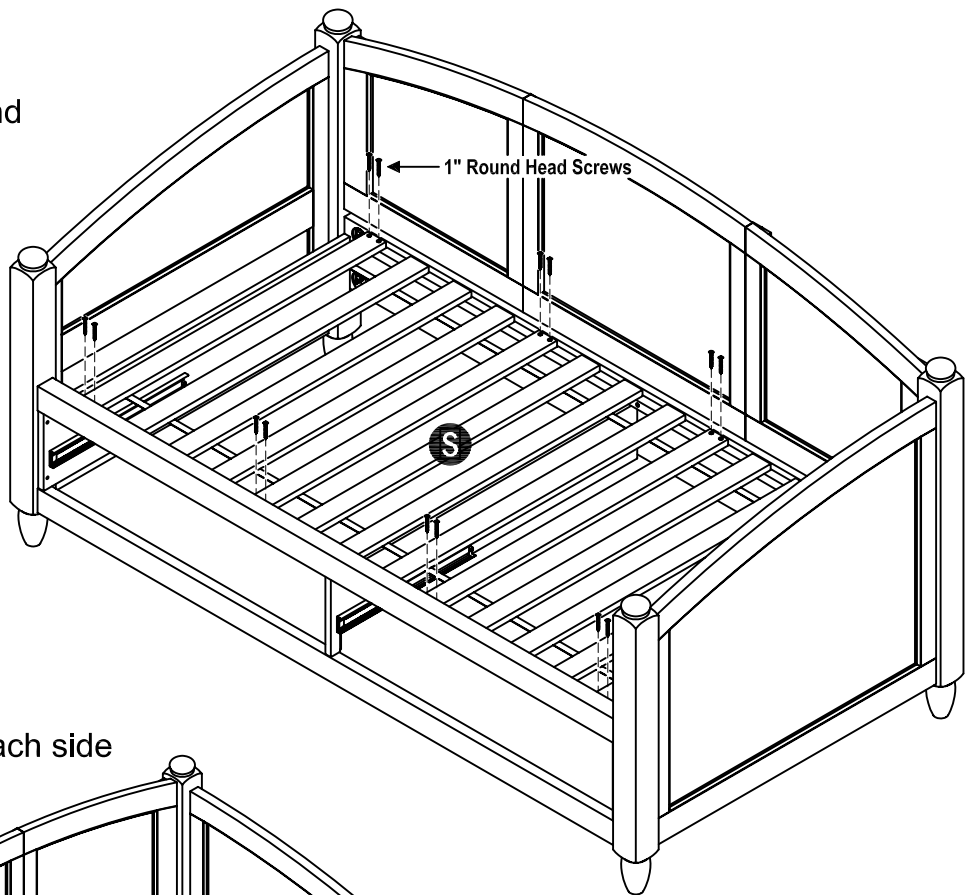

STEP 13

Align the metal runners on each side of Drawer (X) into the metal guides on the unit and slide Drawer (X) into the unit.

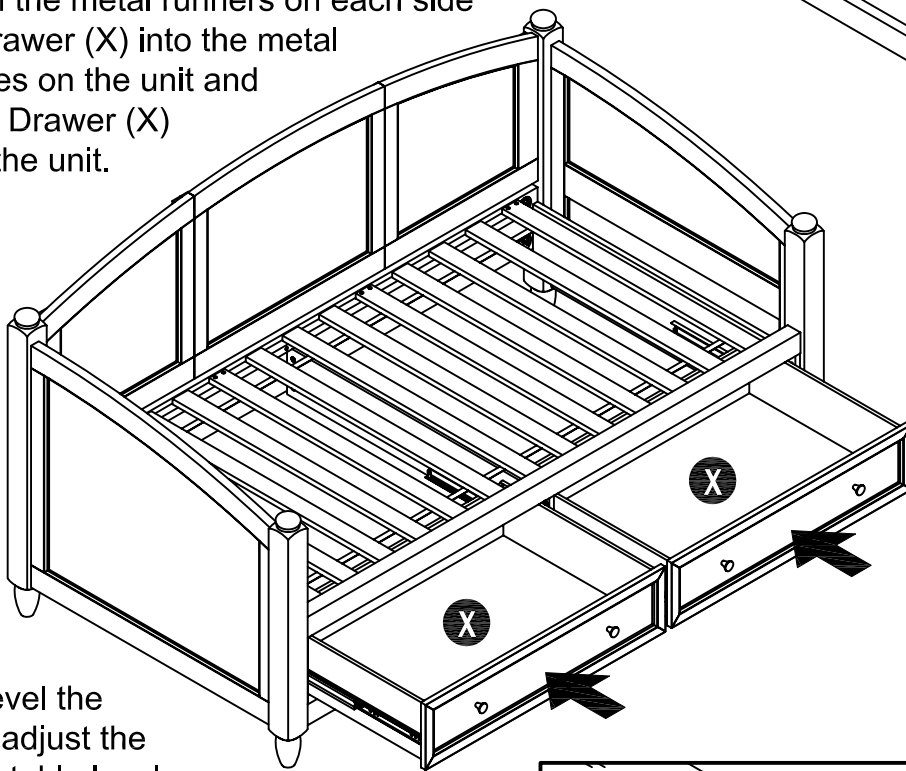

To level the unit, adjust the adjustable levelers on the bottom of legs. (see Figure 10)

If you need to remove the drawer in the future, push the plastic lever up on its' left side, push down on its' right side and pull the drawer out slowly. (see Figure 11)

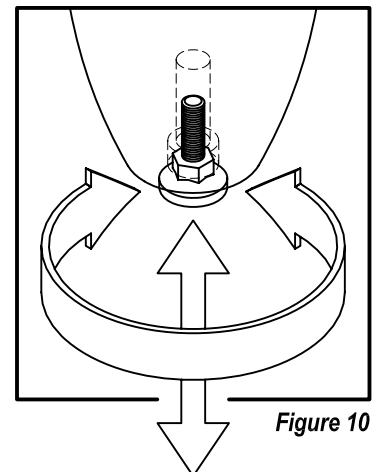


Figure 10


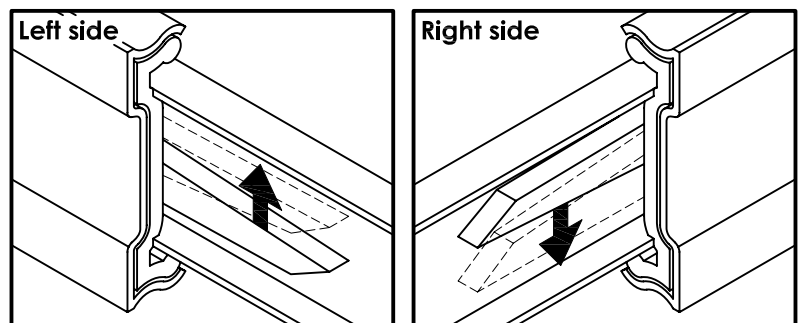


Figure 11

Drawer (X)

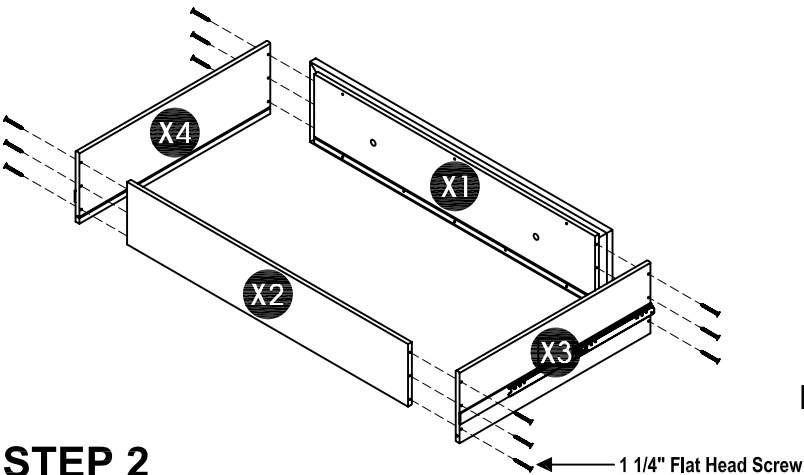

STEP 1



Attach Side Part (X3) and (X4) to Front Part (X1) and Back Part (X2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

STEP 2

Insert Base Part (X6) into the groove.

Attach Base Part (X5) to unit 1 1/4" Flat Head Screws and 1" Flat Head Screw.







Attach 1/2" Round Head Screw to the rest holes of Base Part (X6).

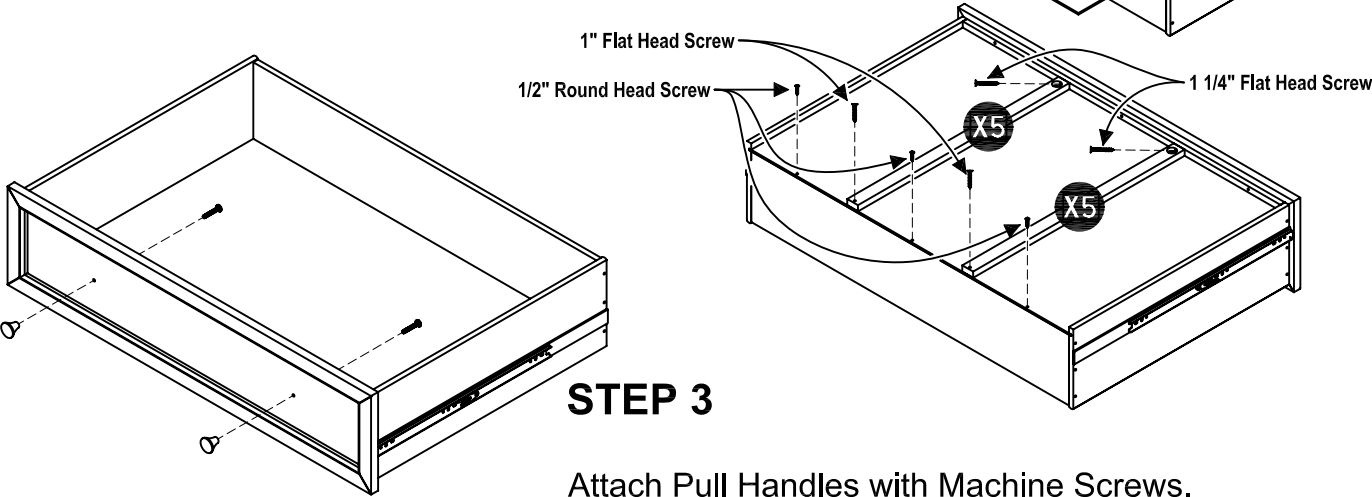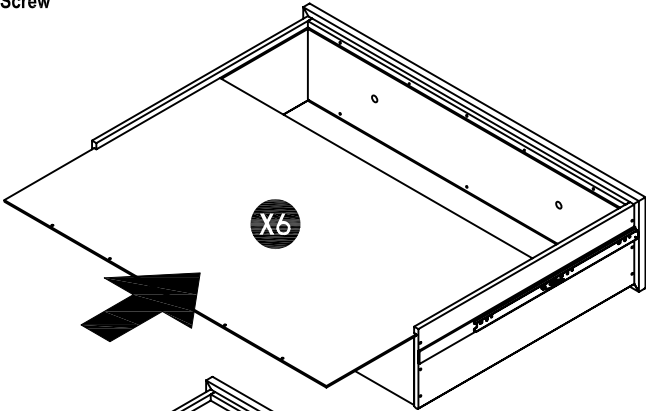

STEP 3

Attach Pull Handles with Machine Screws.

Part List

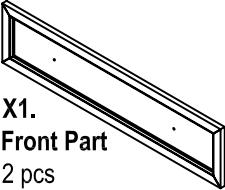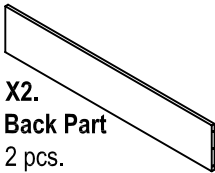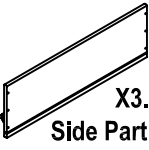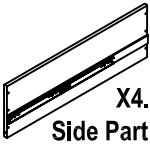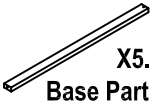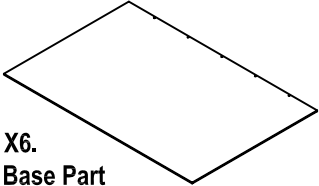					
X1. Front Part 2 pcs	X2. Back Part 2 pcs.	X3. Side Part 2 pcs.	X4. Side Part 2 pcs.	X5. Base Part 4 pcs.	X6. Base Part 2 pcs. (in carton 88 5531 851)

VERY IMPORTANT !!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES WOOD TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT
WRITE
DIRECTLY
ON
SURFACE.




**PREVENT
MARKING**

DO NOT
PLACE IN
DIRECT
SUNLIGHT.



**PREVENT
FADING**

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES.

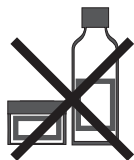

**PREVENT
YELLOWING**

DO NOT
PLACE HOT
OBJECTS
ON SURFACE.



**PREVENT
FINISH DAMAGE**

DO NOT
USE
RUBBER
BASED
PLACE MATS.



**PREVENT
DISCOLORING**

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.

