

88 5662 89


Bar Stool

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home
Styles

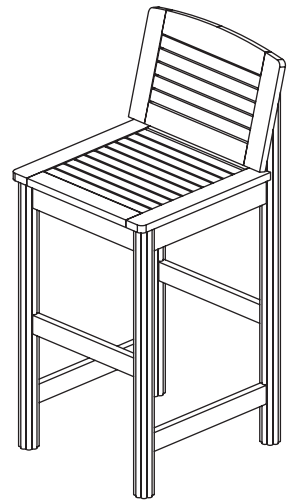


Part List

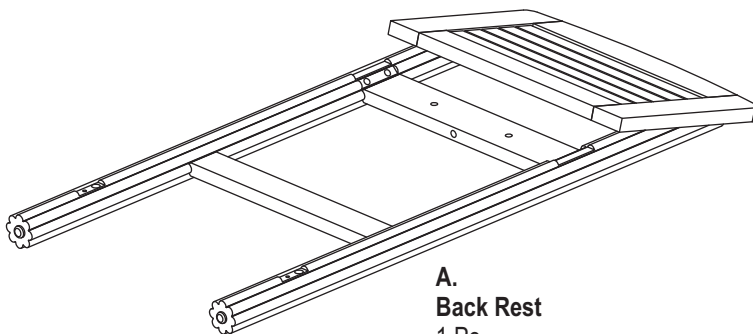


**A.
Back Rest**
1 Pc.

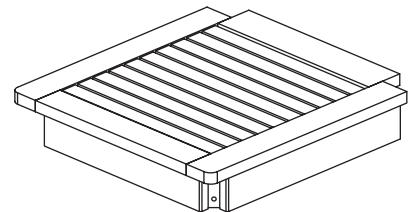


**B.
Seat**
1 Pc.

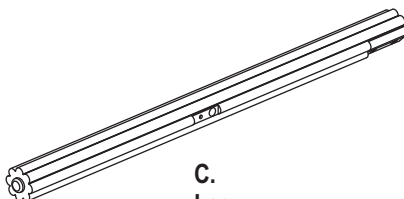


**C.
Leg**
1 Pc.

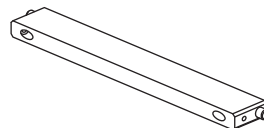

**E.
Stretcher**
1 Pc.

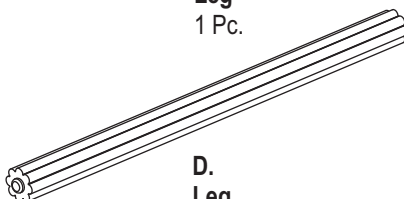

**D.
Leg**
1 Pc.

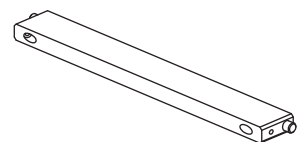


**F.
Stretcher**
2 Pcs.


Hardware List




**M8x32
Wood Screw**
6 Pcs. (+1 extra)



**M6x45
Head Cap Bolt (short)**
2 Pcs. (+1 extra)



**M6x55
Head Cap Bolt (middle)**
4 Pcs. (+1 extra)

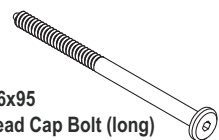

**M6x95
Head Cap Bolt (long)**
4 Pcs. (+1 extra)




Spring Washer
10 Pcs. (+1 extra)



Flat Washer
10 Pcs. (+1 extra)



**M4
Small Hex Wrench**
1 Pc



**M4
Hex Wrench**
1 Pc.

Tools required for assembly : **Phillips** screwdriver

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319


IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled
- * You should keep Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Use a soft cloth between these parts and the floor.

STEP 1


Attach Seat (B) to Back Rest (A) with Head Cap Bolts (long), Head Cap Bolts (short), Spring Washers and Flat Washers. The Head Cap Bolts must be completely tightened using the Hex Wrench.

Insert Wood Screw into the pre-drilled hole of Back Rest (A).

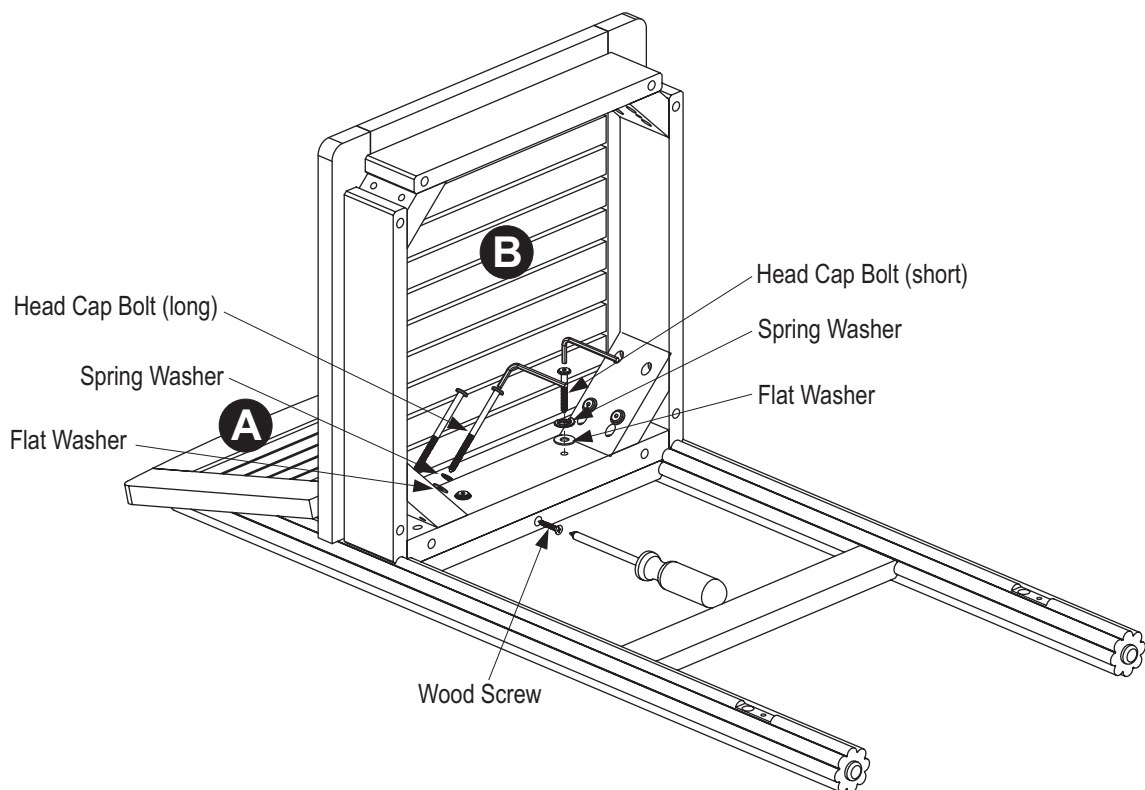

STEP 2

Attach Stretcher (E) to legs (C) and (D) with Wood Screws.

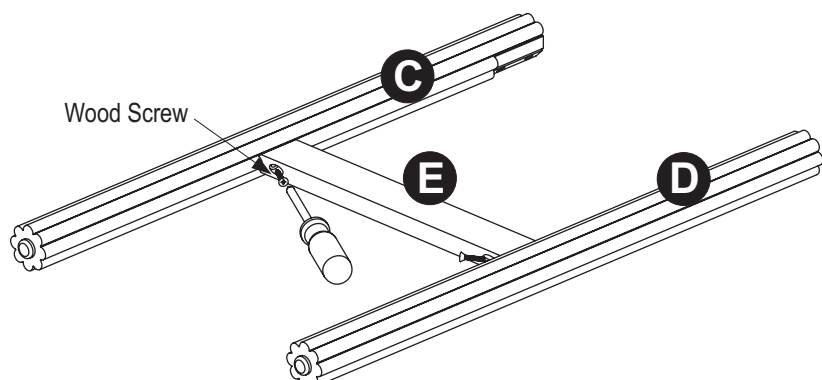

STEP 3

Attach Stretchers (F) and unit from Step 2 to unit from Step 1 with Wood Screws, Head Cap Bolts (middle), Spring washers and Flat Washers.

