

88 5007 9442 **Kitchen Island**

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

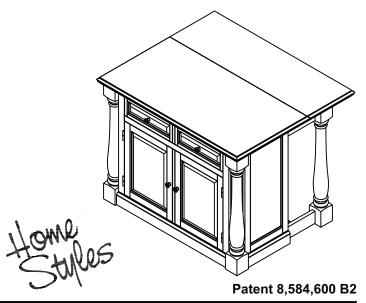

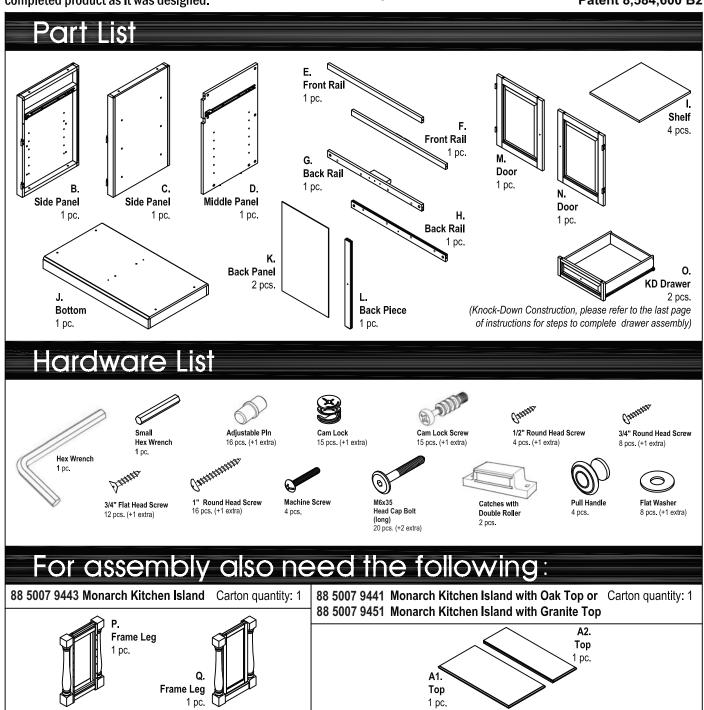


Tools Required For Assembly: Phillips screwdriver

Tools recommended for assembly: Level

Assembly Instructions 2/8

IMPORTANT


- * Please keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Do not tighten up all the screws until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly. Use the included adjustable levelers to level.

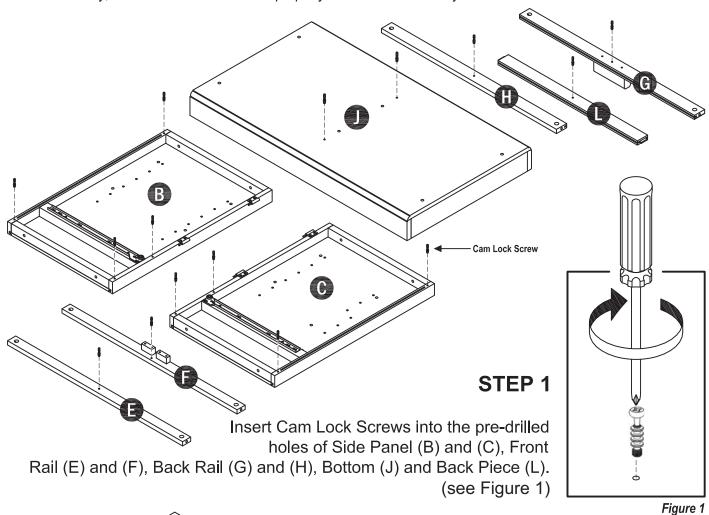


STEP 2

Attach Magnets to
Front Rail (F) with 1/2" Round Head Screws.

Assembly Instructions 3/8

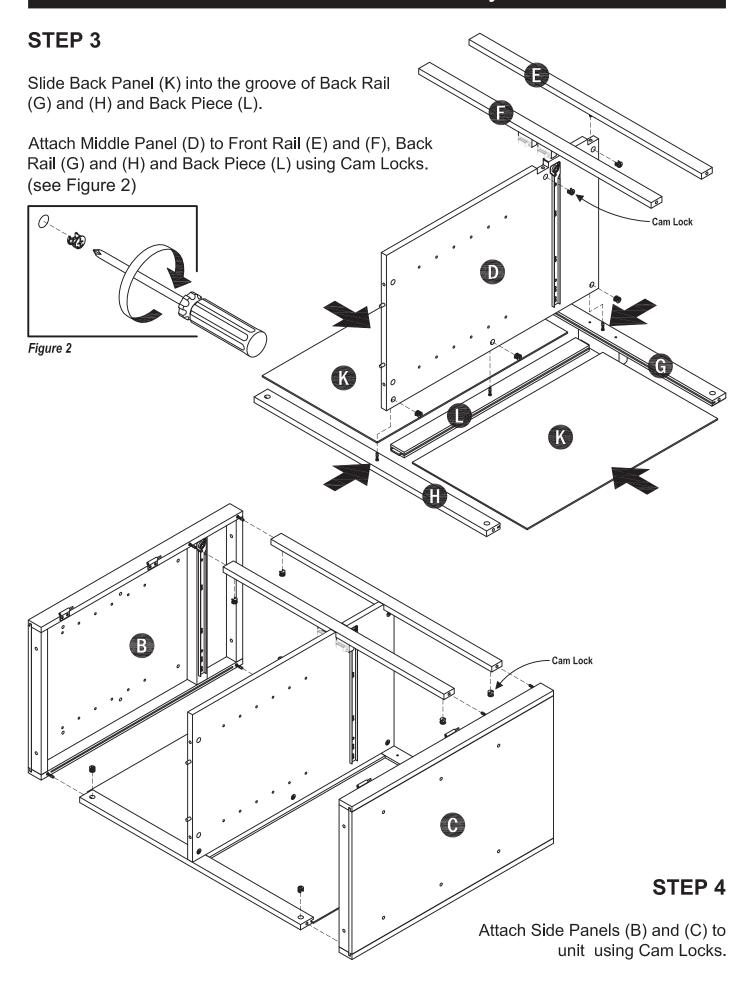

Assembly Instructions 4/8

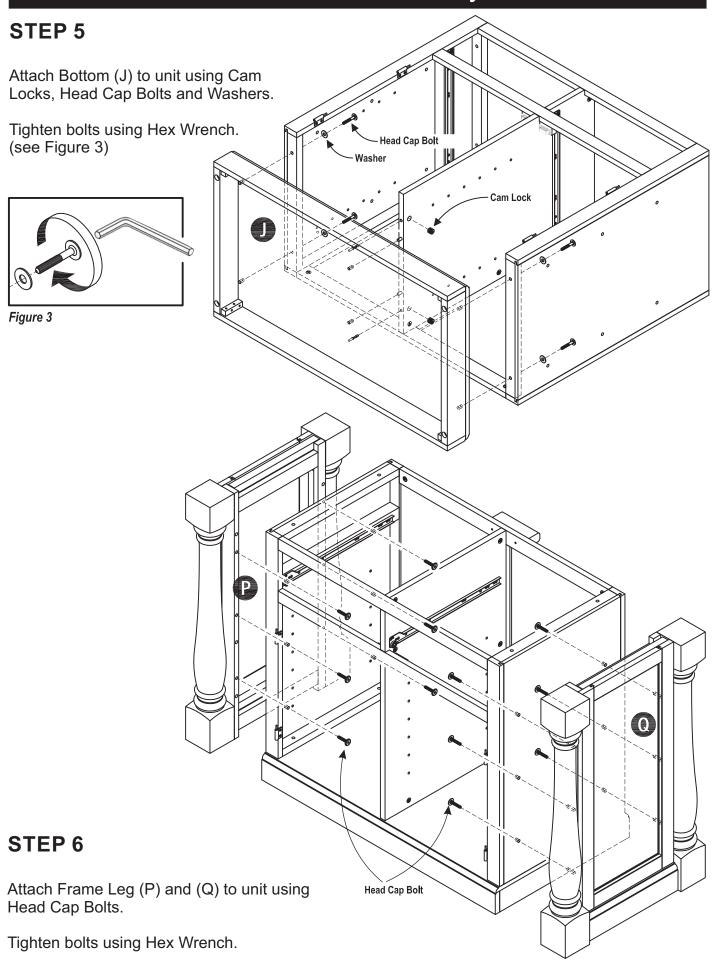

Assembly Instructions 5/8

STEP 7

Attach Doors (M) and (N) to the side panels, by sliding the door lift hinges into the side panel lift hinges. (see Figure 4)

Assemble Pull Handles to Door (M) and (N) with Machine Screws. (see Figure 5)

Level the unit by adjusting the adjustable levelers on the bottom of unit. (see Figure 6)

Insert 8X 3/4" Round Head Screws into the pre-drilled holes in the back panel.

Note: Please make sure unit is level before tightening these screws.



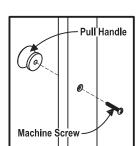


Figure 5

Figure 4

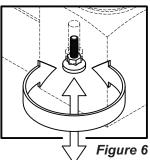

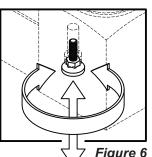



STEP 8

Slide Drawers (O) into place.


Insert Adjustable Pins into side panels and middle panel at the desired level.

Slide Shelves (I) into position.

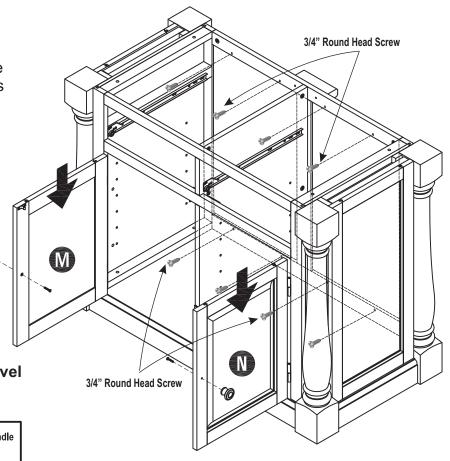

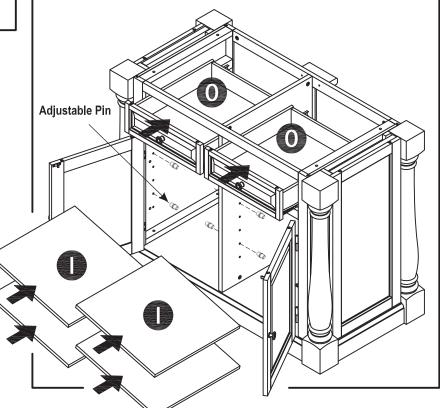


Assembly Instructions 6/8

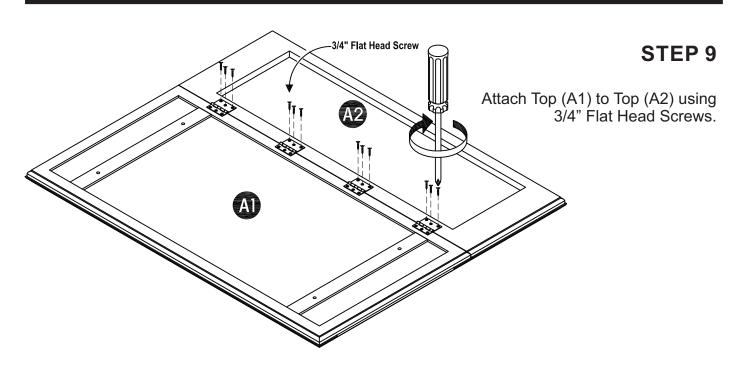


Pull out the Drawers from unit. Place Top (A) onto the unit, using Head Cap Bolts and Washers. Tighten bolts using Hex Wrench. (see Figure 7) Slide Drawer into place.


Assembly Instructions 7/8

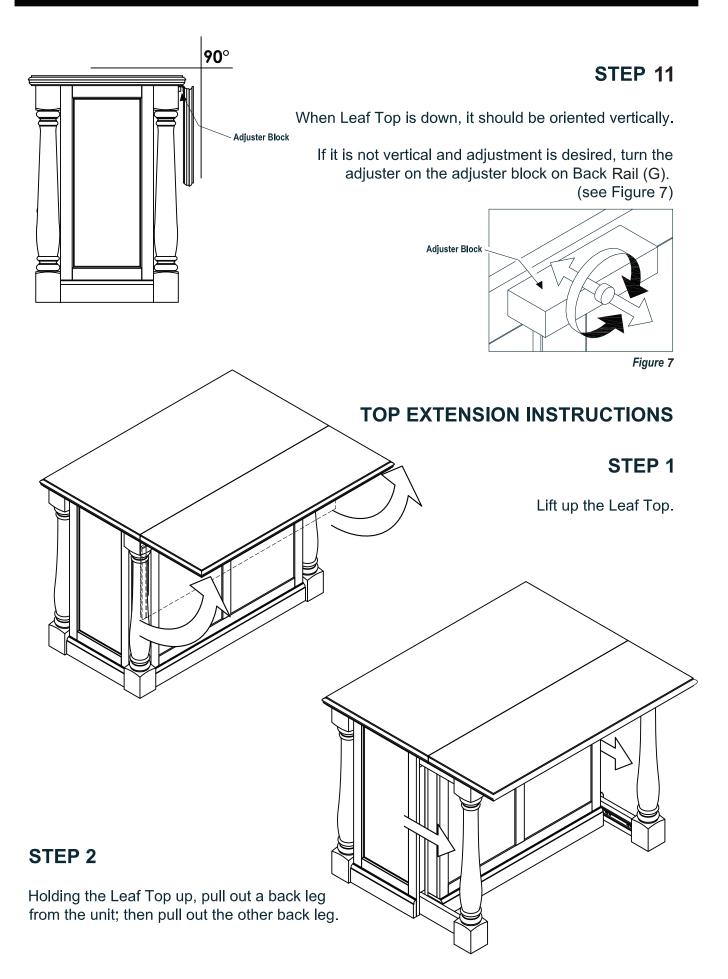

Assembly Instructions 8/8

Drawer (O)

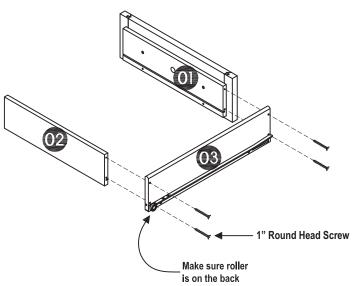

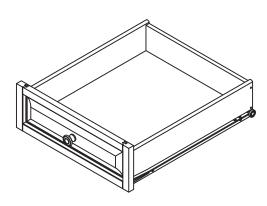


STEP 1

Attach Side Part (O3) to Front Part (O1) and Back Part (O2) using a Phillips screwdriver and 1" Round Head Screws.

STEP 2

Insert Base Part (O5) into the groove.

Attach Side Part (O4) to Front Part (O1) and Back Part (O2) using a Phillips screwdriver and 1" Round Head Screws.

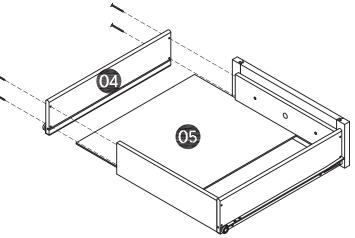

STEP 3

Attach Pull Handles with Machine Screws.

