

# 88 5055 88

## Bar Stool

### IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

*Home  
Styles*




### Part List



**A.  
Seat**  
1 pc.



**E.  
Side Stretcher**  
1 pc.



**F.  
Side Stretcher**  
1 pc.




**G.  
Front Stretcher**  
1 pc.



**B.  
Leg**  
1 pc.



**C.  
Leg**  
1 pc.

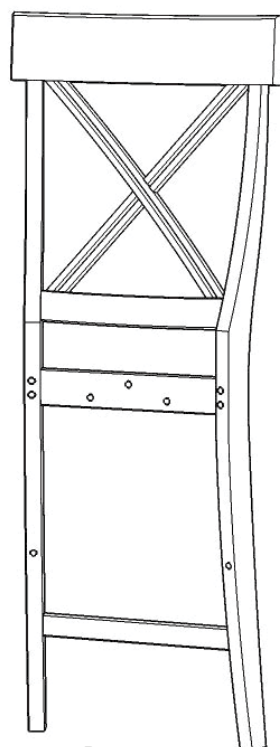

**D.  
Back Frame**  
1 pc.

### Hardware List



**Hex Wrench**  
1 pc.



**Small Wrench**  
1 pc.

**M3.5x40  
Wood Screw**  
6 pcs. (+1 extra)




**M6x40  
Head Cap Bolt (short)**  
3 pcs. (+1 extra)



**M6x50  
Head Cap Bolt**  
4 pcs. (+1 extra)



**M6x70  
Head Cap Bolt (long)**  
4 pcs. (+1 extra)



**Flat Washer**  
11 pcs. (+1 extra)



**Spring Washer**  
11 pcs. (+1 extra)

**Tools required for assembly :** Phillips screwdriver

**Home Styles Consumer Assistance :** [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319

## IMPORTANT

- \* Please keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- \* Do not tighten up all the bolts until each part is properly assembled.
- \* Use a soft cloth between these parts and the floor.

## STEP 1

Attach Legs (B) and (C) to Seat (A) with Flat Washers, Spring Washers and Head Cap Bolts.

Tighten Head Cap Bolts only half way (See Figure 1)

Attach Front Stretcher (G) to unit with Wood Screws. (See Figure 2)

Attach Side Stretcher (E) to Leg (B) and Side Stretcher (F) to Leg (C) with Wood Screws. (See Figure 2)

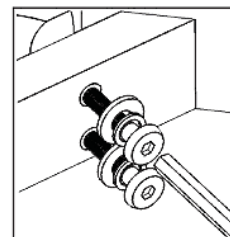
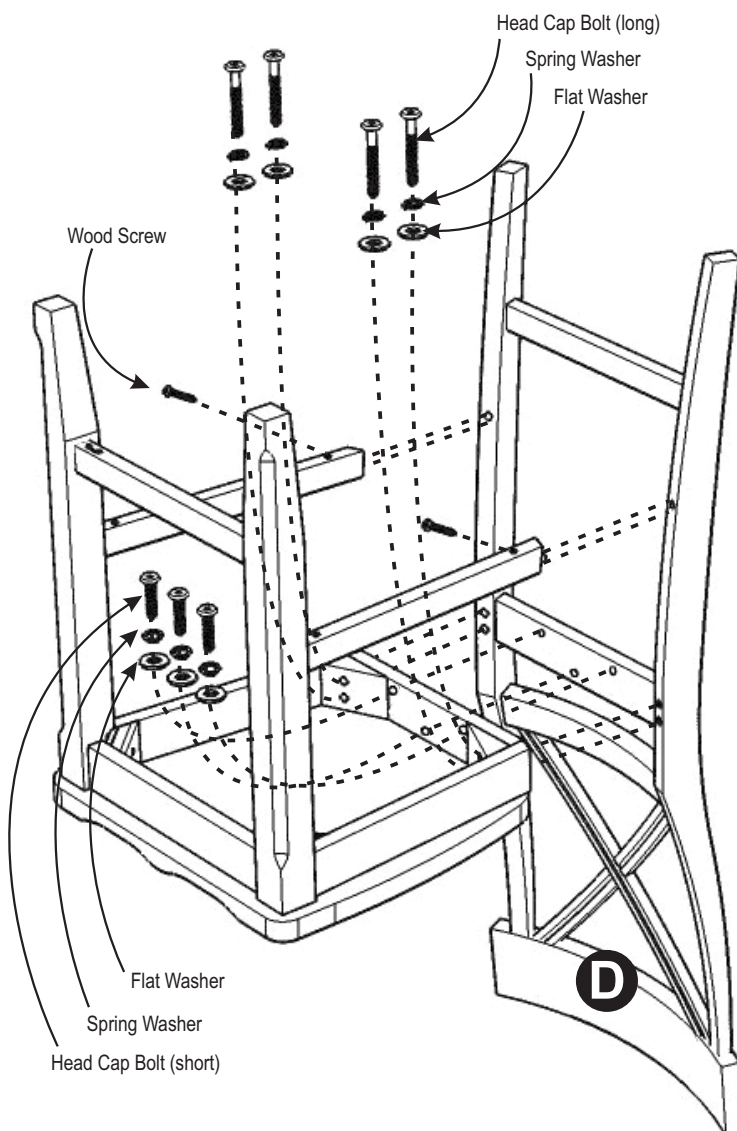
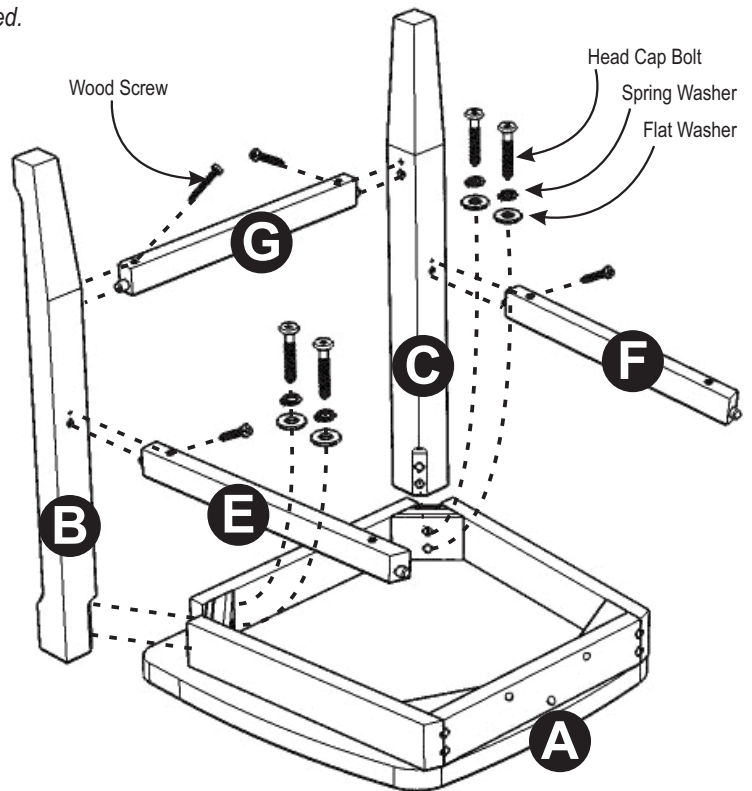


Figure 1

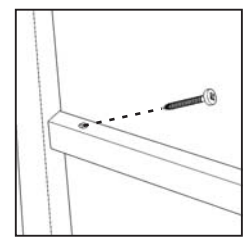


Figure 2

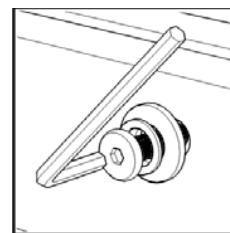


Figure 3

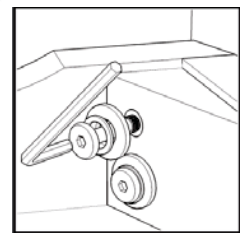


Figure 4

## STEP 2

Attach Back Frame (D) to unit with Flat Washers, Spring Washers, Head Cap Bolts (short), Head Cap Bolts (long) and Wood Screws. (See Figures 3 and 4)

Tighten all Head Cap Bolts.