


88 5318 95 Kitchen Cart

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home
Styles

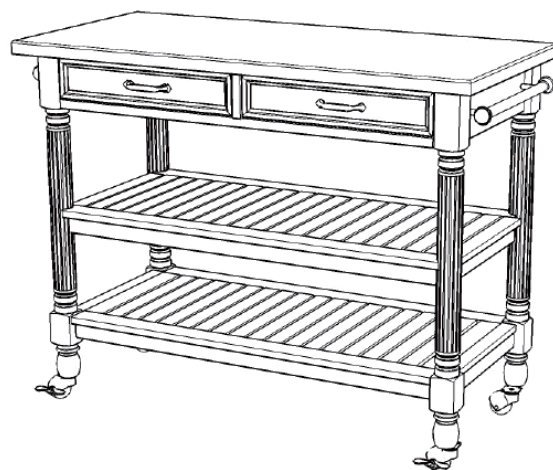


Part List




A.
Top
1 Pc.




E.
Front Rail
1 Pc.



D.
Divider
1 Pc.

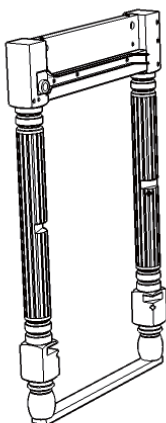


B.
Side Frame
1 Pc.

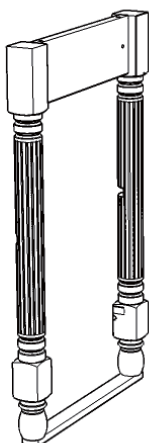


C.
Side Frame
1 Pc.



F.
Back Rail
1 Pc.

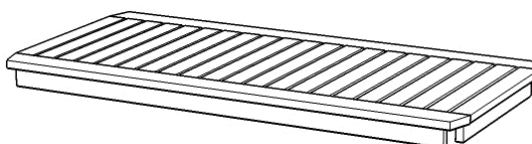


G.
Shelf
2 Pcs.



H.
Drawer
2 Pcs.

(Knock-Down Construction,
please refer to the last page of
instructions for steps to complete drawer assembly)

Hardware List

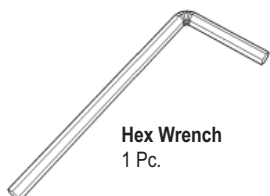

Hex Wrench
1 Pc.



Cam Lock
13 Pcs. (+2 extra)



**M4x24
Cam Lock Screw**
13 Pcs. (+1 extra)



**M3.5x13
Wood Screw (short)
for bottom drawer**
12 Pcs. (+1 extra)



**M3.5x25
Wood Screw (long)
for side drawer**
16 Pcs. (+1 extra)




**M4x25
Machine Screw**
4 Pcs.



Pull Handle
2 Pcs.




Small Hex Wrench
1 Pc.

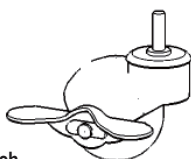

Caster
2 Locking
2 Non-Locking
4 Pcs.



**M6x25
Head Cap Bolt (short)**
5 Pcs. (+1 extra)



**M6x50
Head Cap Bolt (long)**
8 Pcs. (+1 extra)



Flat Washer
8 Pcs. (+1 extra)



Spring Washer
8 Pcs. (+1 extra)



Side Bar
2 Pcs.

Tools required for assembly : Phillips screwdriver


Home Styles Consumer Assistance : www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

IMPORTANT

- * Please keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Do not tighten up all the bolts until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.


STEP 1


Remove the Supports from Side Frames (B) and (C).

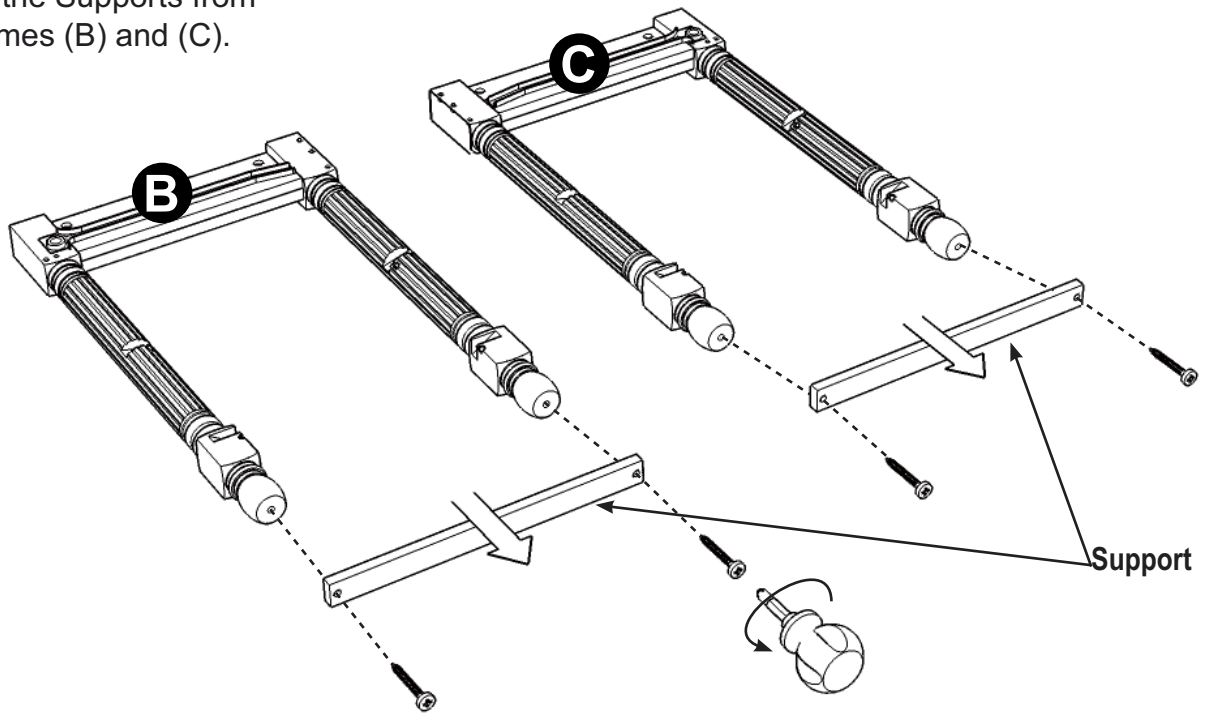

STEP 2

Insert Cam Lock Screws into pre-drilled holes of Top (A), Side Frames (B) and (C), and Back Rail (F).

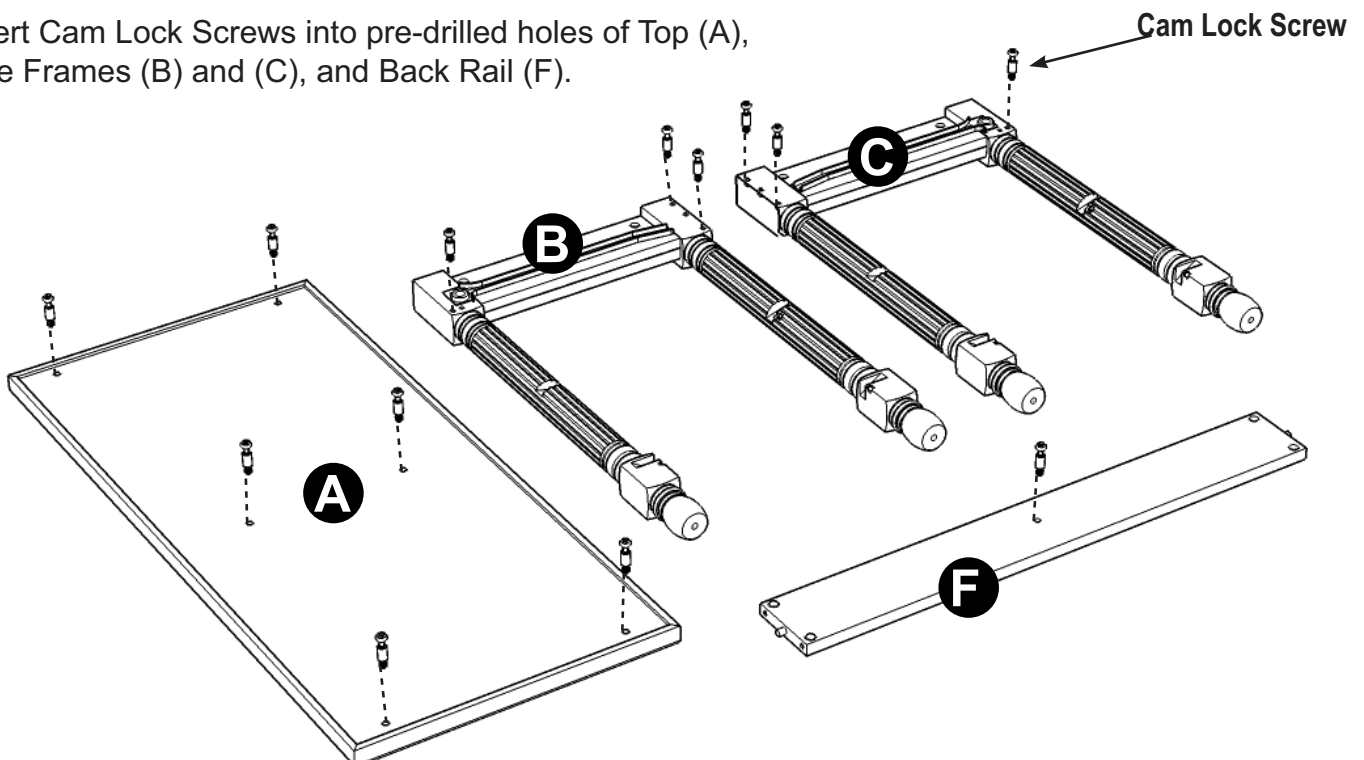

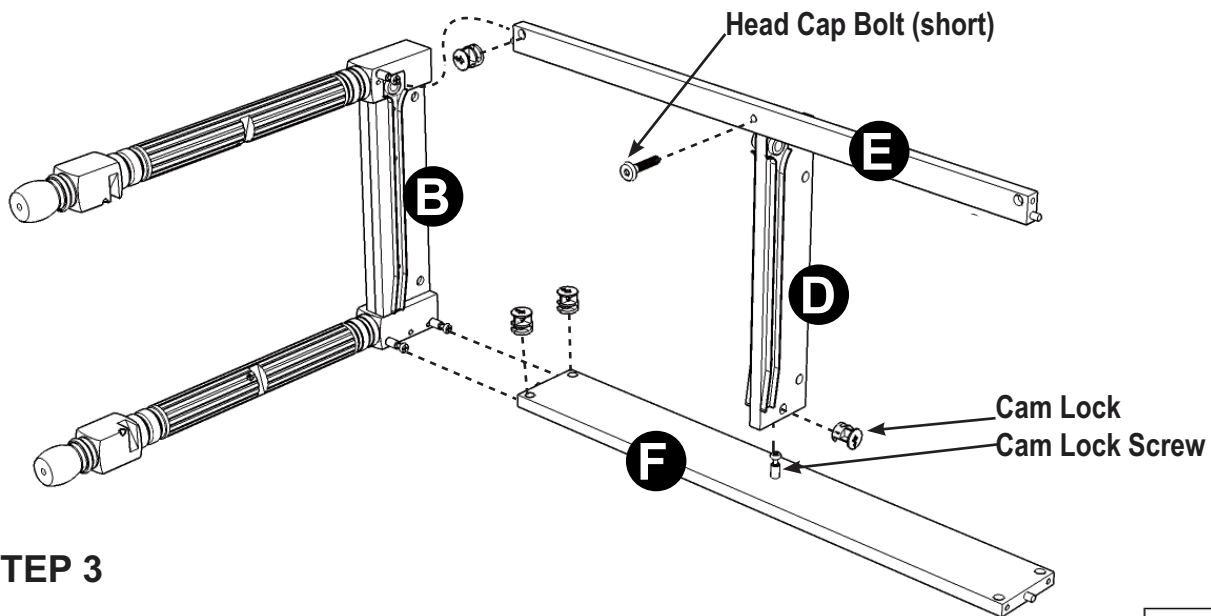

STEP 3

Assemble Front Rail (E), Divider (D) and Back Rail (F) with Cam Lock and Head Cap Bolt (short).

Attach unit to Side Frame (B) with Cam Locks.
(See Figure 1)

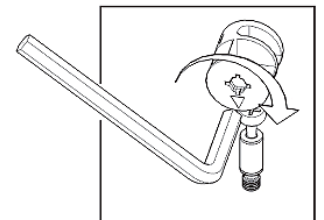


Figure 1





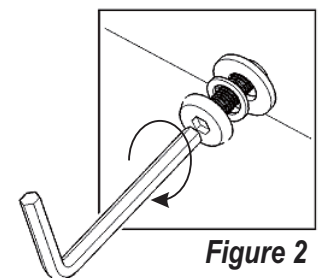


Figure 2

STEP 4

Attach Shelves (G) to unit with Flat Washers, Spring Washers and Head Cap Bolts (long).
(See Figure 2)

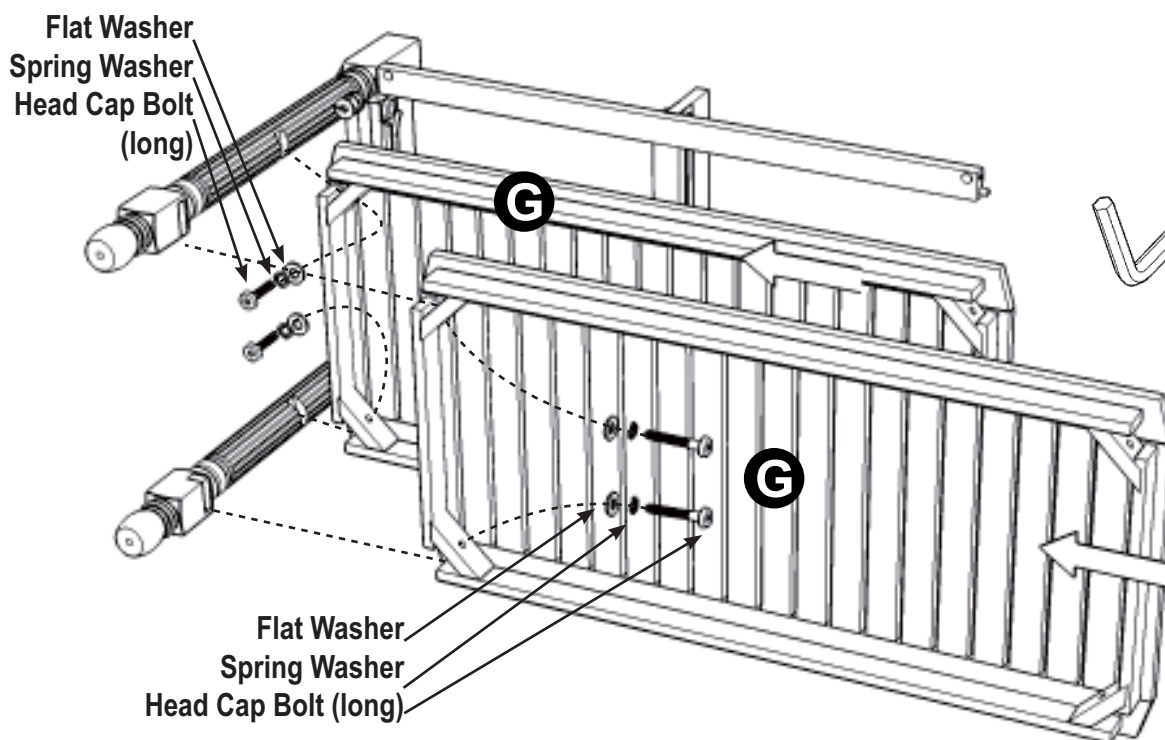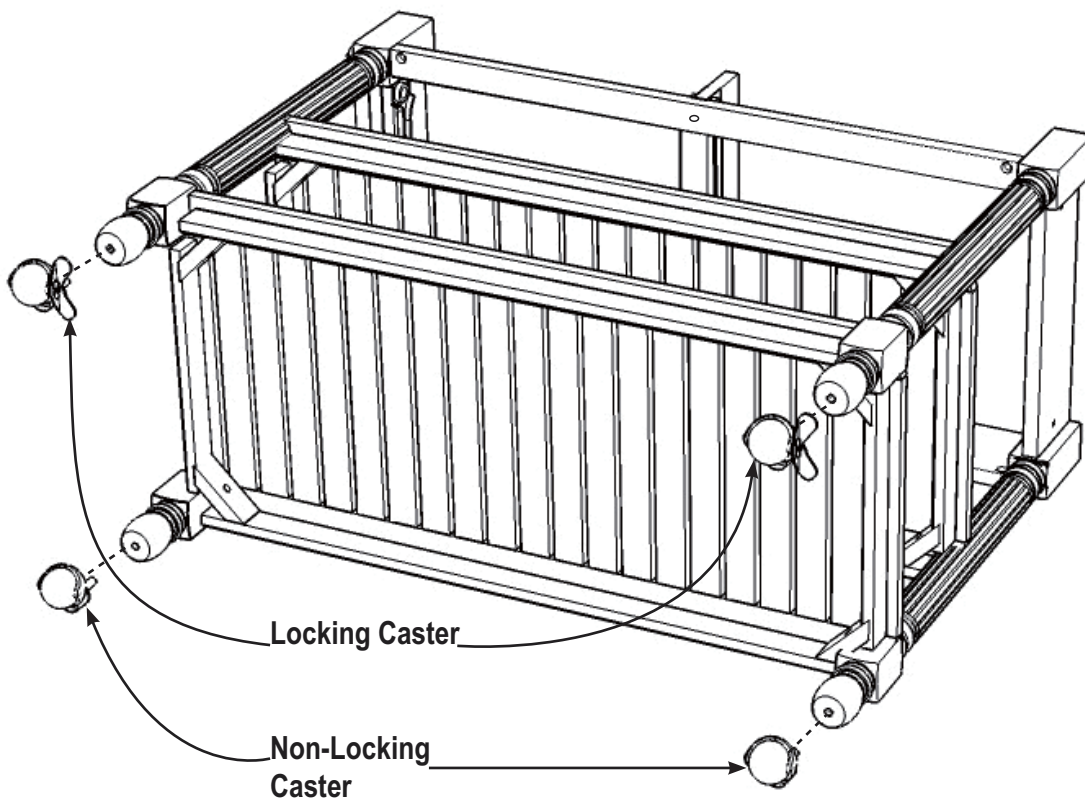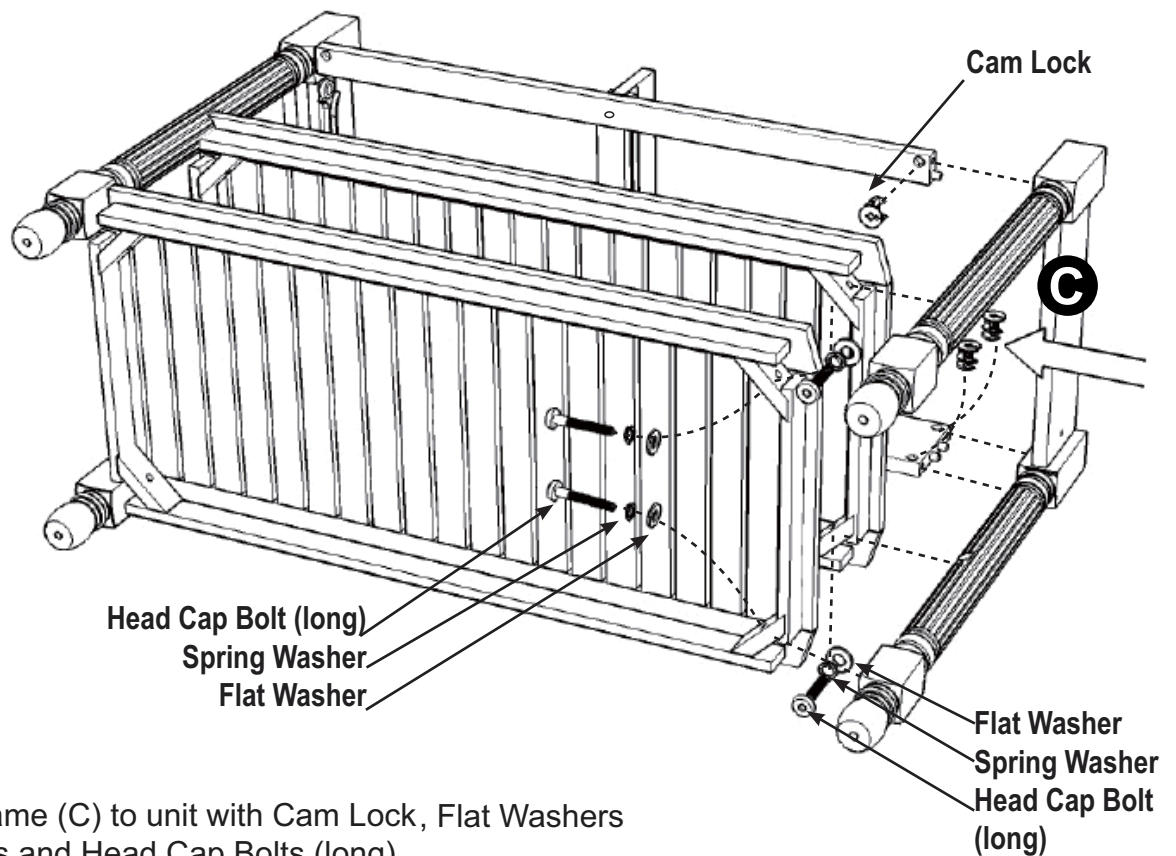


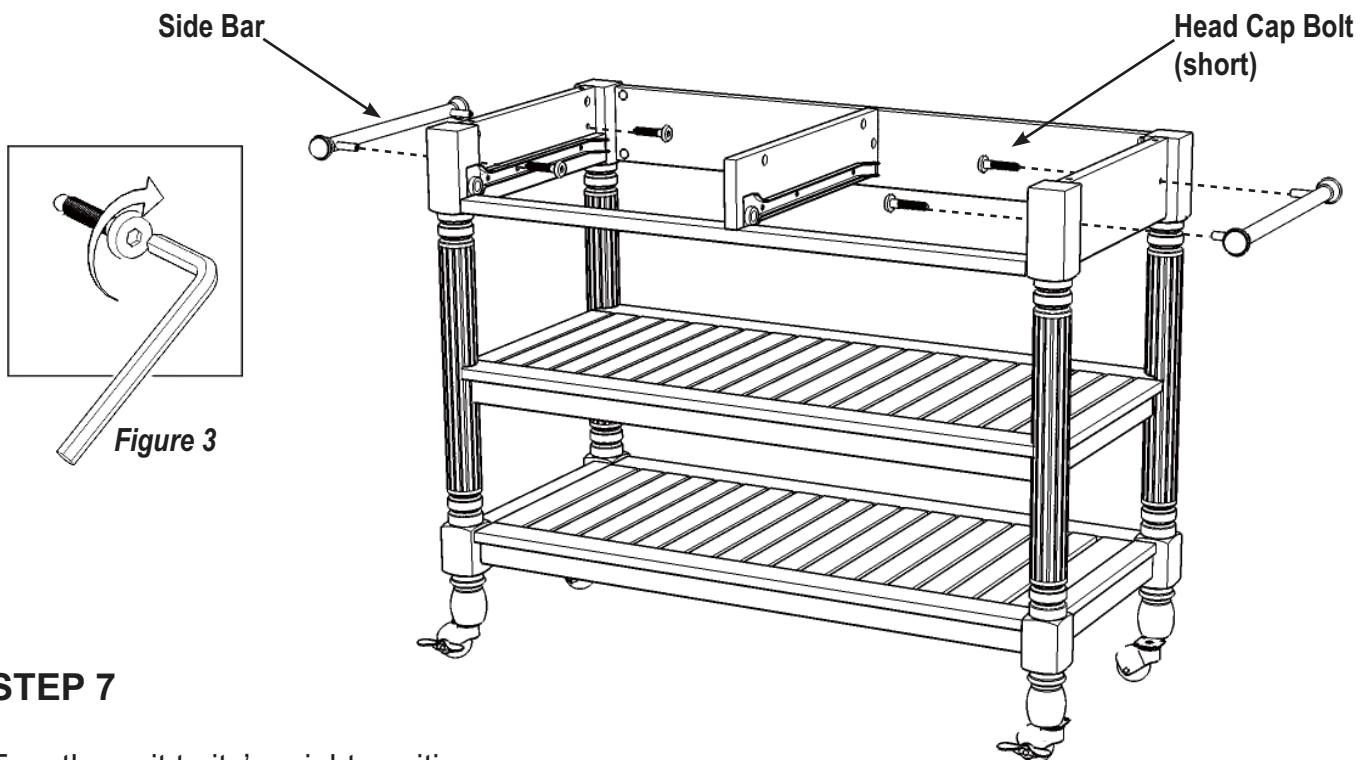

STEP 7

Turn the unit to its' upright position.

Attach Side Bars to unit with Head Cap Bolts (short).
(See Figure 3)

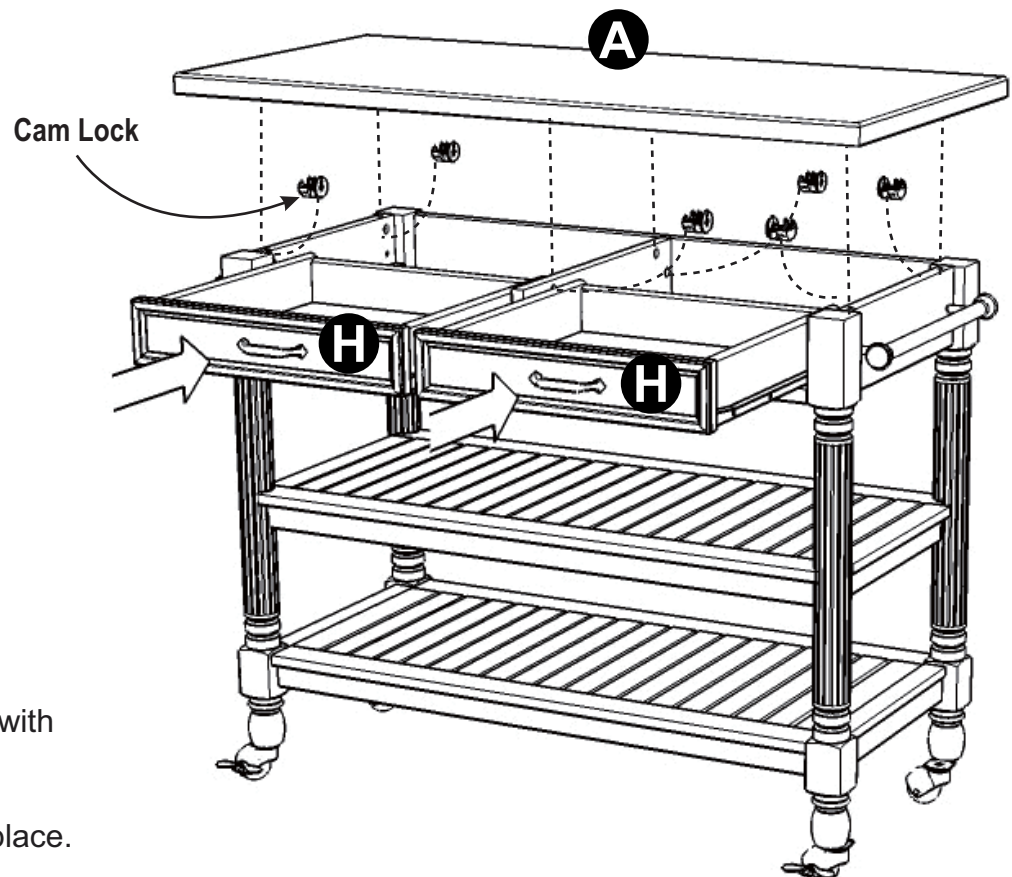


STEP 8

Place Top (A) onto unit with
Cam Locks.

Slide Drawers (H) into place.

Drawer (H)

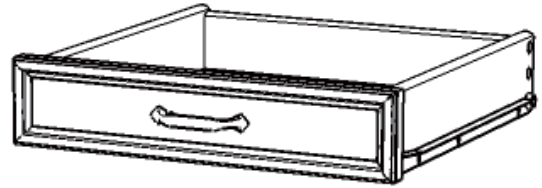

STEP 1

Attach H1 to H3 and H4, using a Phillips screwdriver and long wood screws (4X), tighten halfway.

Attach H2 to H3 and H4 using long wood screws (4X), tighten halfway. (See Figure 1)

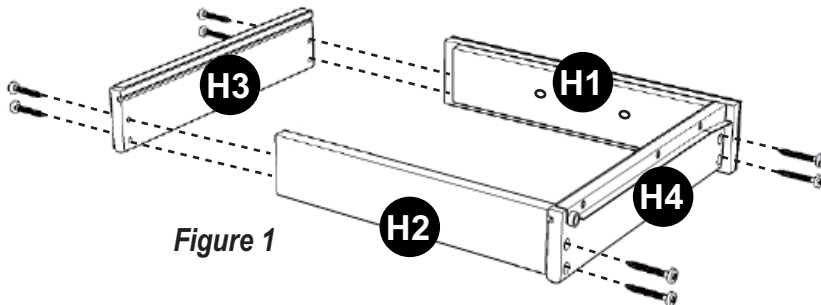


Figure 1

STEP 2

Slide H5 into the grooves in H3 and H4.

Be sure to push H5 all the way forward so it meets H1 (See Figure 2)

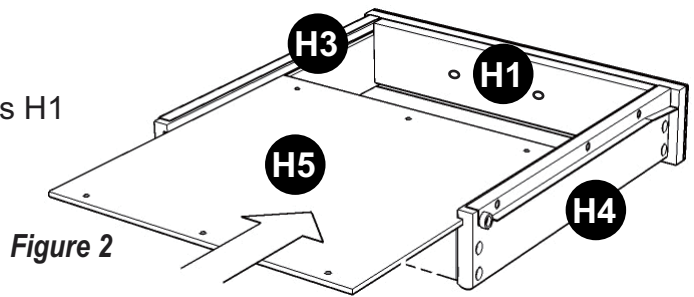


Figure 2

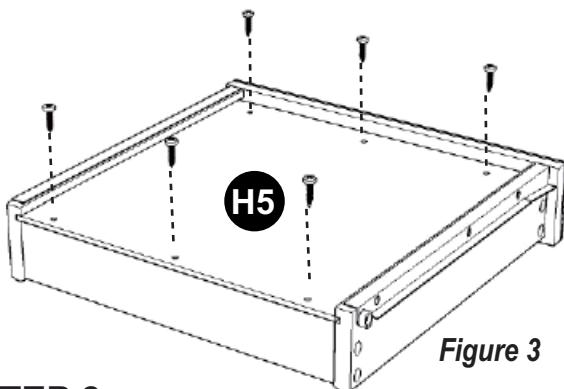


Figure 3

STEP 3

Insert short wood screw (6X) into pre-drilled holes in H5 and tighten. (See Figure 3)

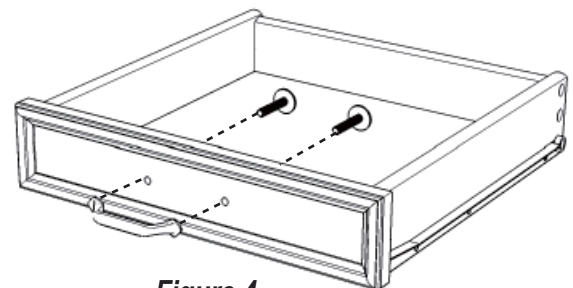


Figure 4

STEP 4

Assemble Pull Handle with machine screws. (See Figure 4)

Tighten all screws used in drawer assembly.


Part List



H1.
Front Part
2 Pcs.



H2.
Back Part
2 Pcs.

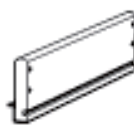

H3.
Side Part
2 Pcs.



H4.
Side Part
2 Pcs.



H5.
Bottom Part
2 Pcs.